

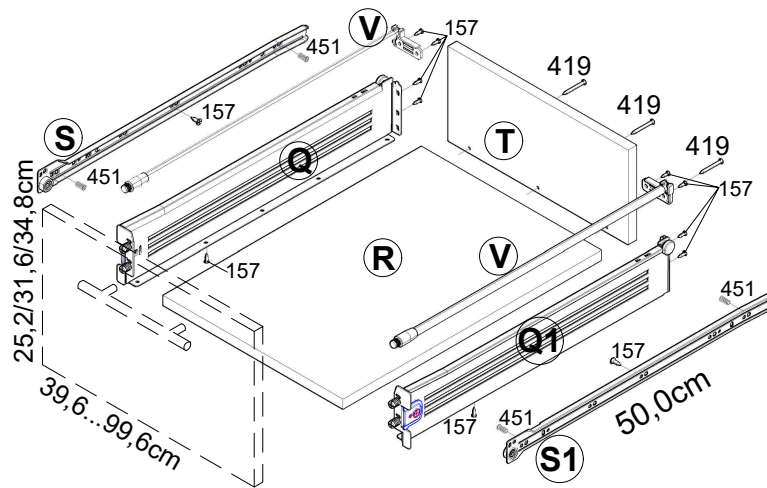
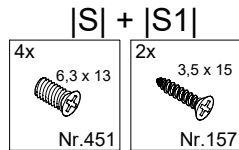
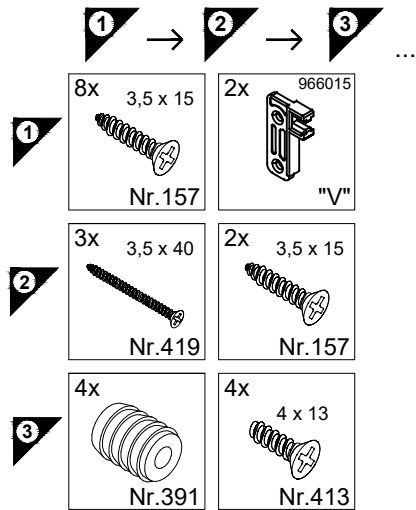
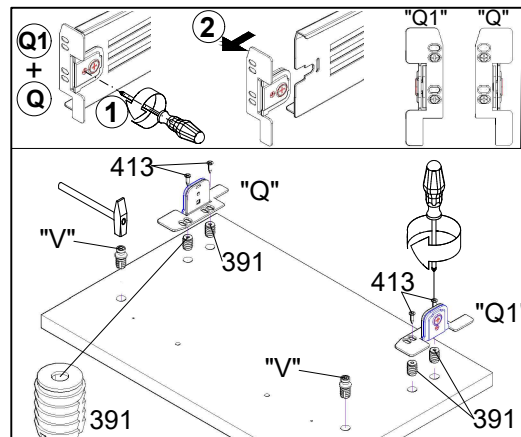
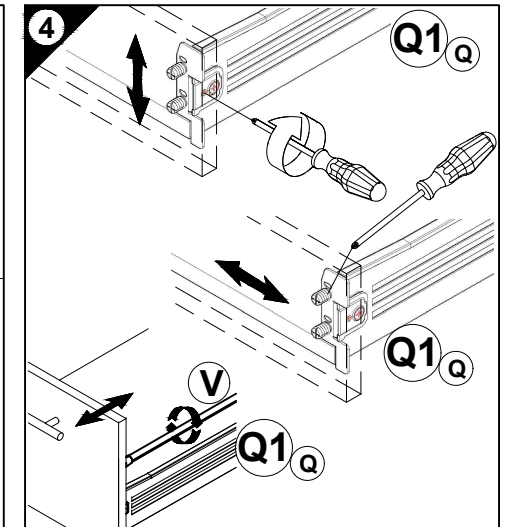
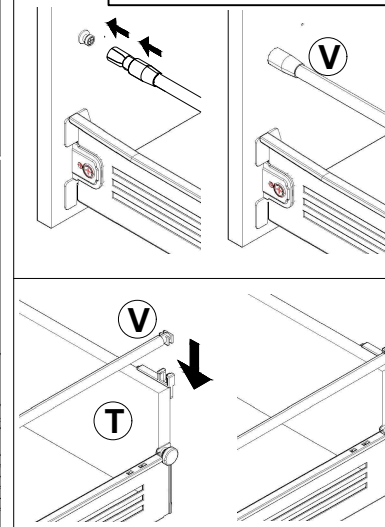
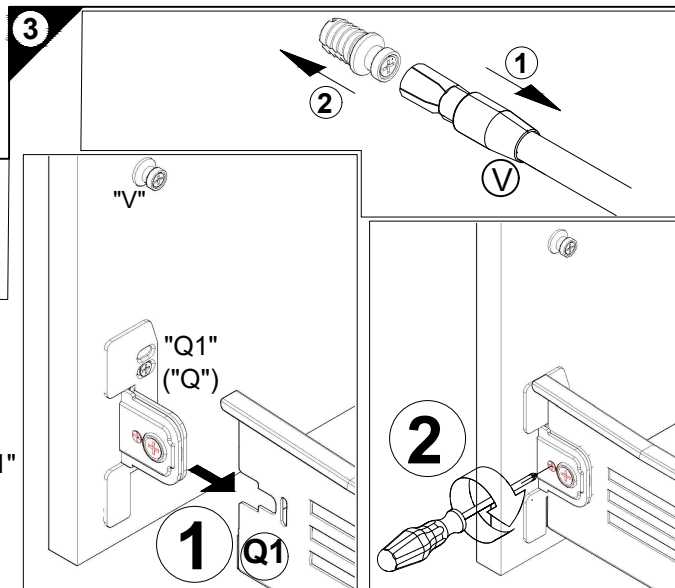


Montageanleitung

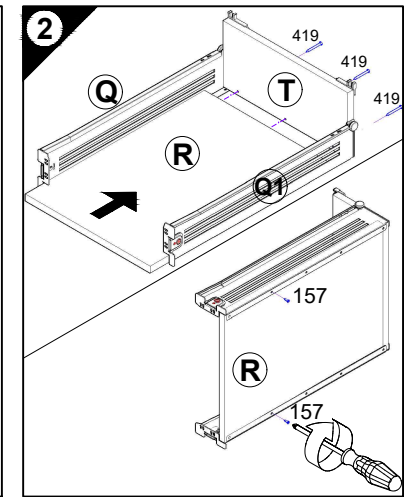

AZ40-8E... AZ100-8E (AZ40-H25... AZ100-H25)

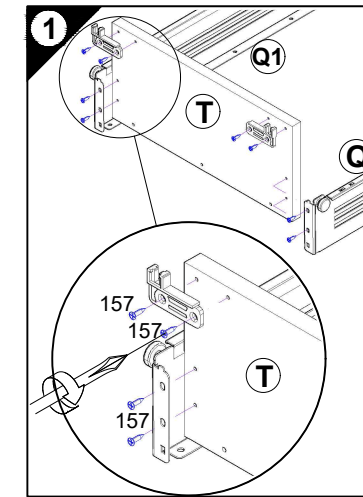

Ersatzteile/Spare parts/pièces de rechange/Reserveonderdelen/Piezas de recambio/Ricambi/Запасные части/Części zamienne/półtaktrészek/Náhradní části/Nadomestni deli/varaosat/reservdelar/náhradné diely/Utilizați piese de schimb/Yedek parçalar

40cm	AZ40-8E	Q E966111	Q1 E966112	R E941952	S E966013	S1 E966014	T E941846	V E966015
50cm	AZ50-8E	Q E966111	Q1 E966112	R E941953	S E966013	S1 E966014	T E941847	V E966015
60cm	AZ60-8E	Q E966111	Q1 E966112	R E941954	S E966013	S1 E966014	T E941848	V E966015
90cm	AZ90-8E	Q E966111	Q1 E966112	R E941955	S E966013	S1 E966014	T E941849	V E966015
100cm	AZ100-8E	Q E966111	Q1 E966112	R E941956	S E966013	S1 E966014	T E941850	V E966015