


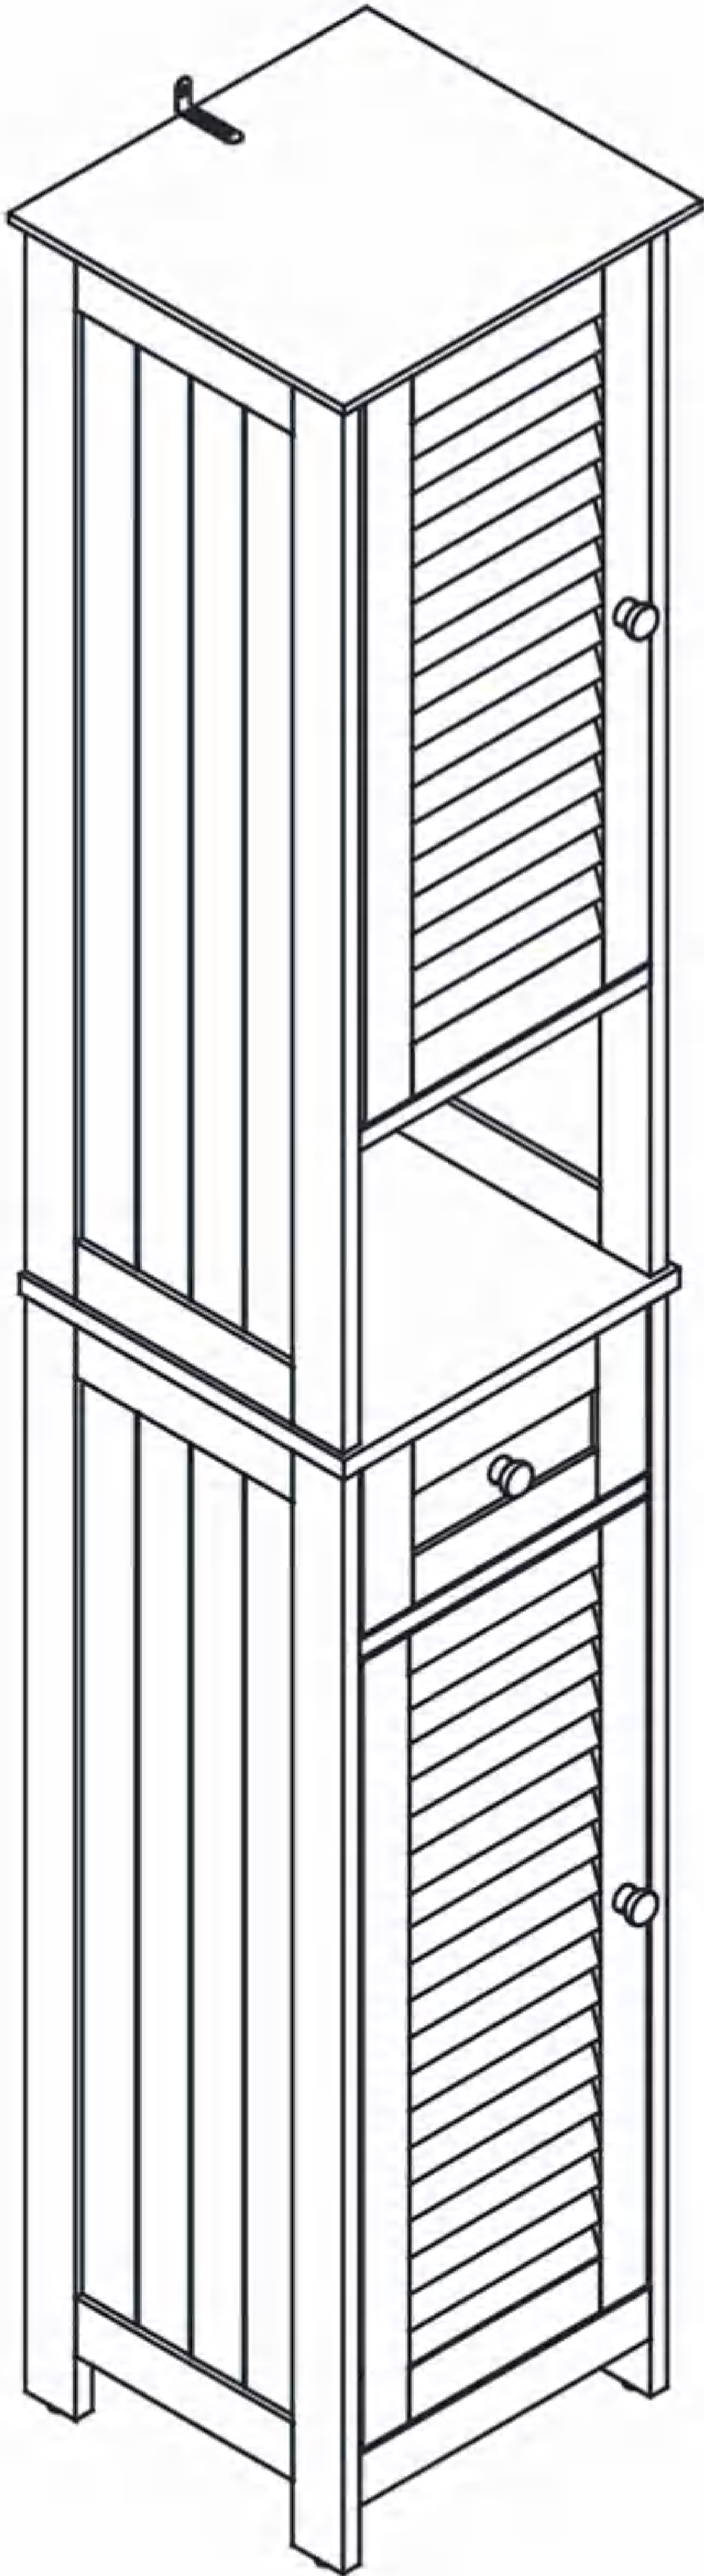


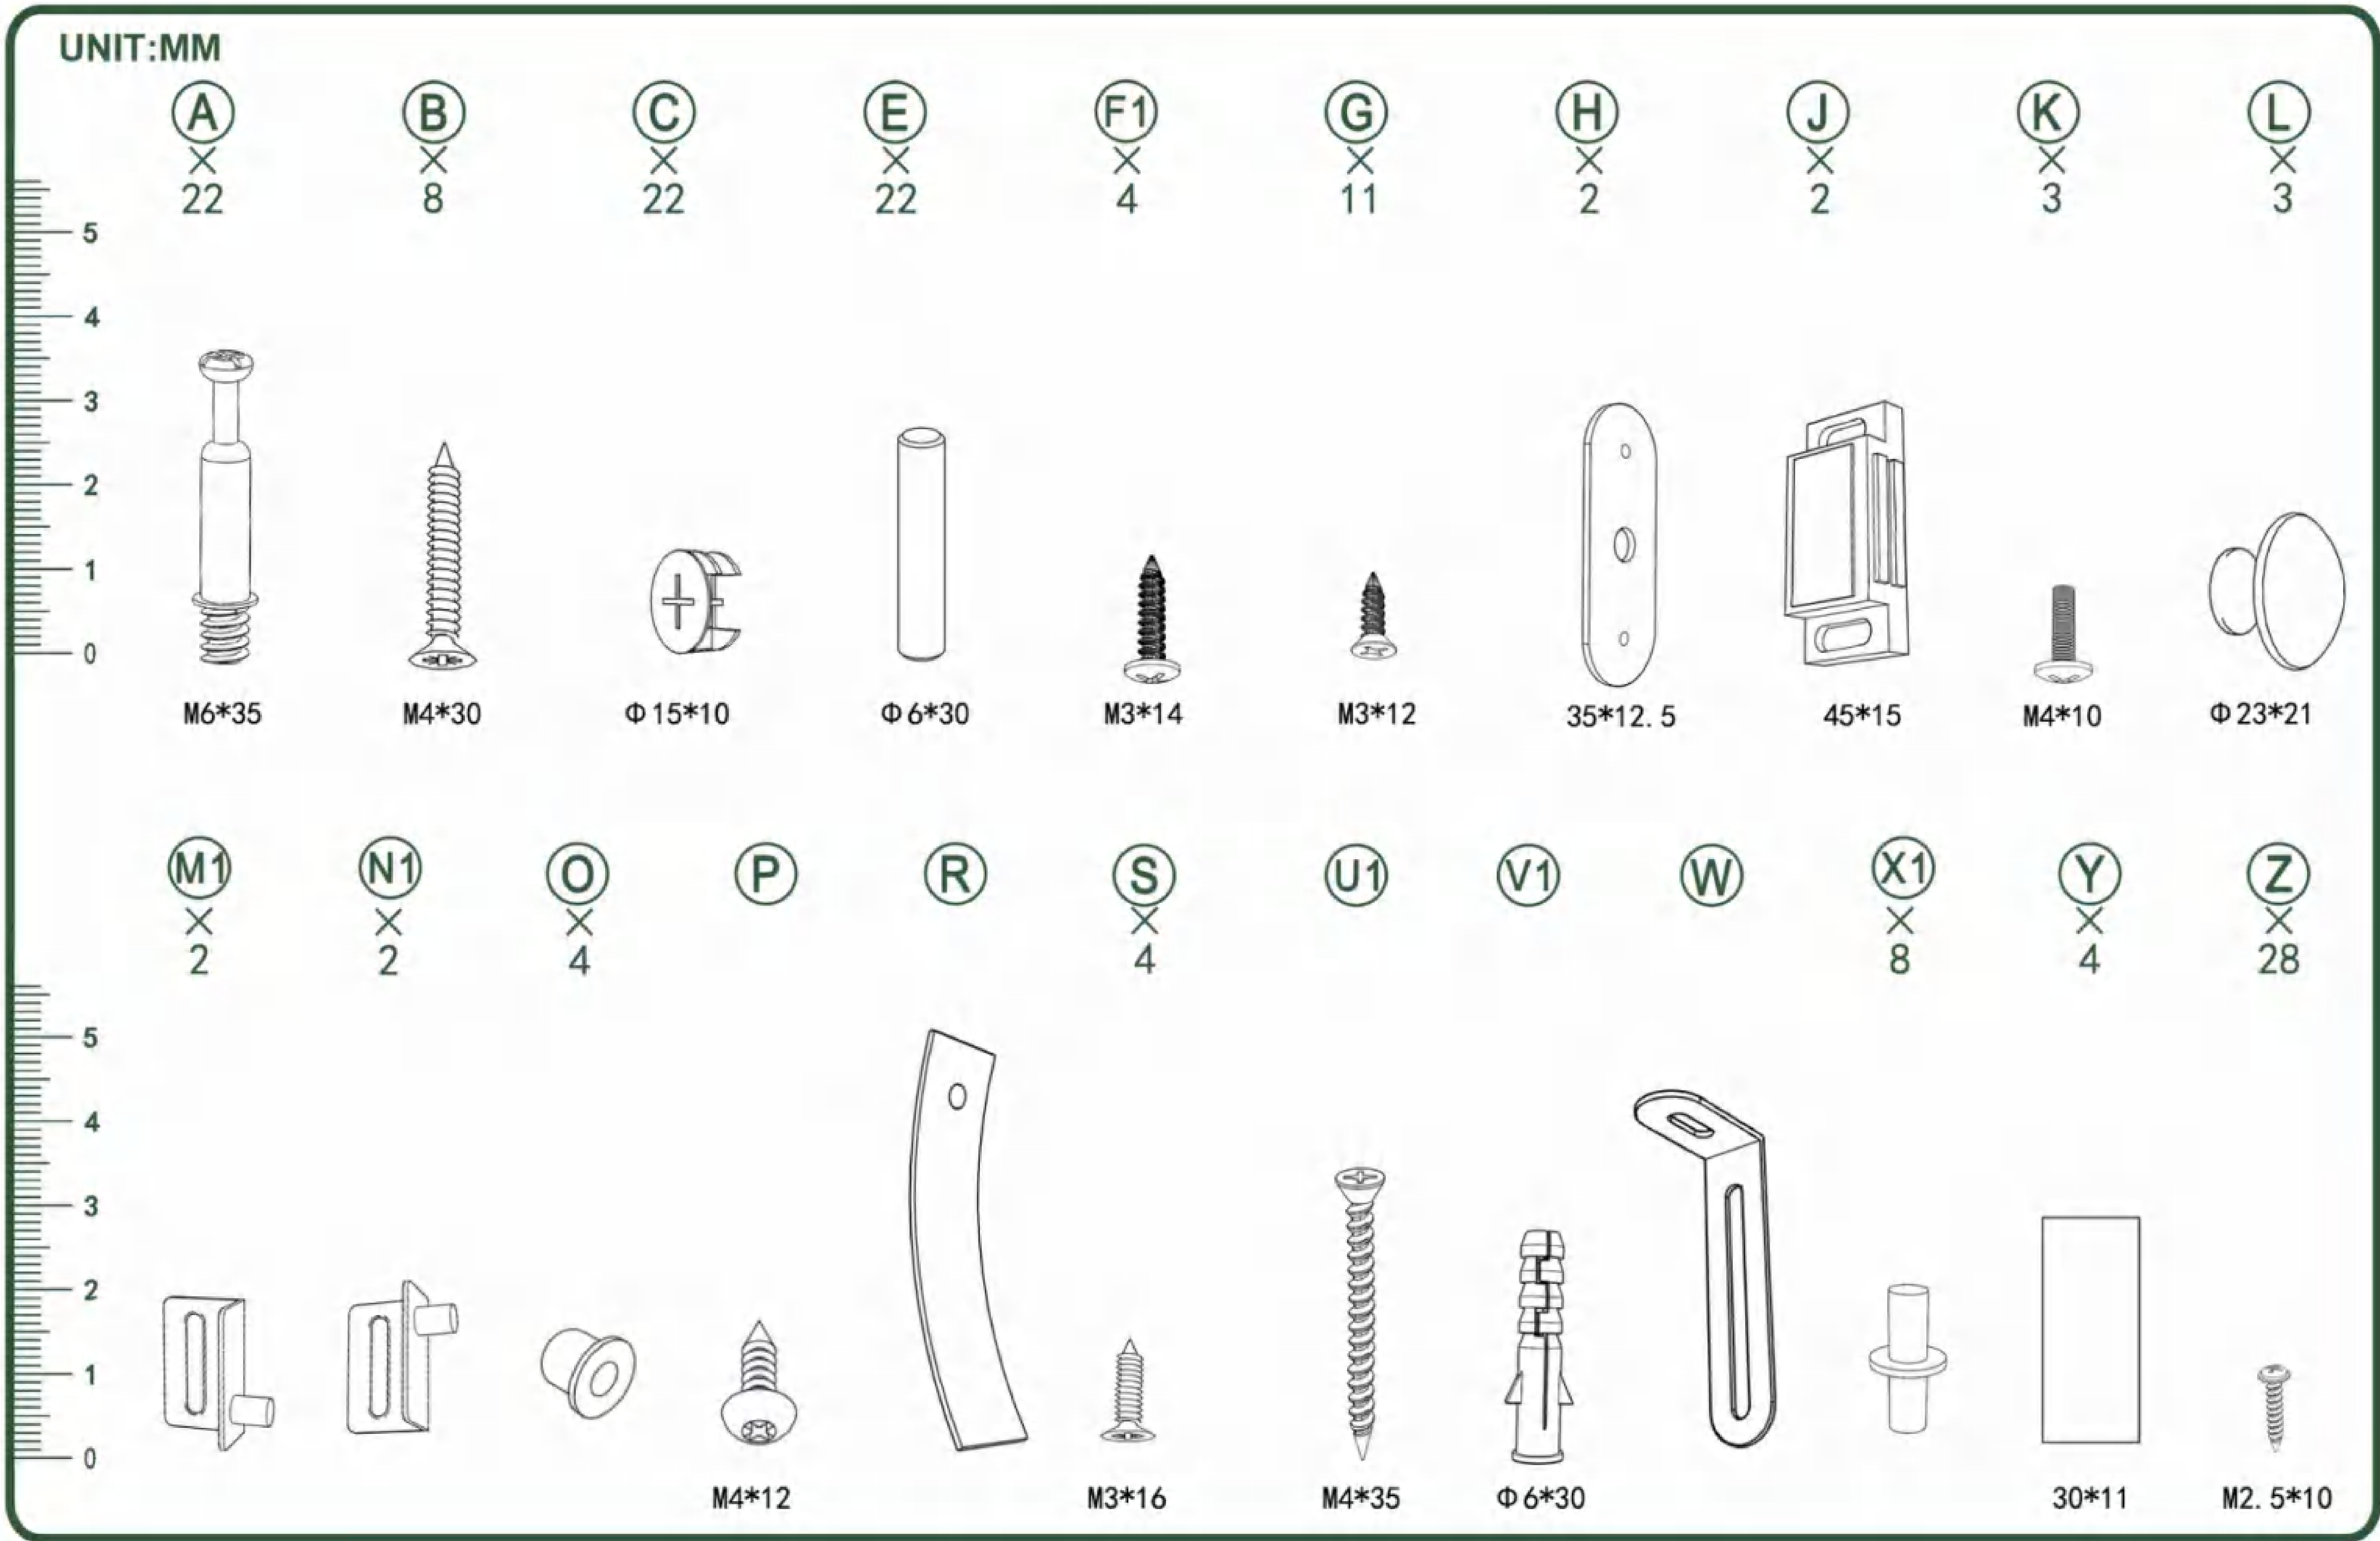


FRG236


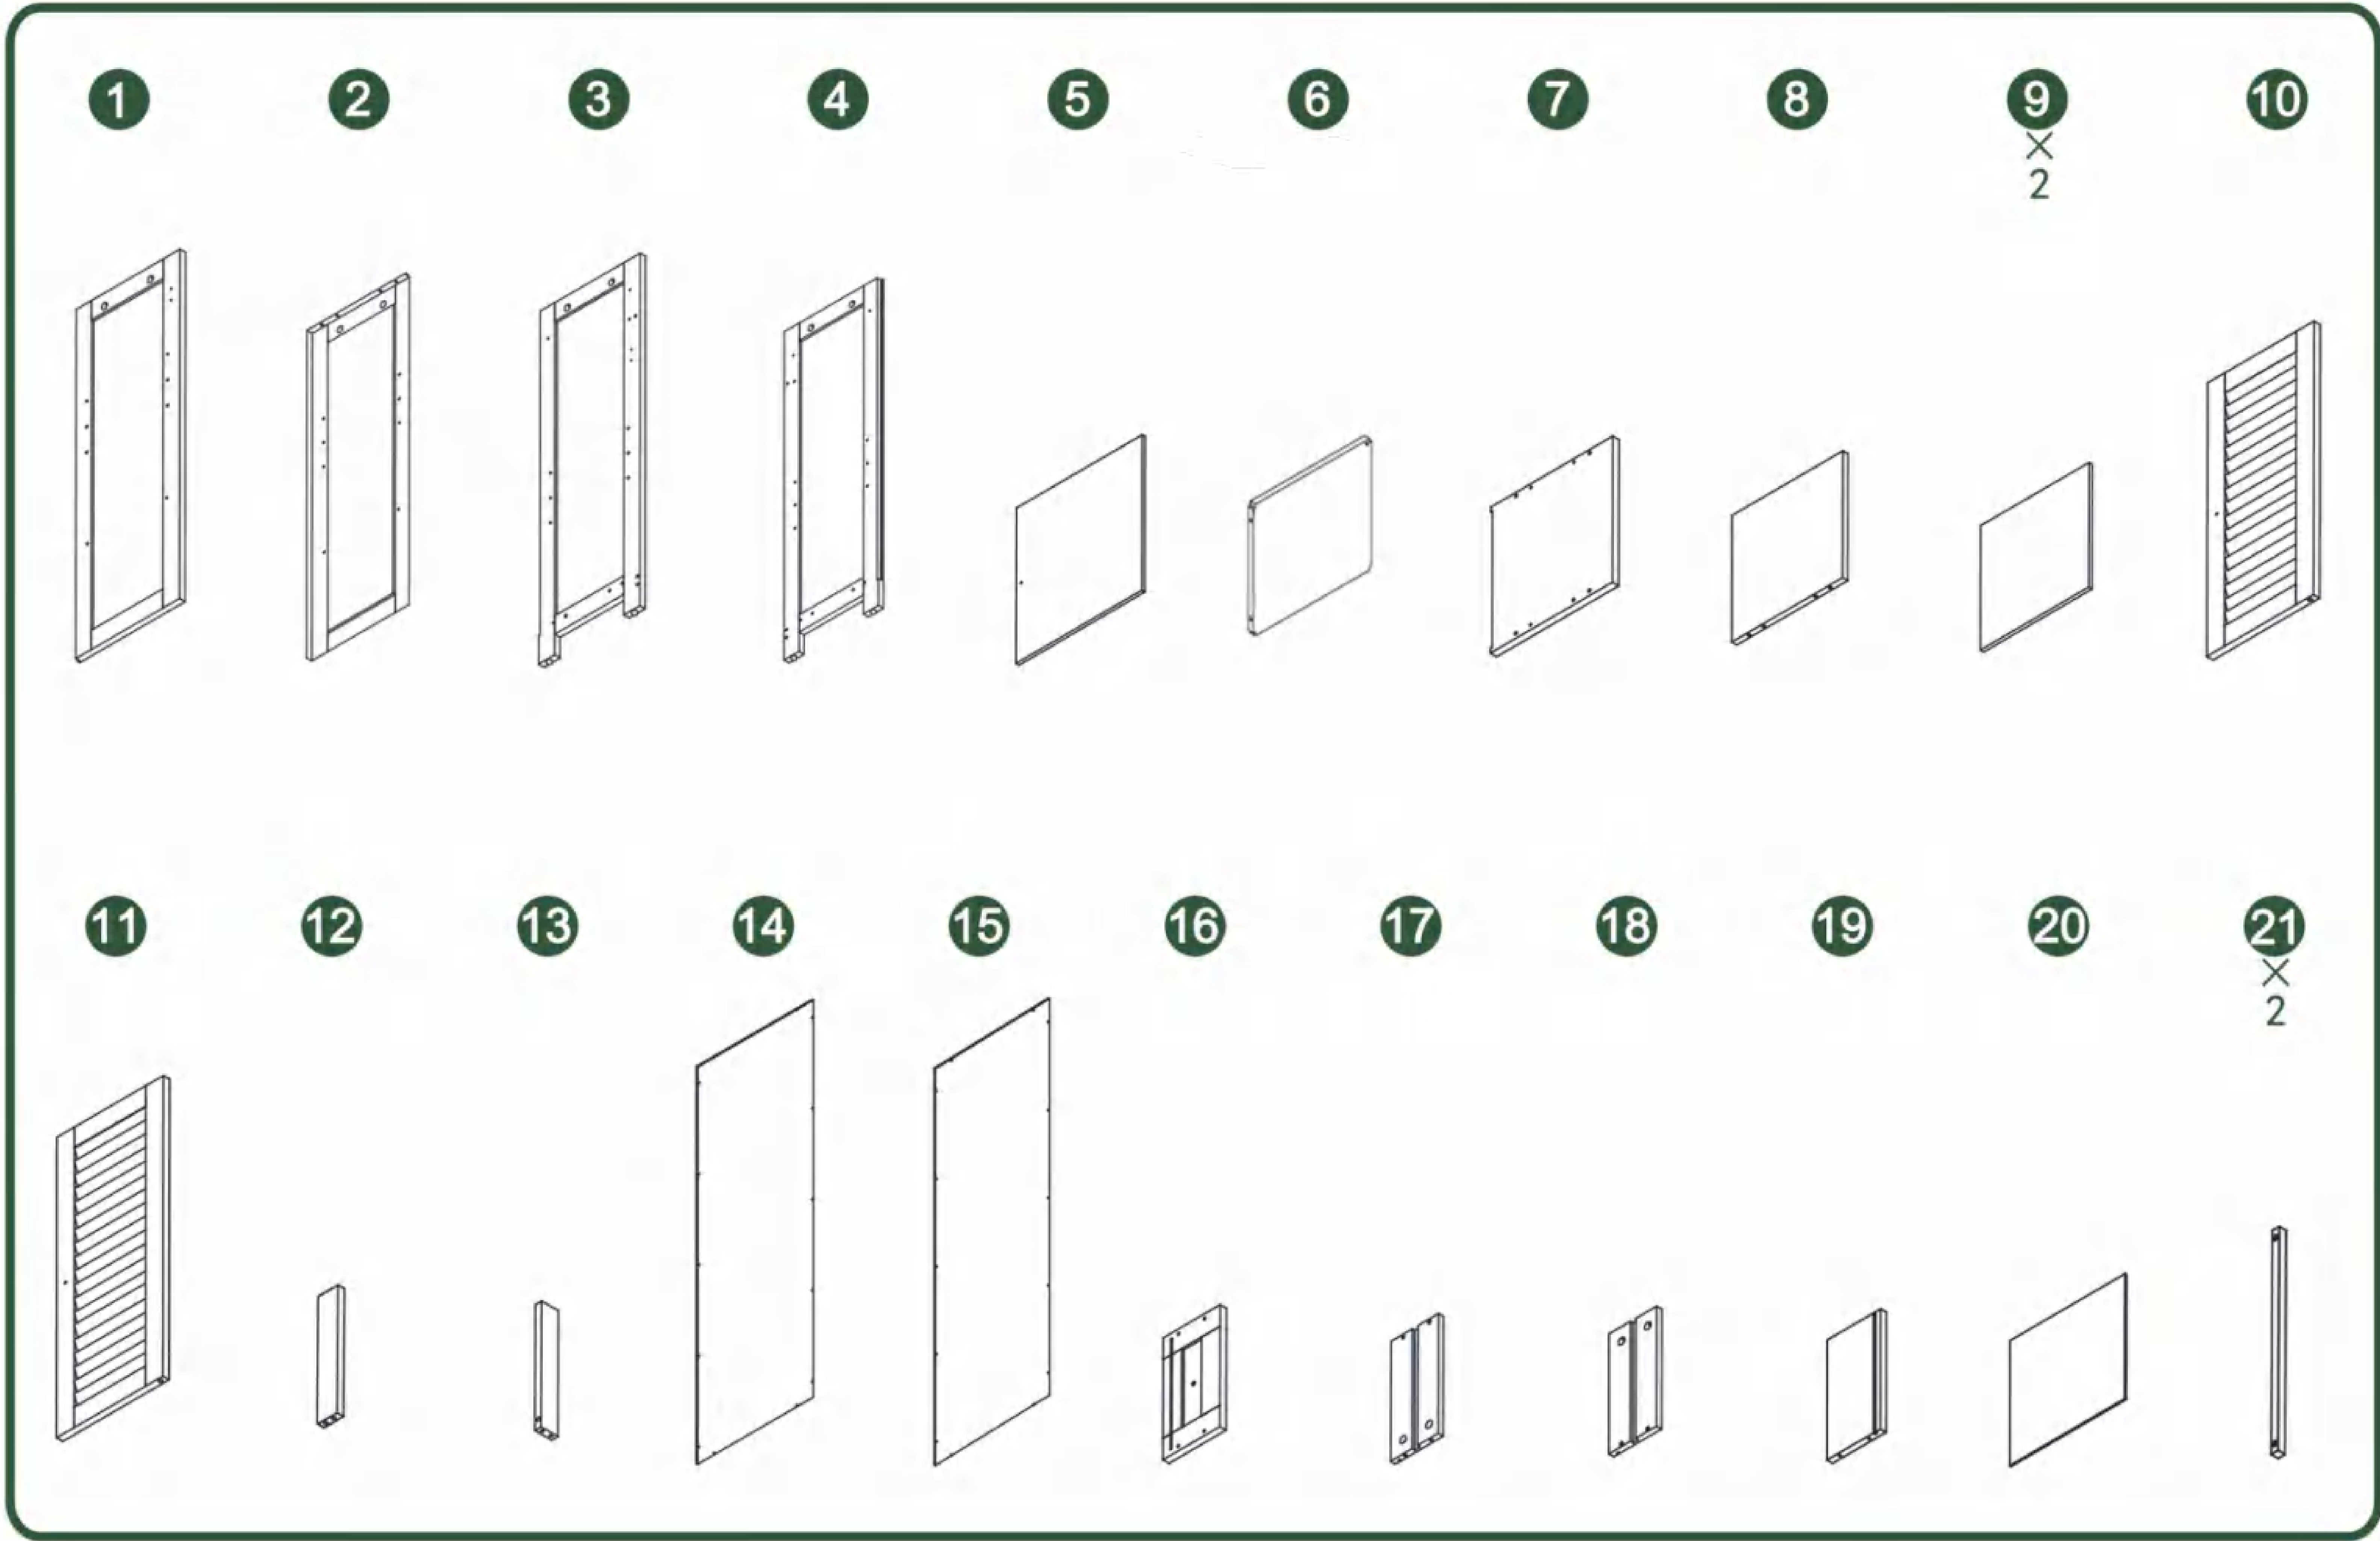


TOOLS:

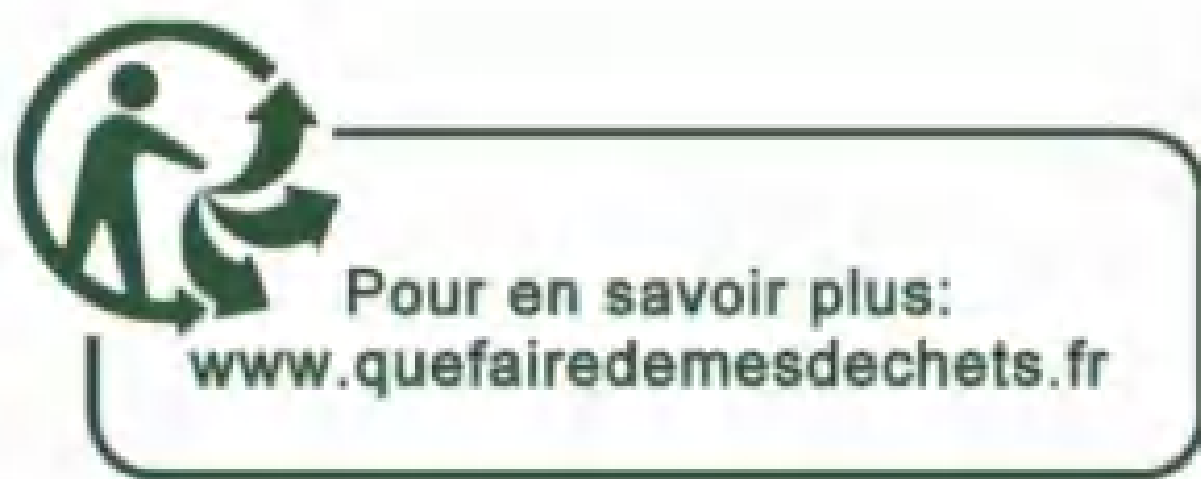


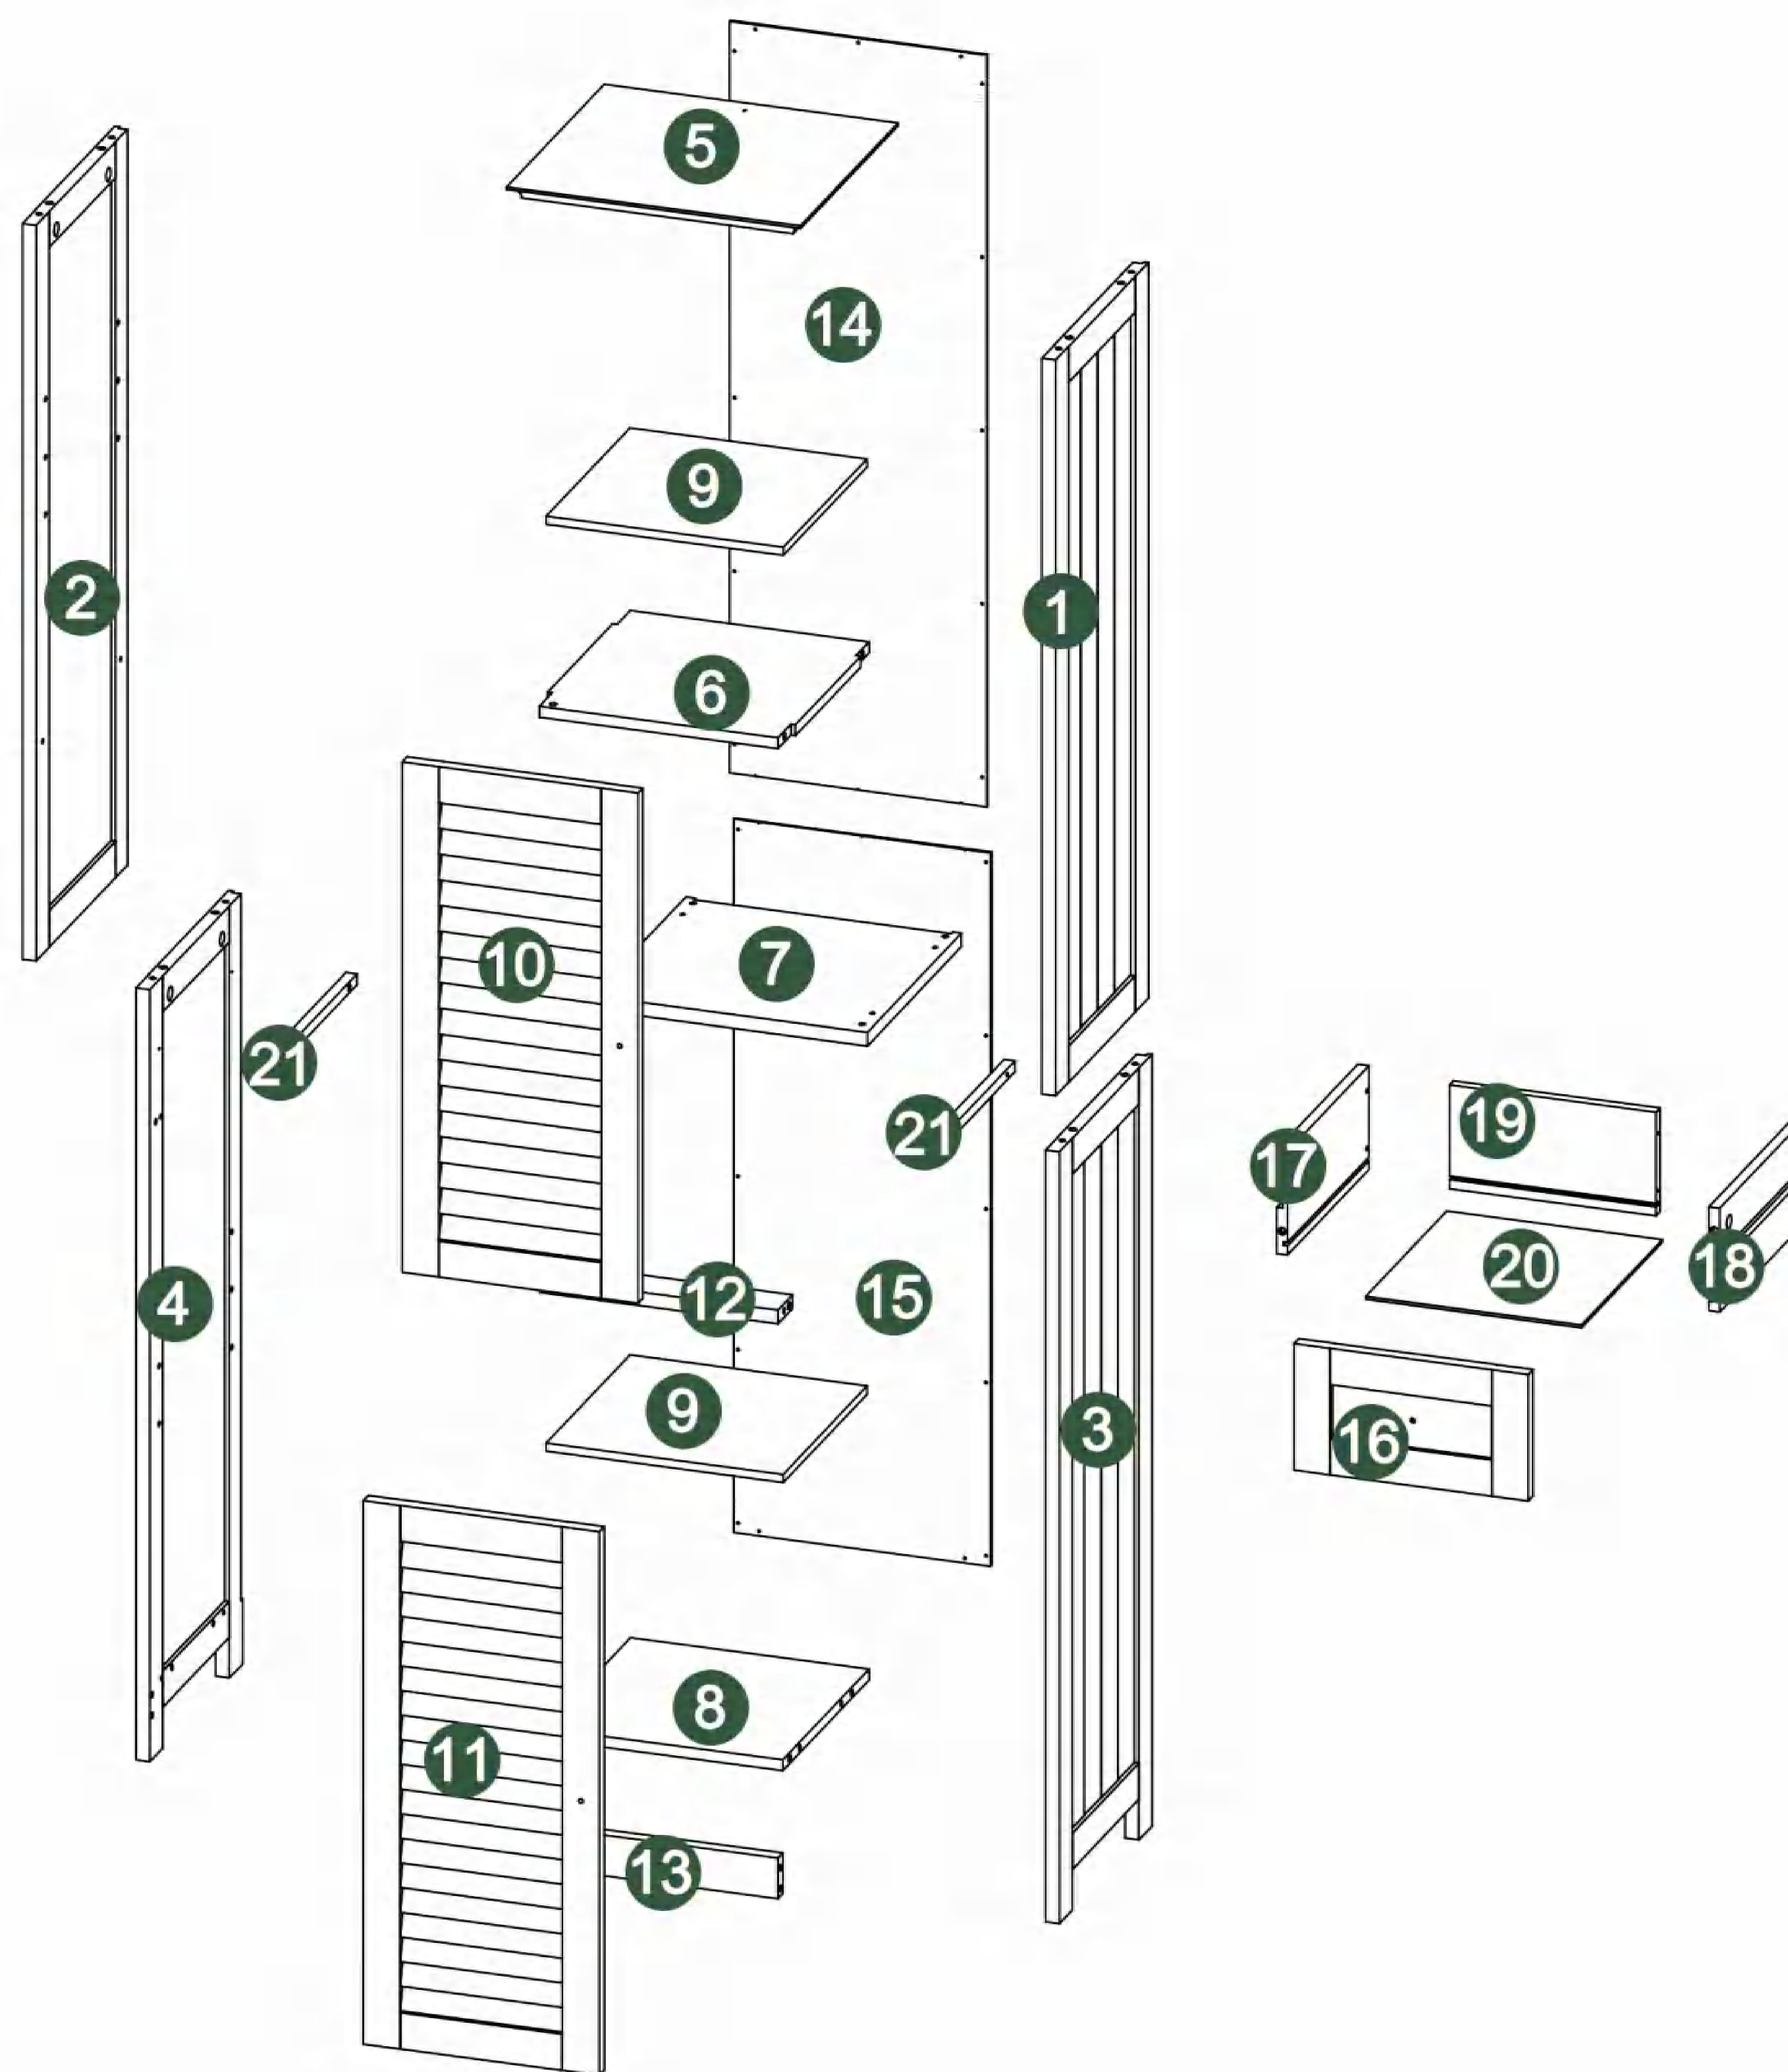


BOLT INSTALLATION AS BELOW:

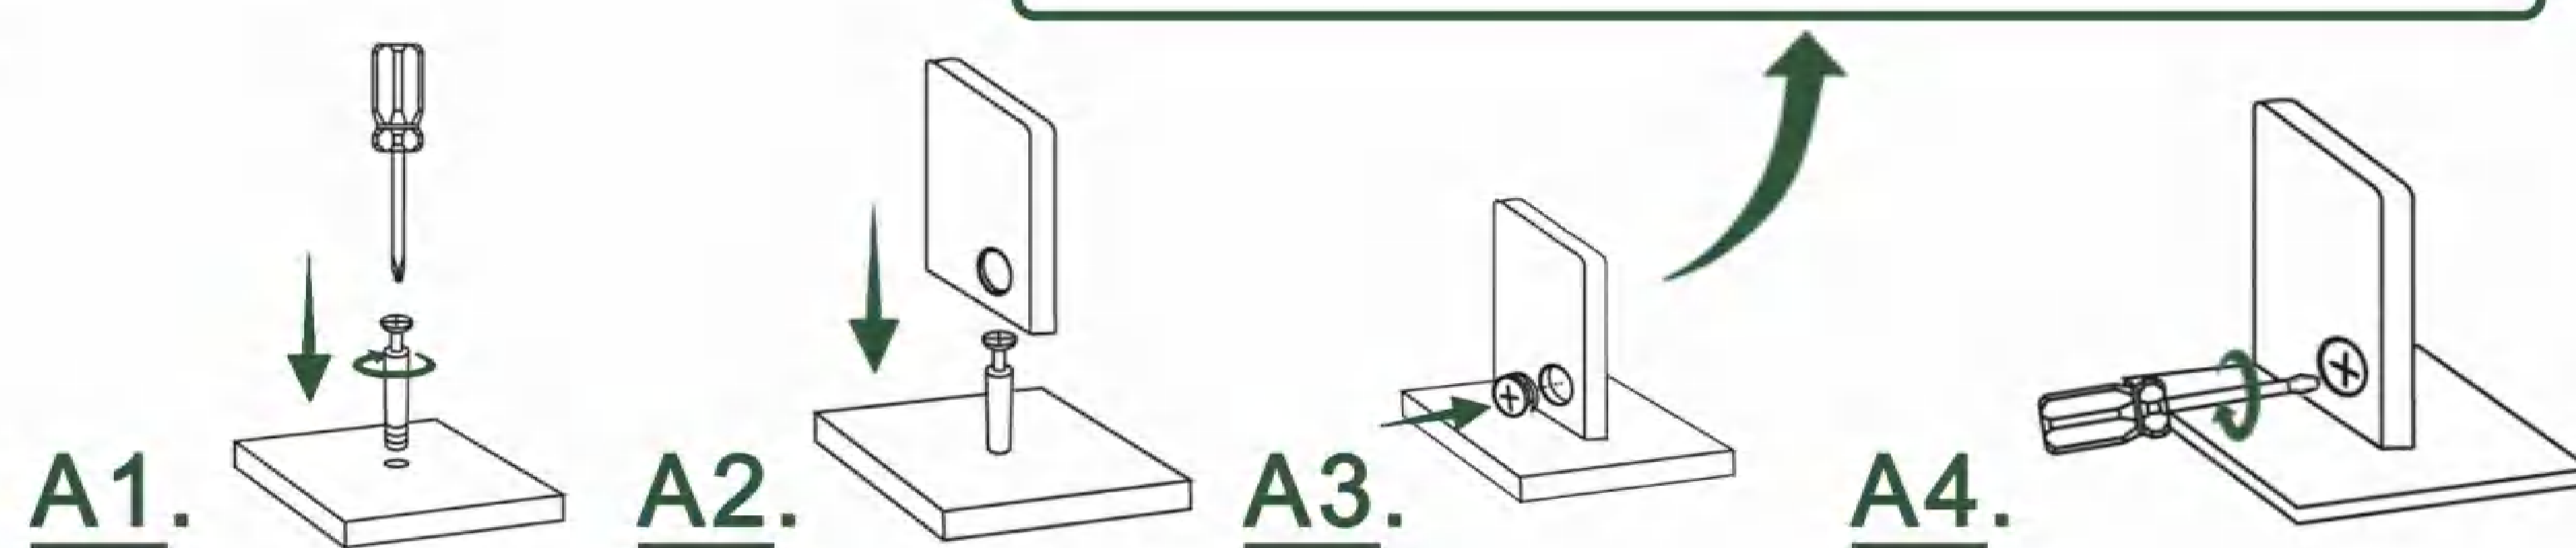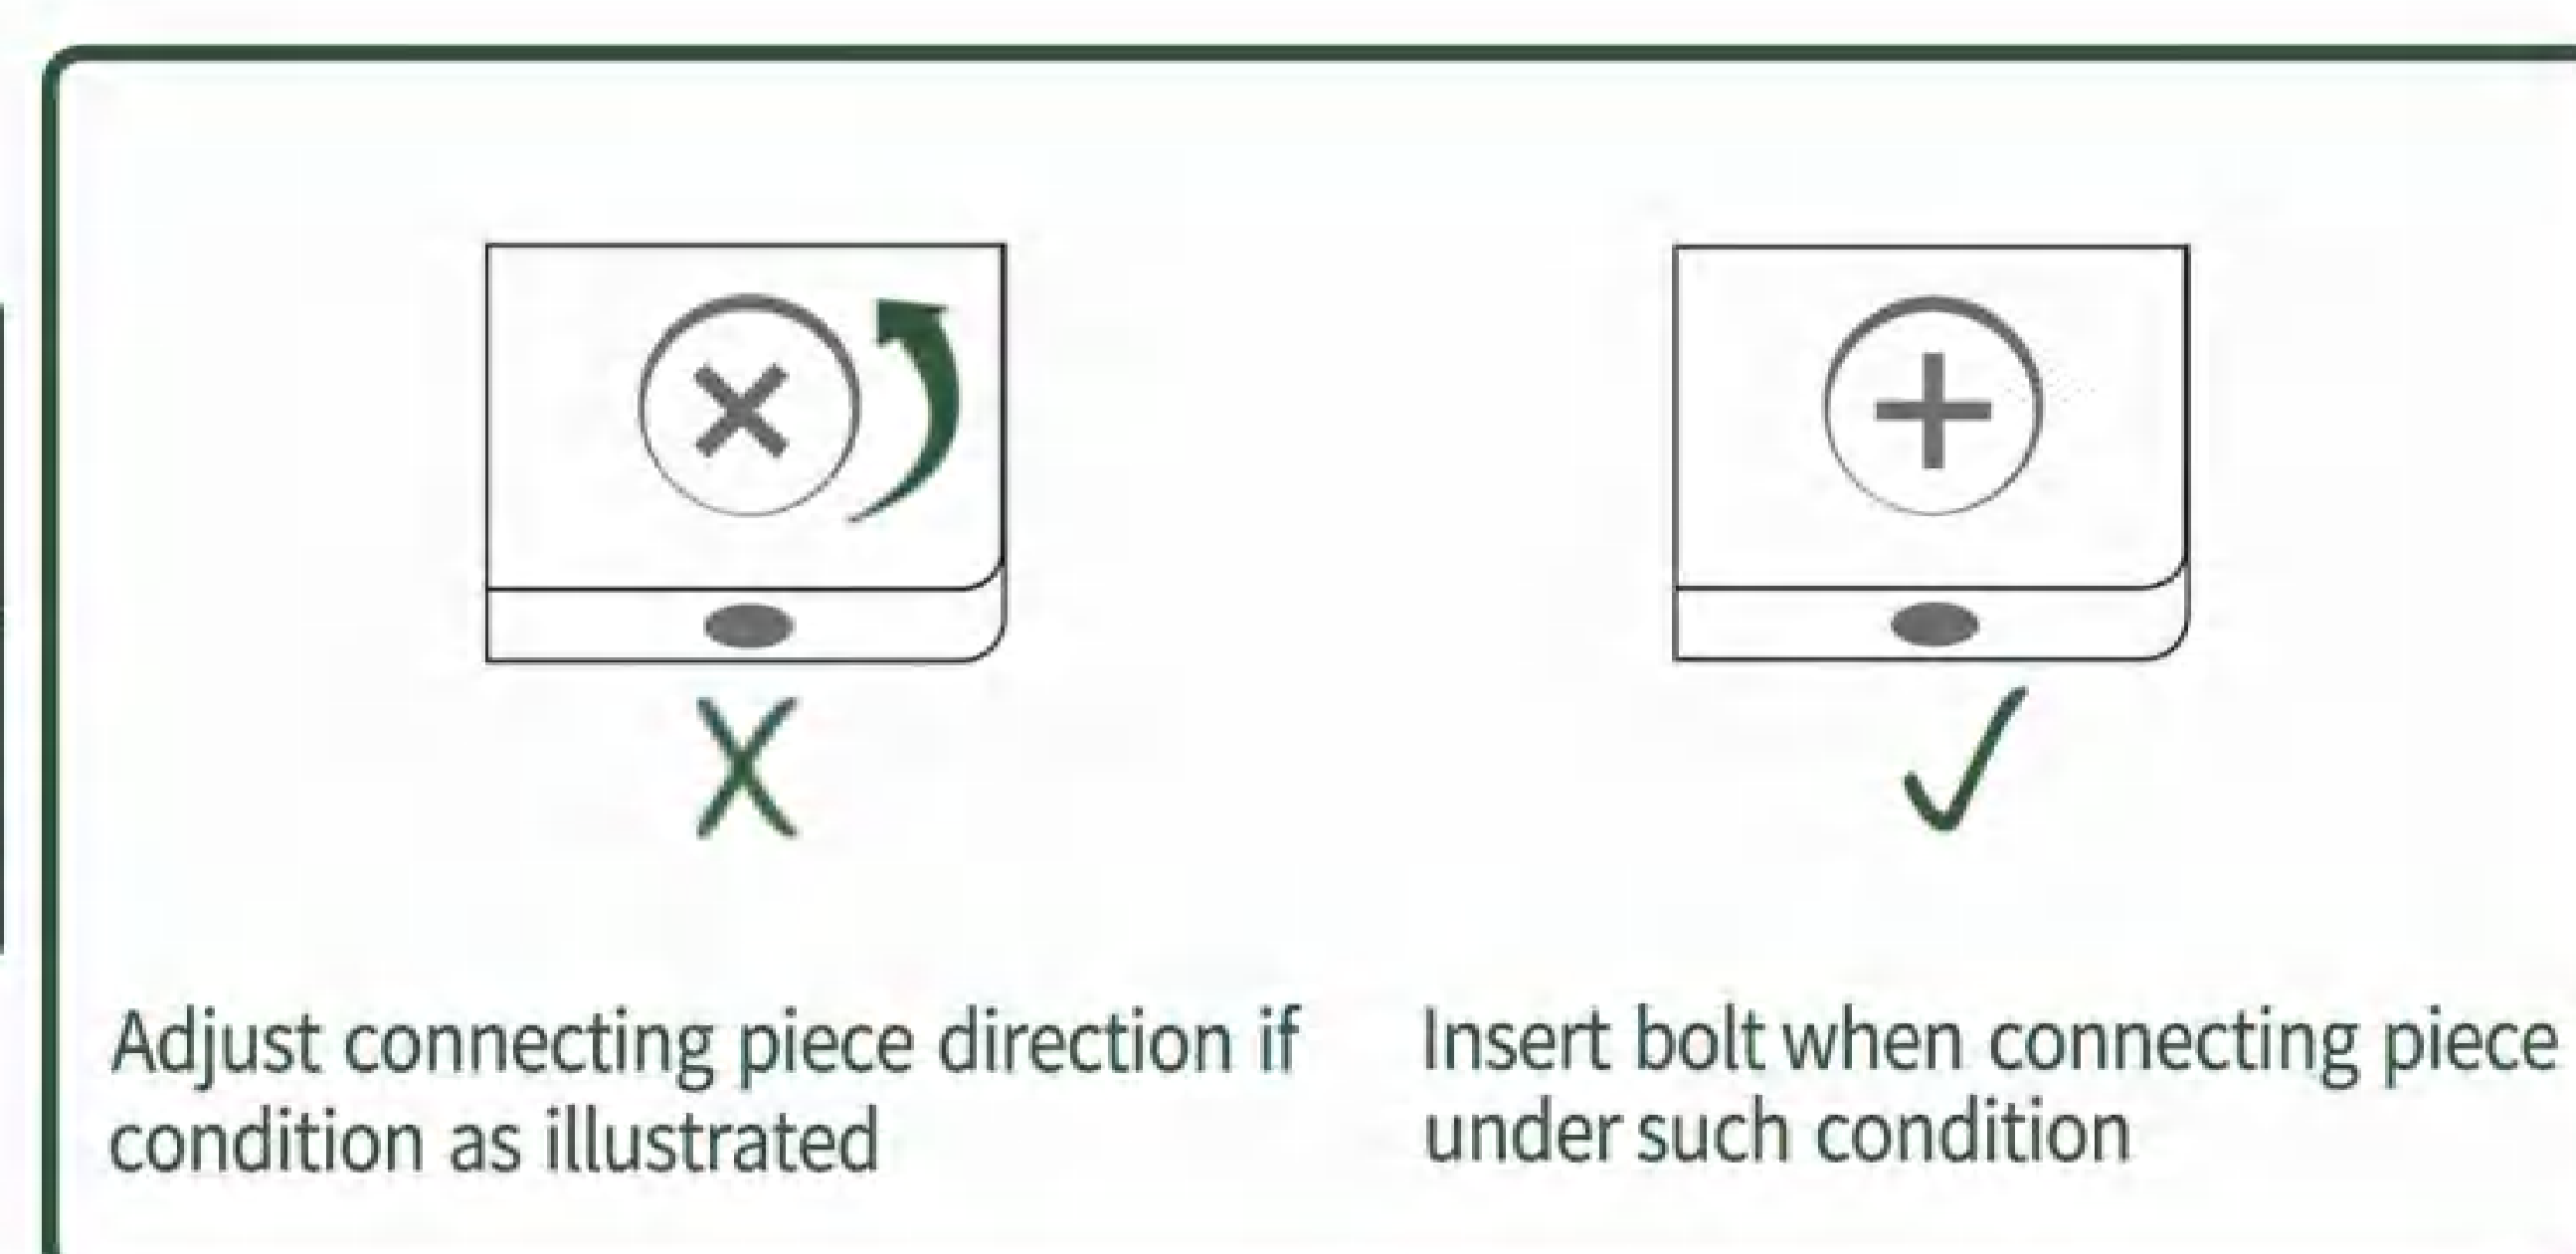


1.

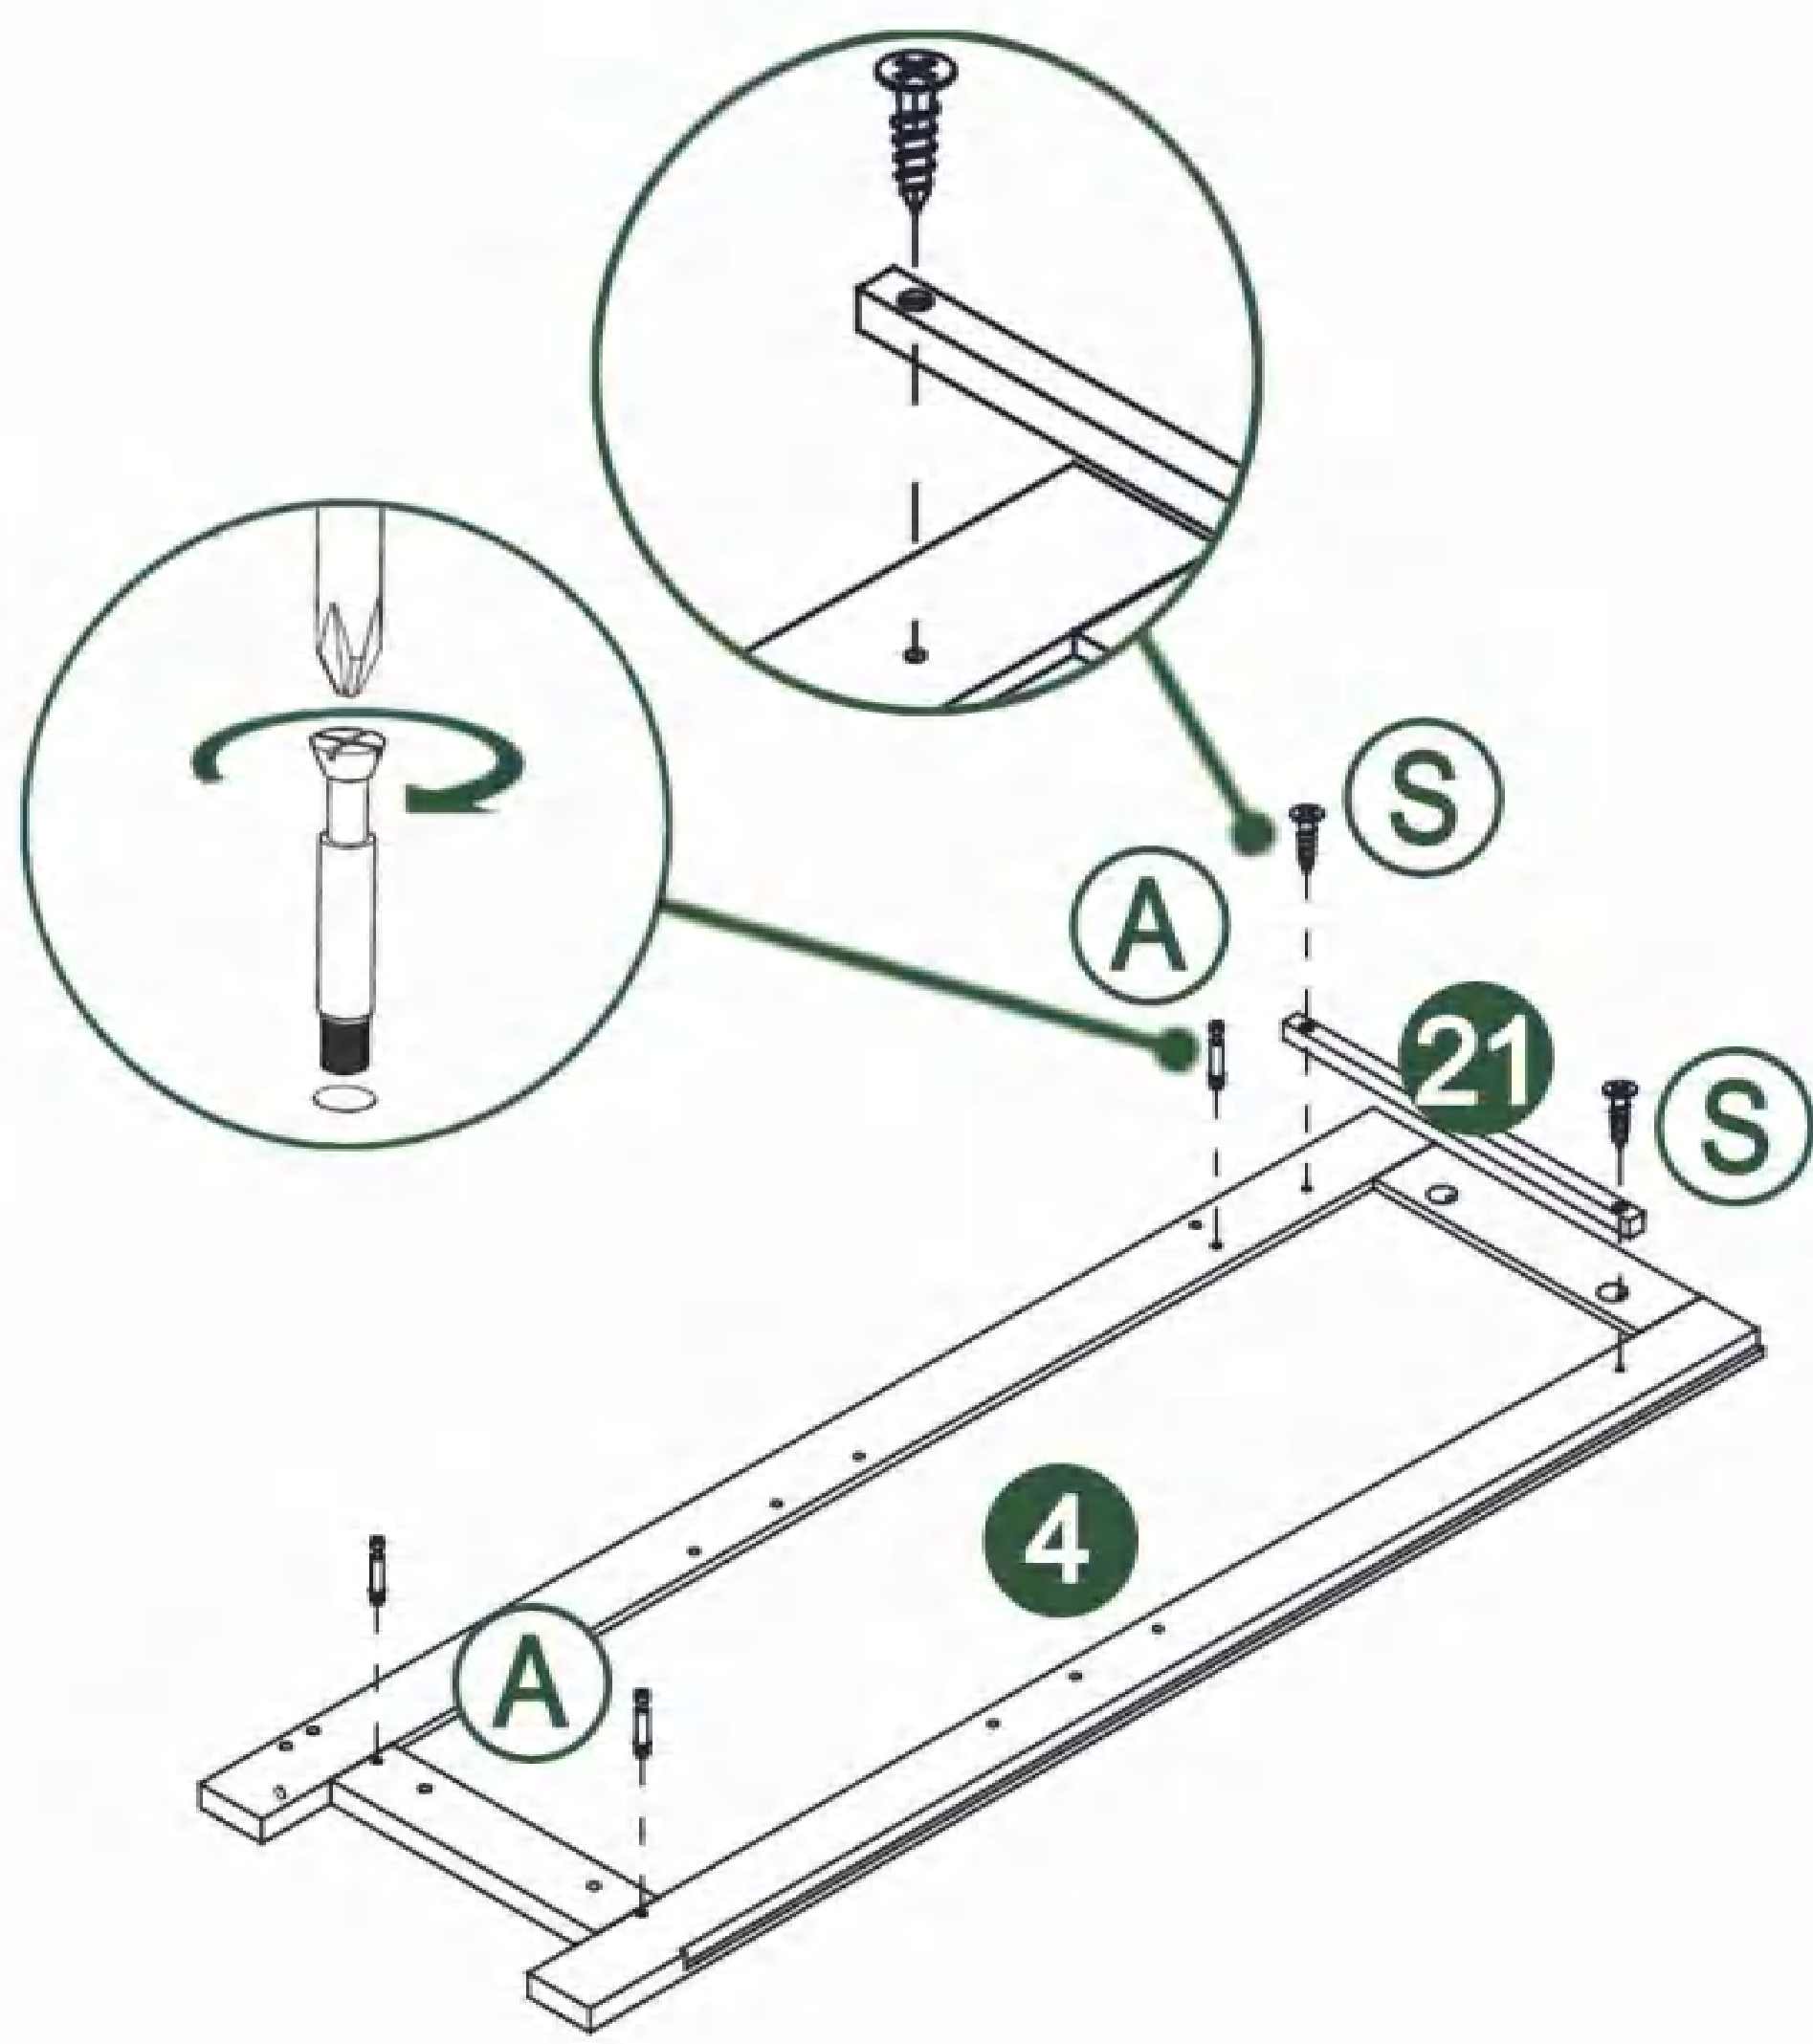


2.

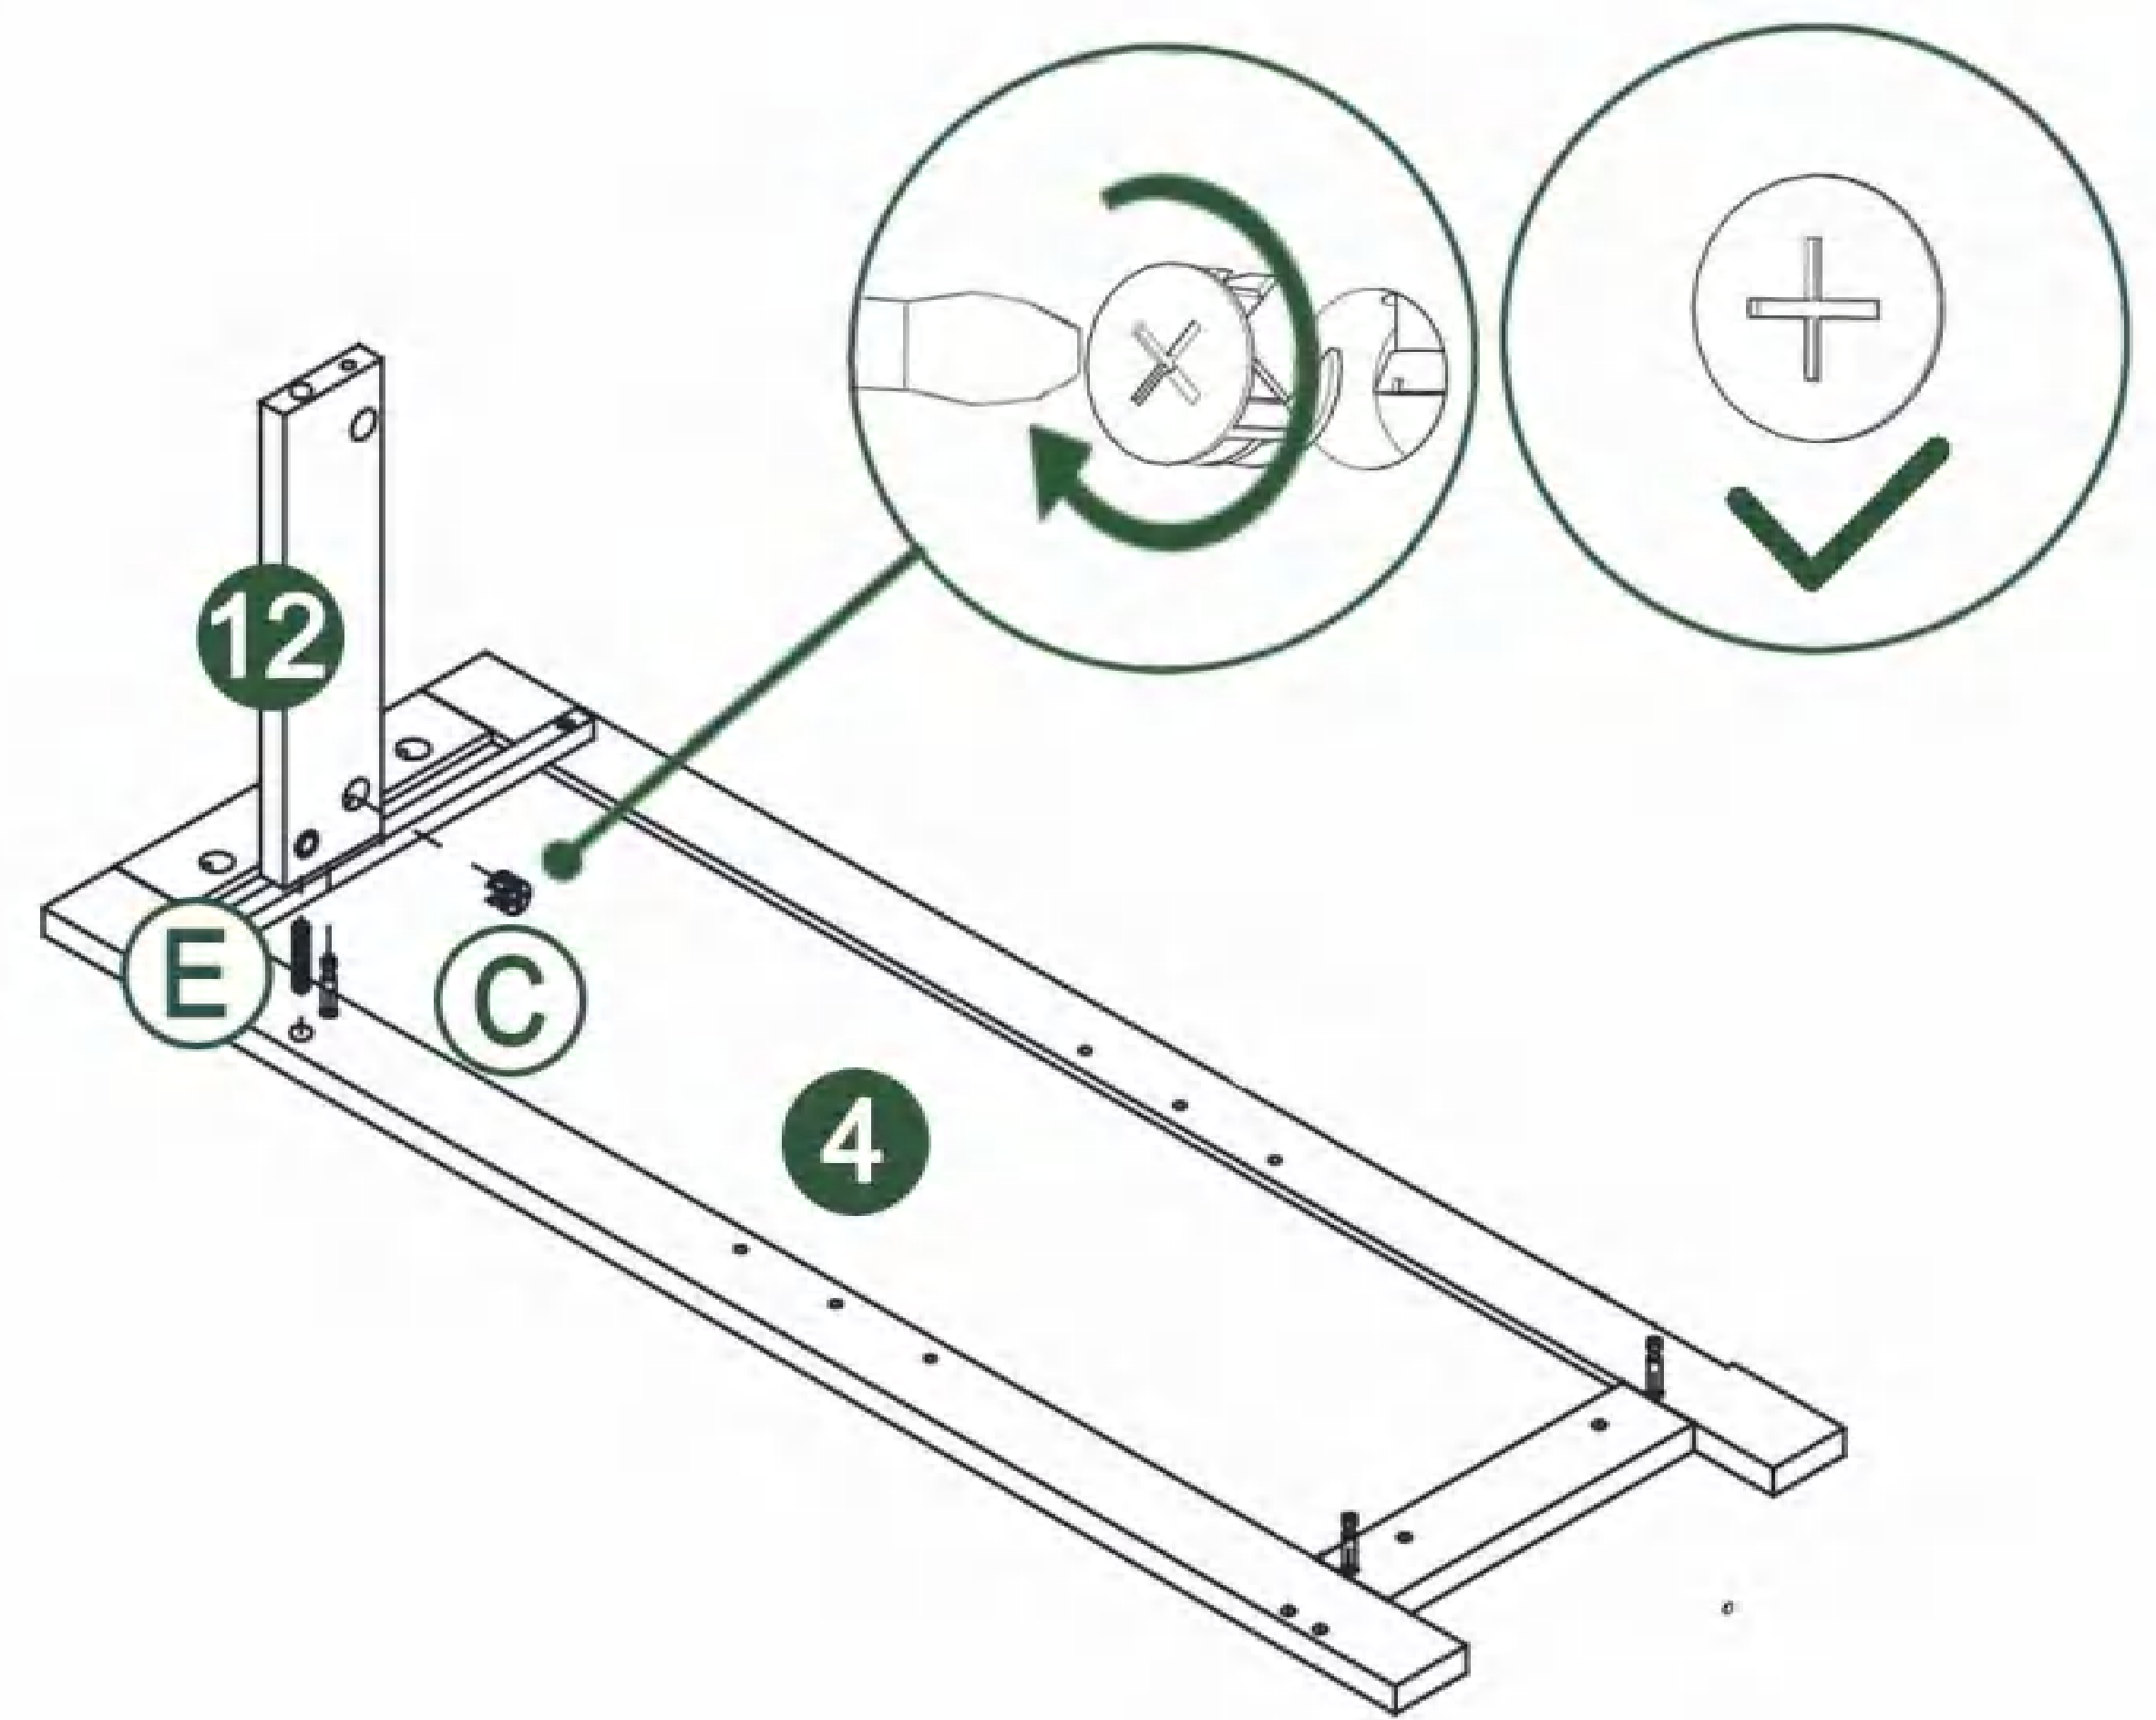


3.

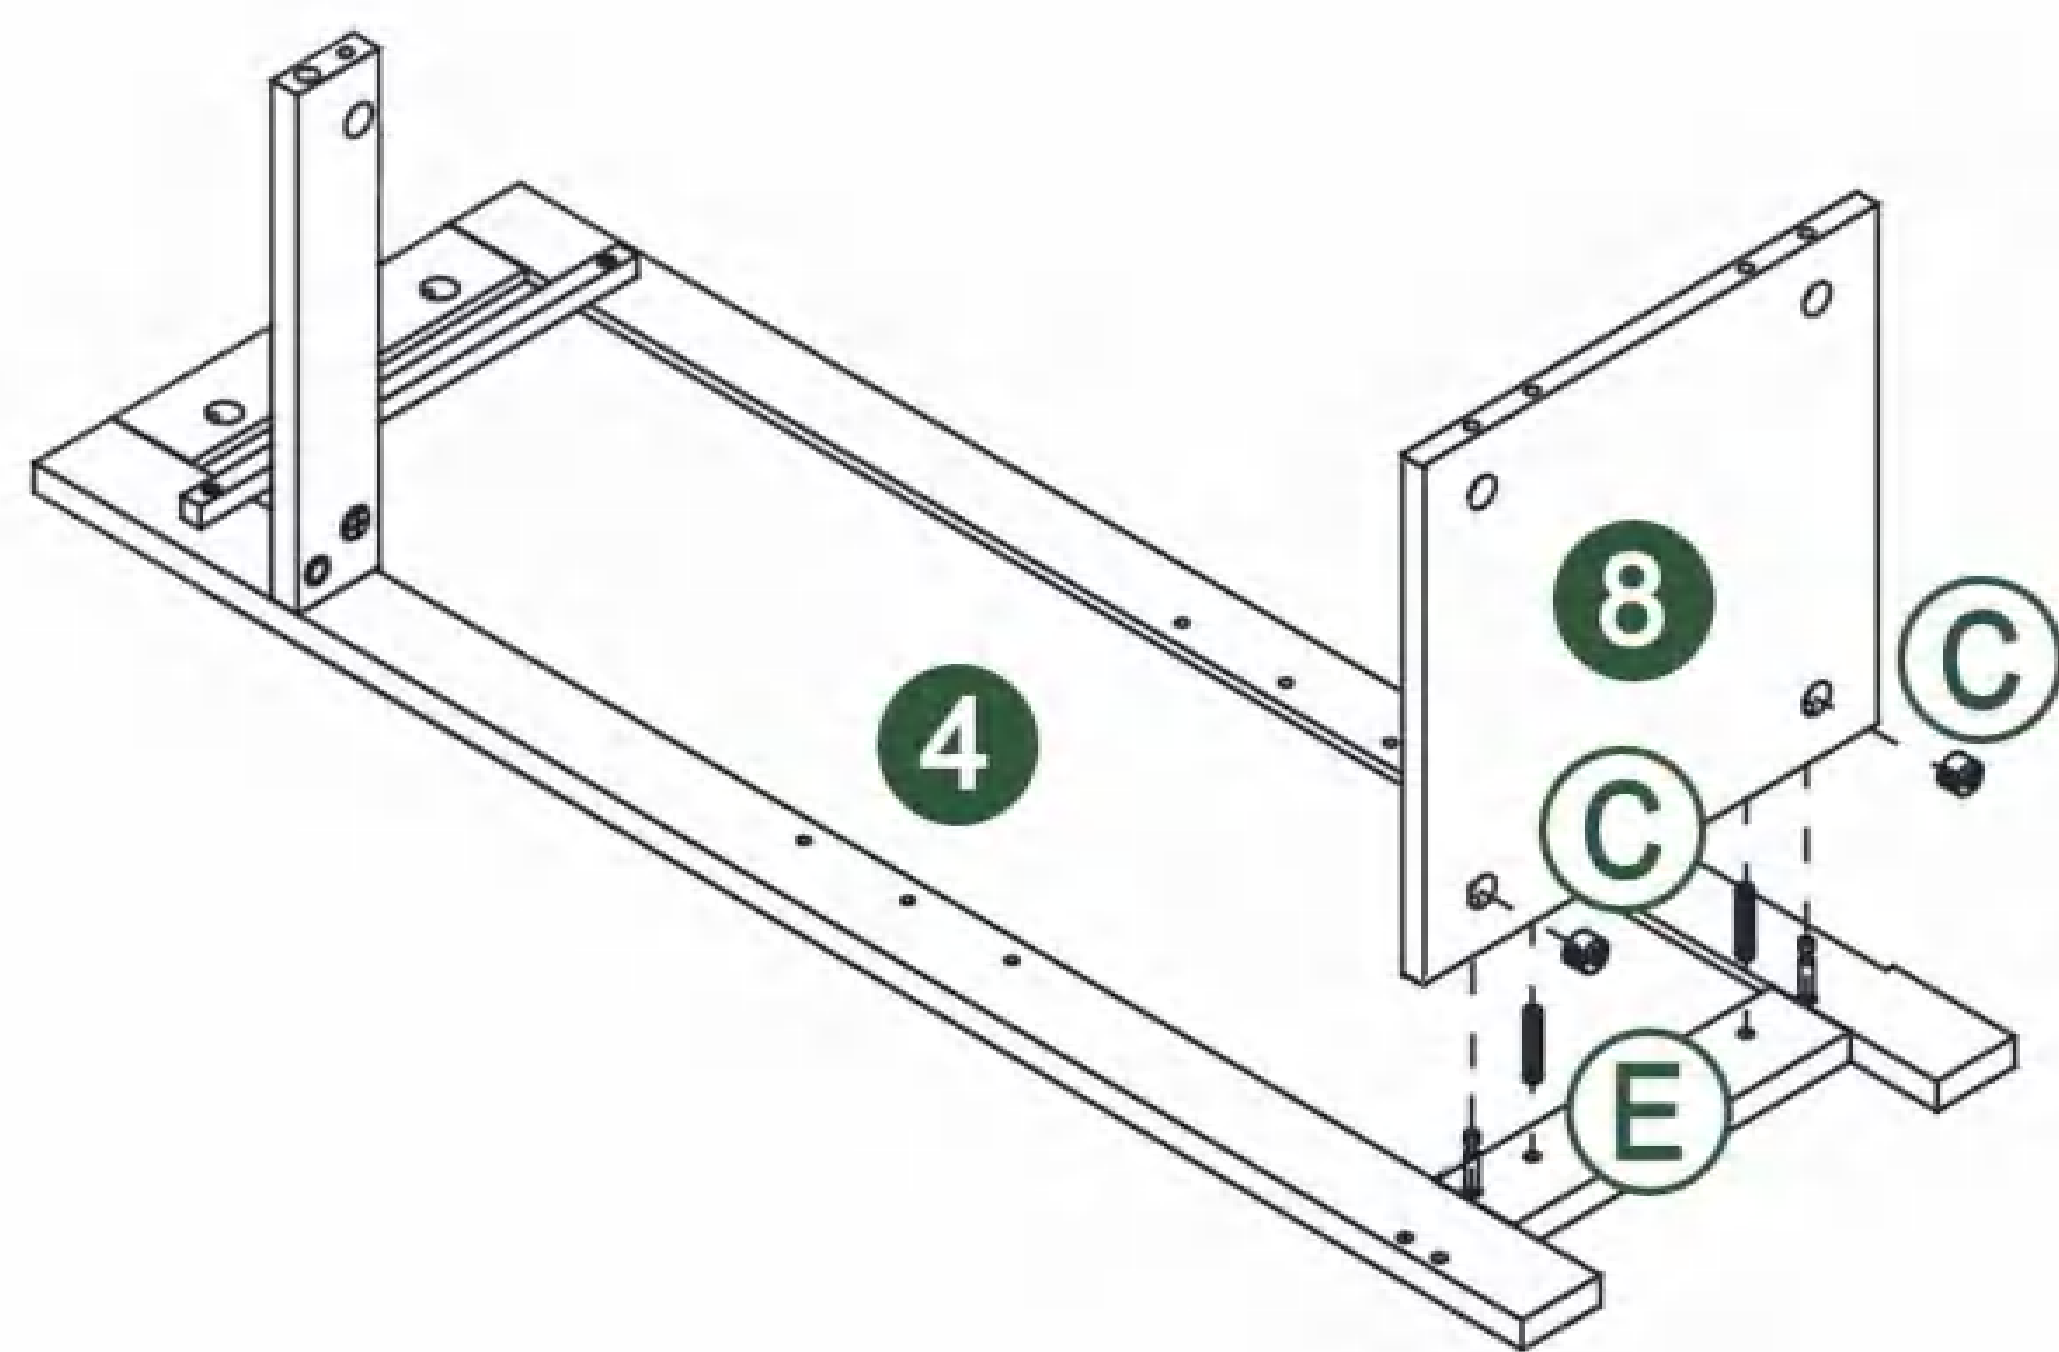


4.

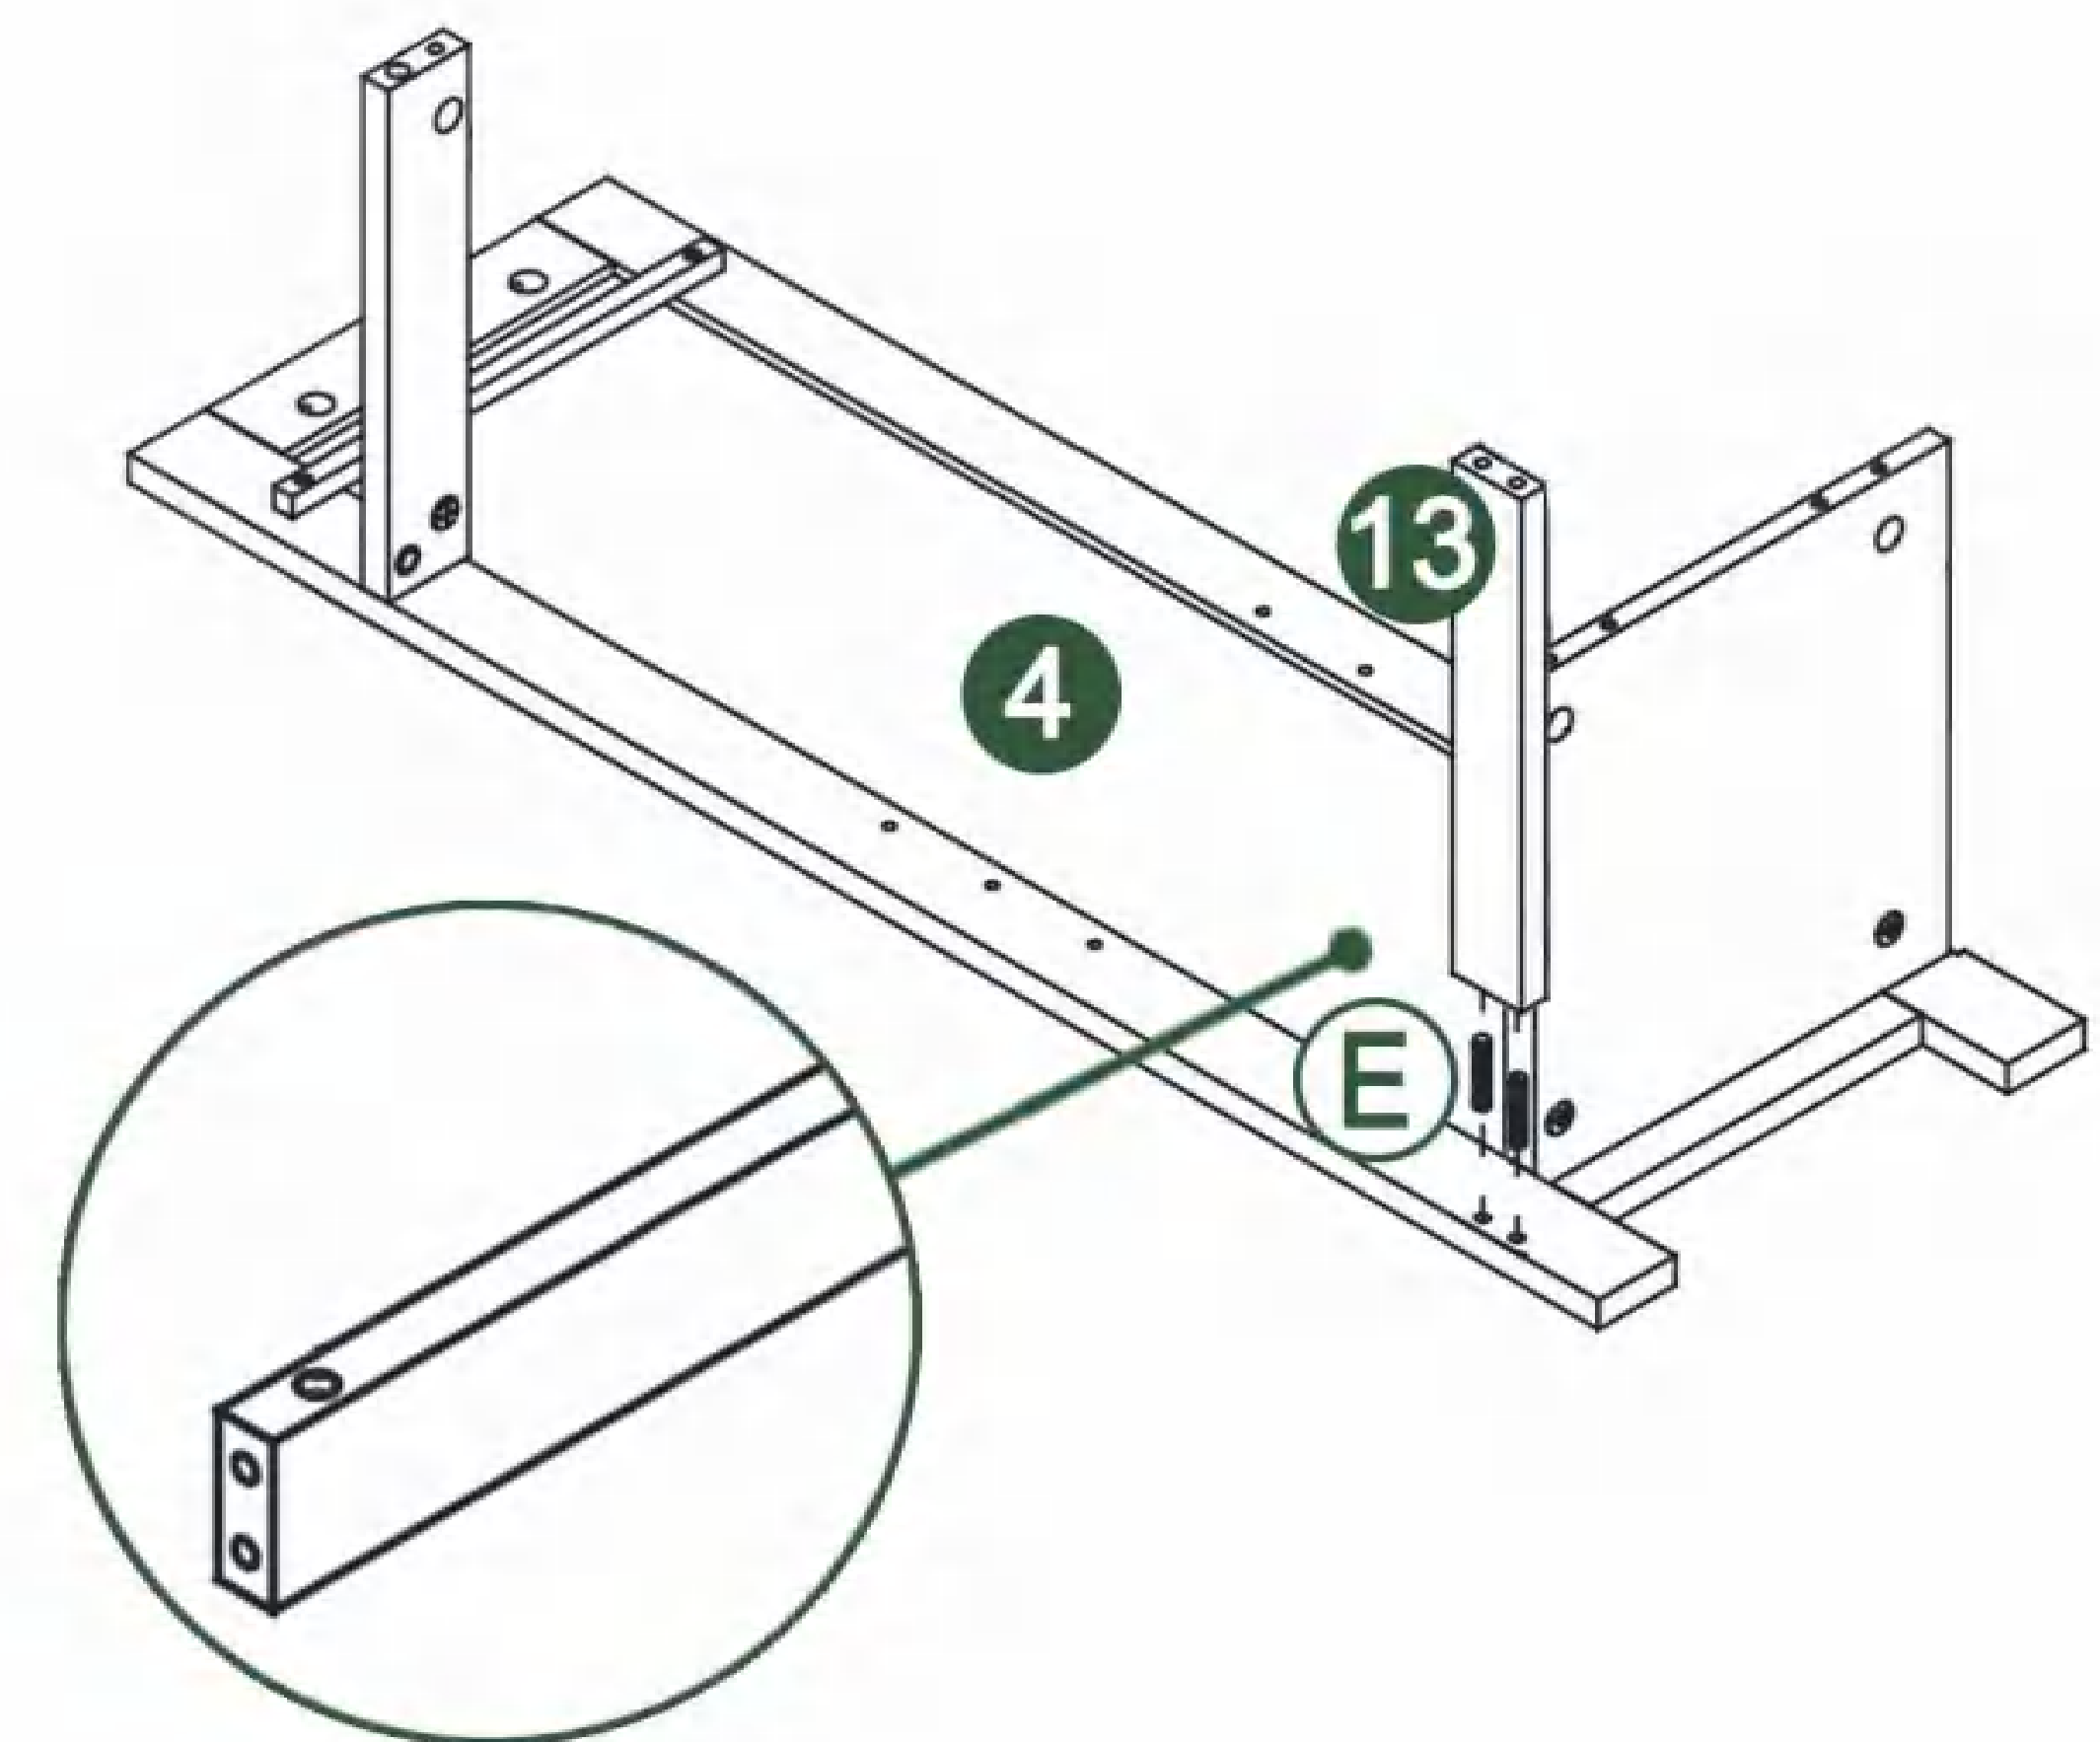


5.

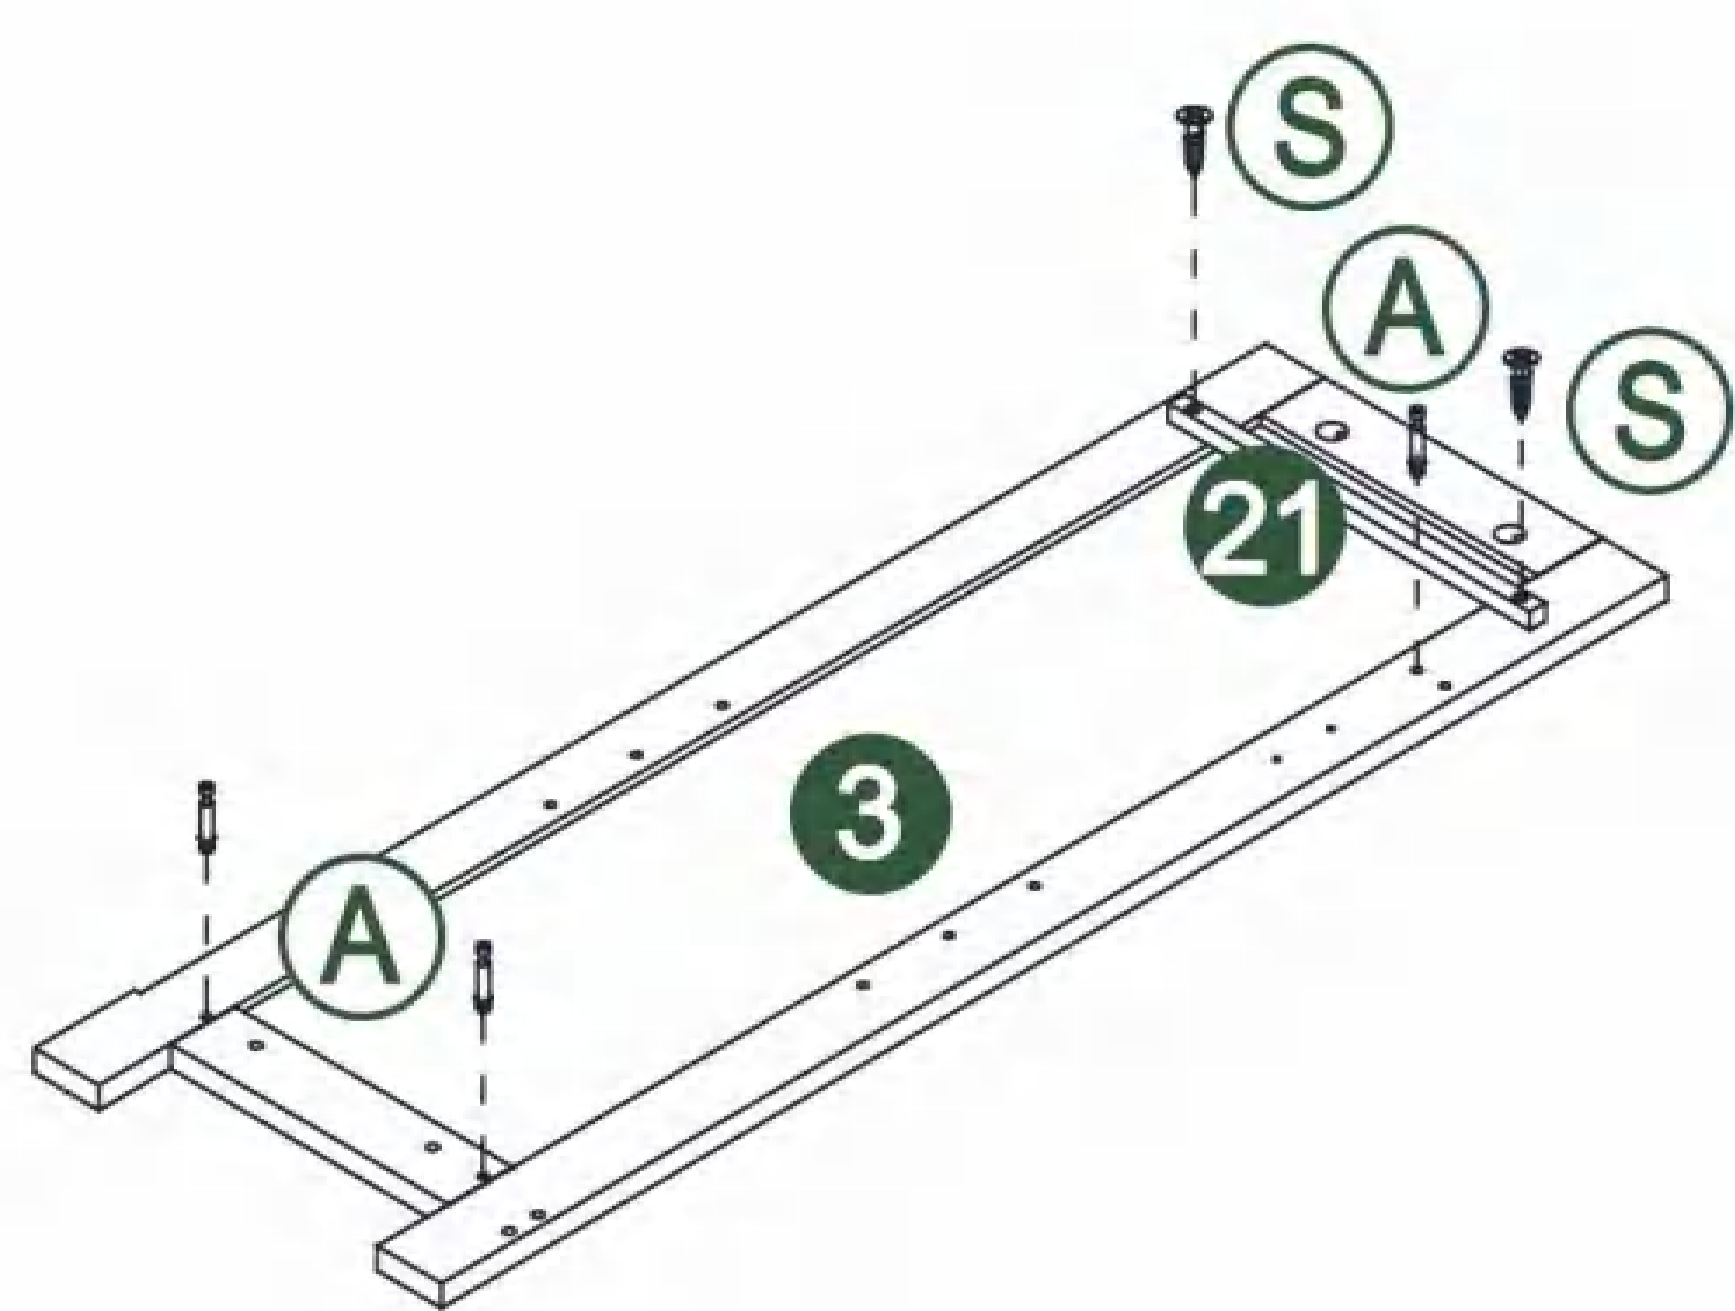


6.

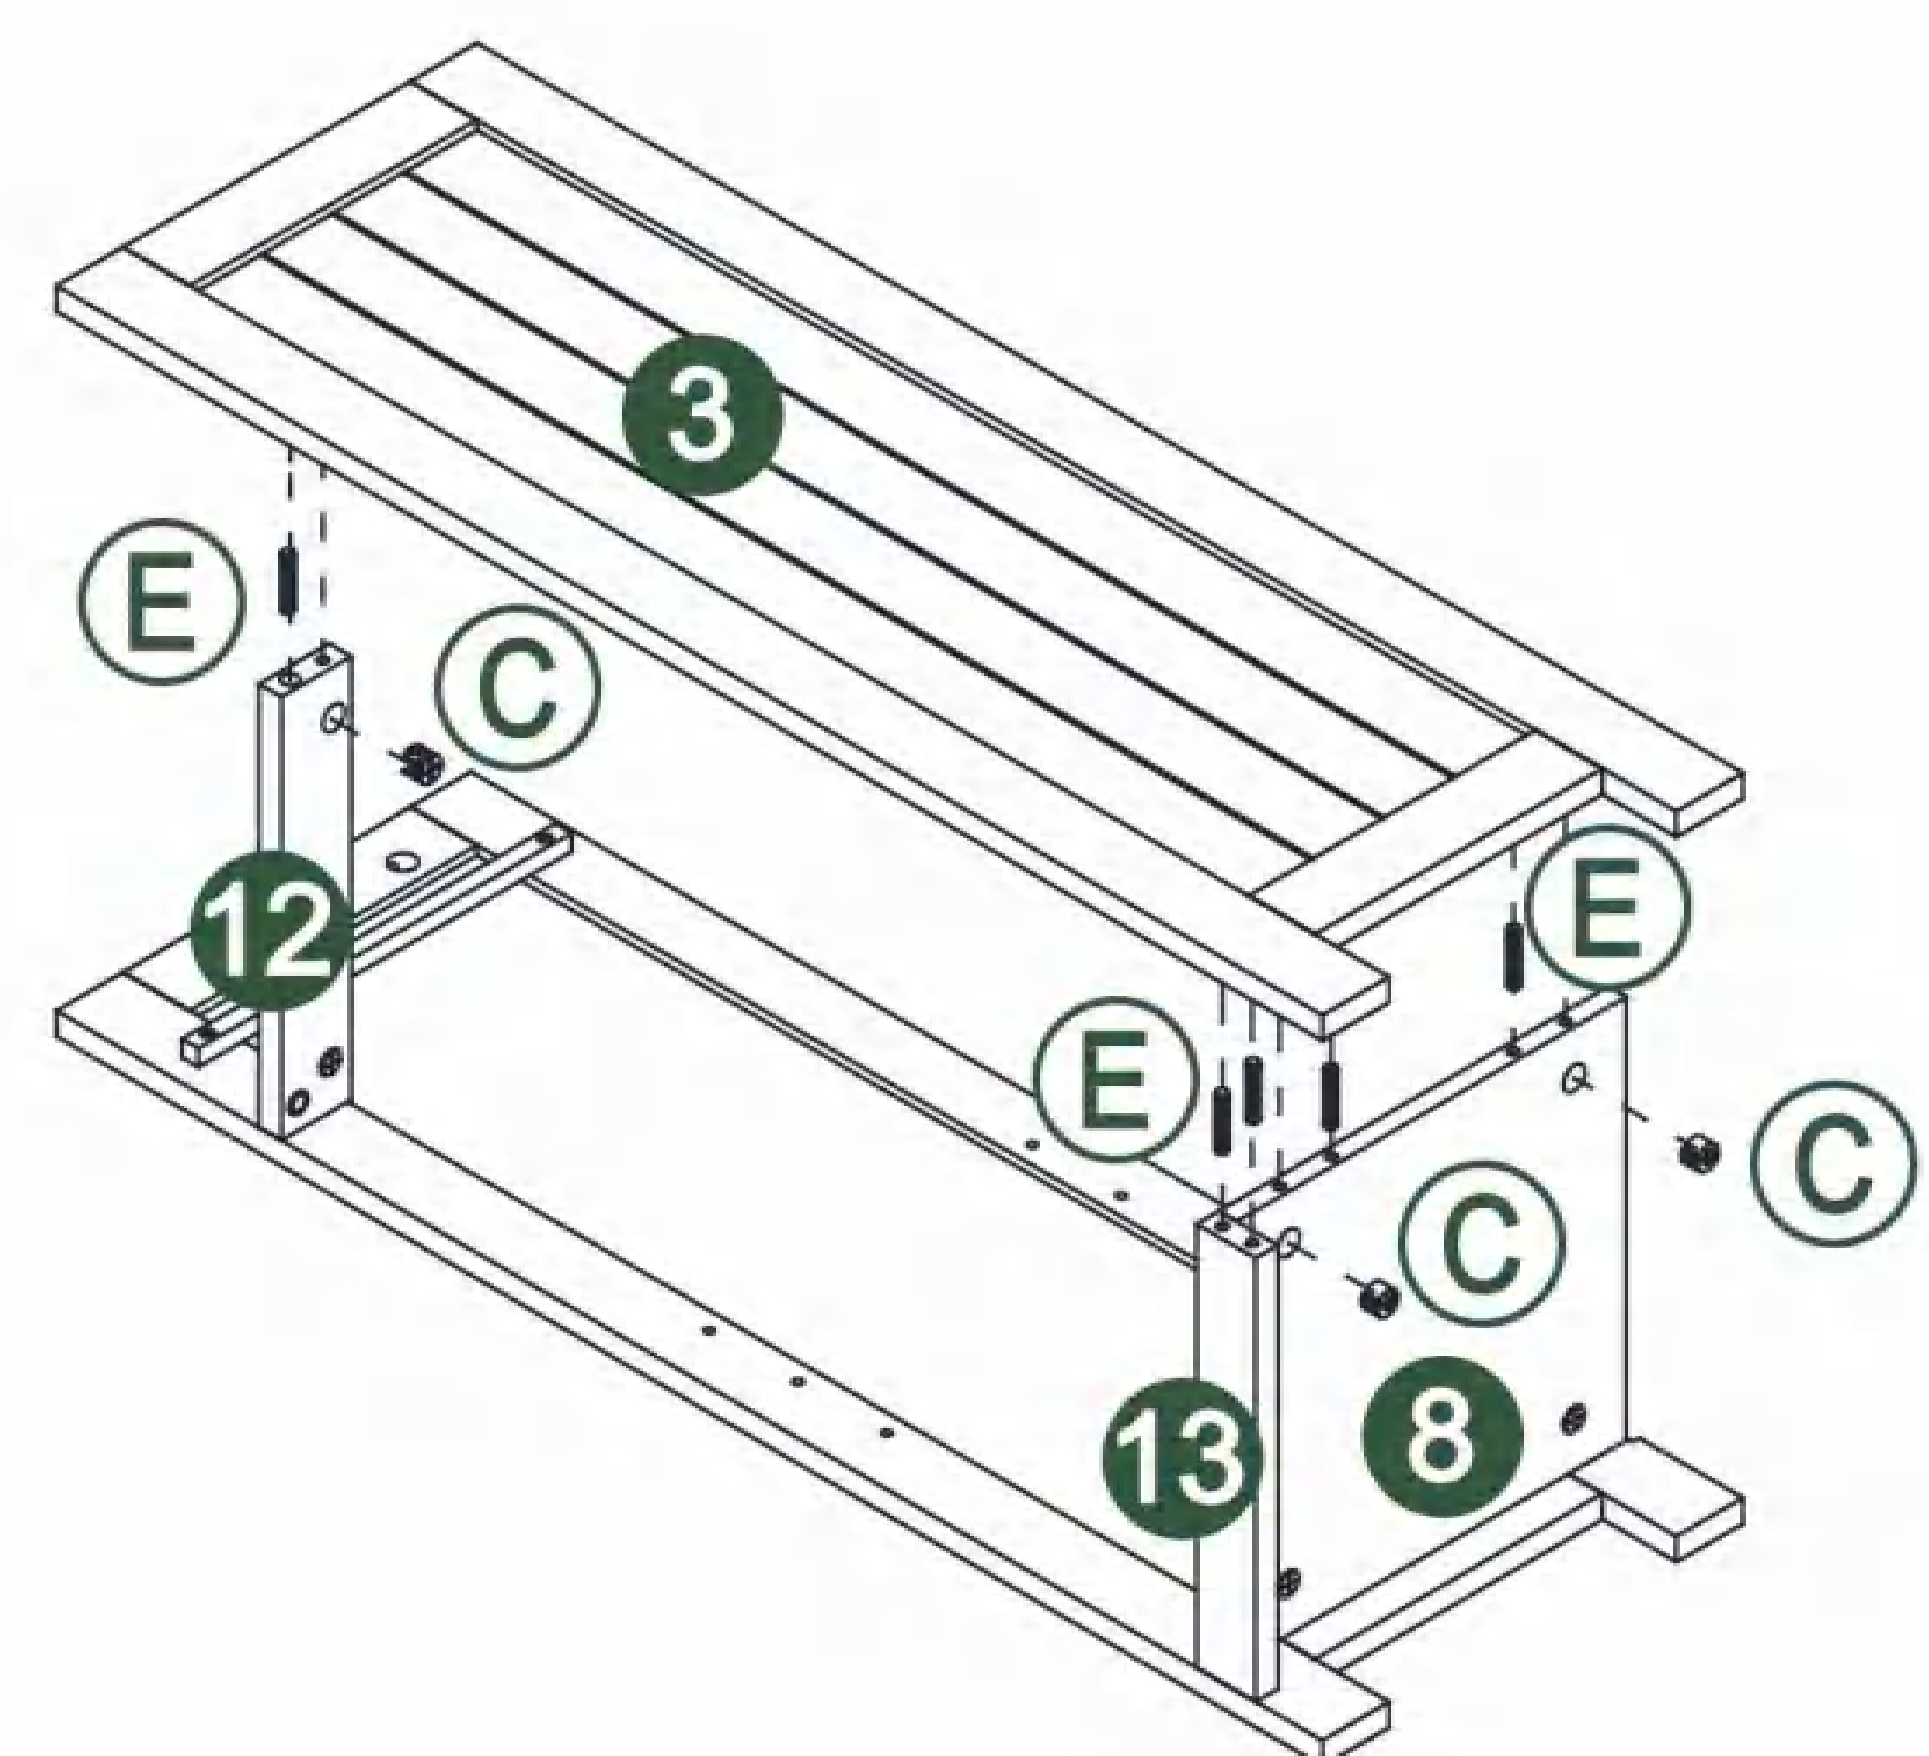


7.

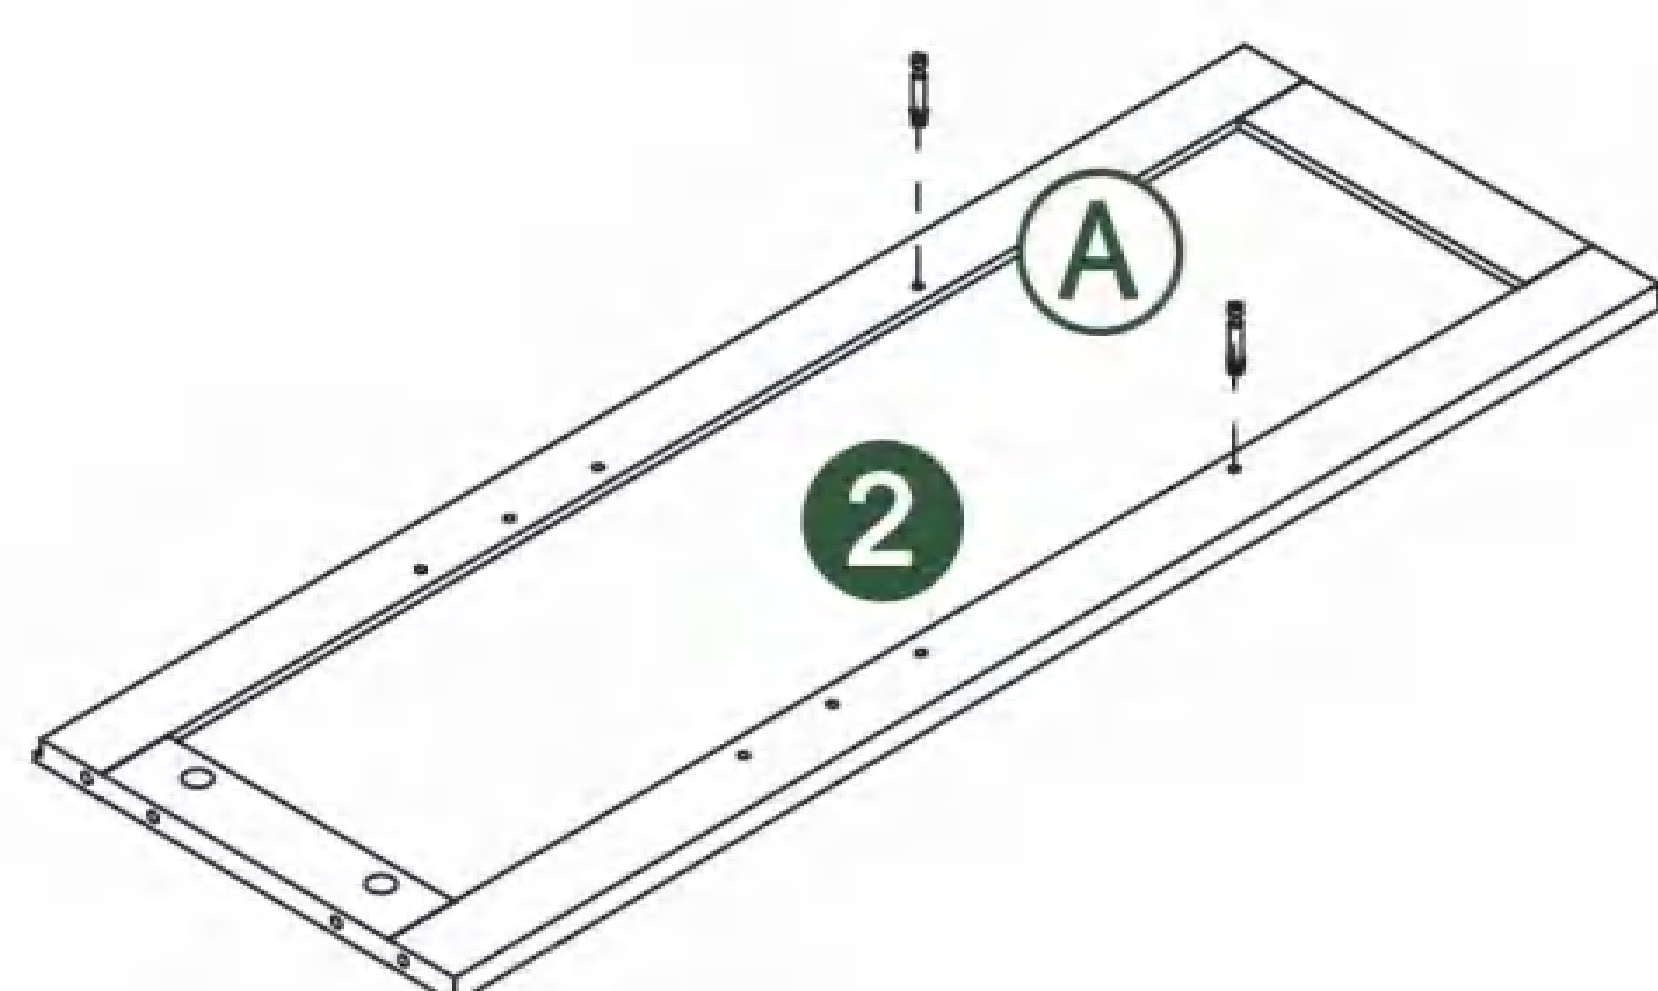


8.

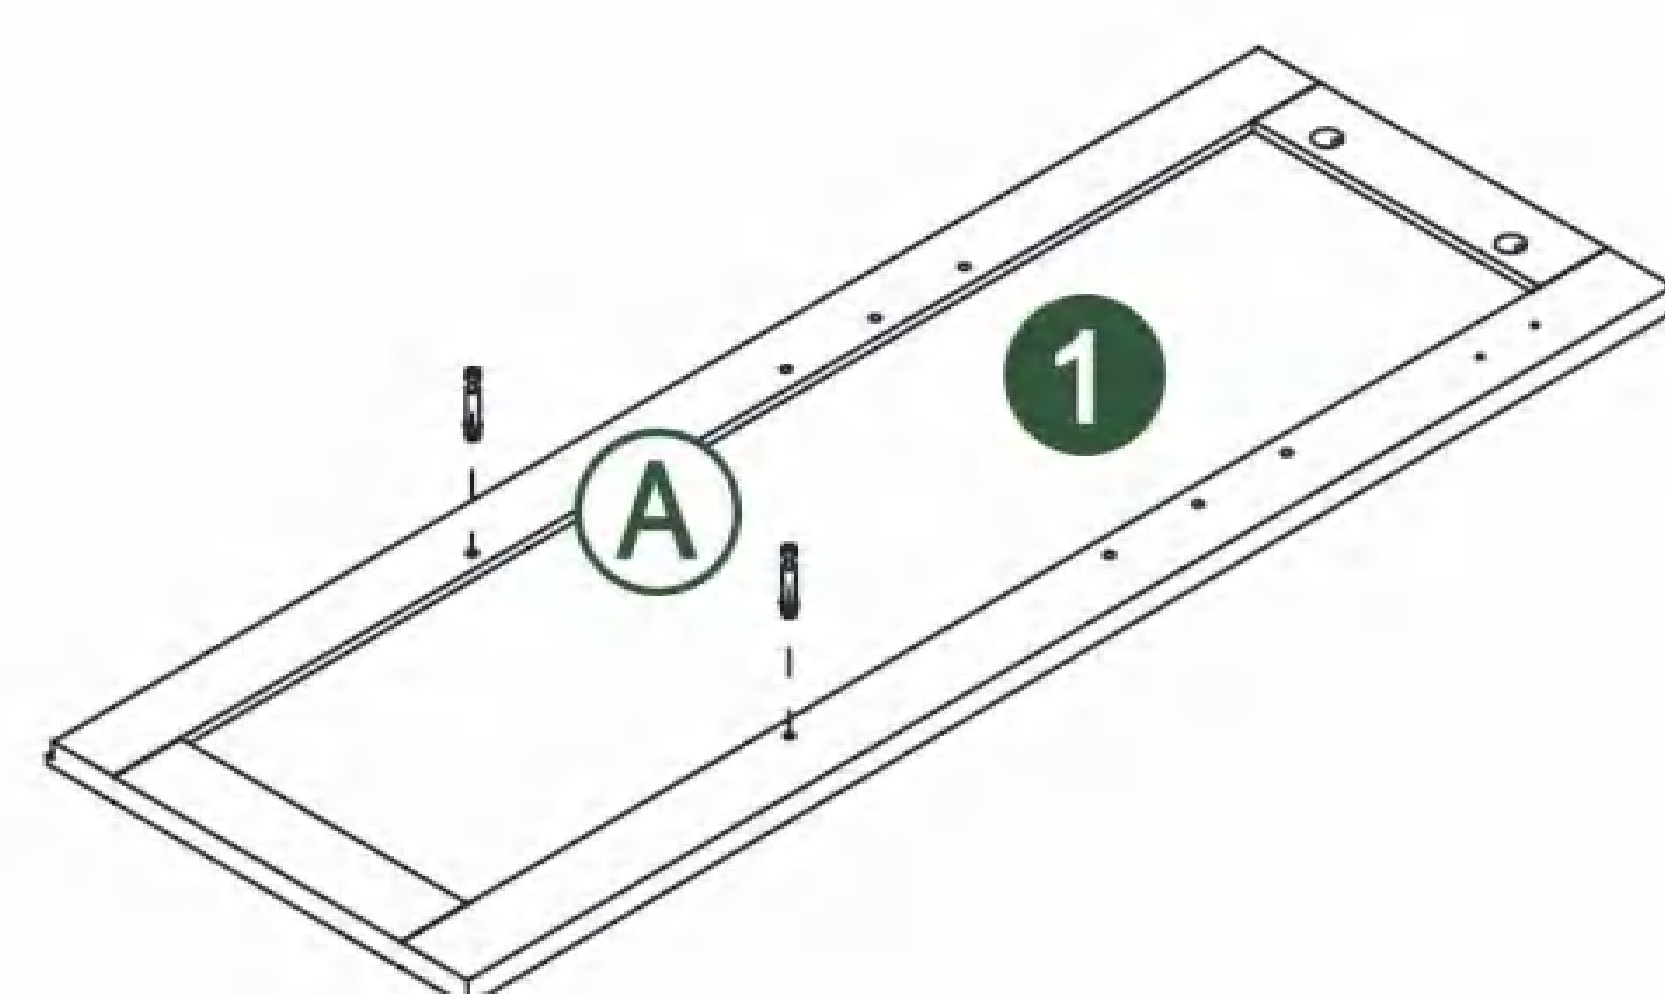


9.

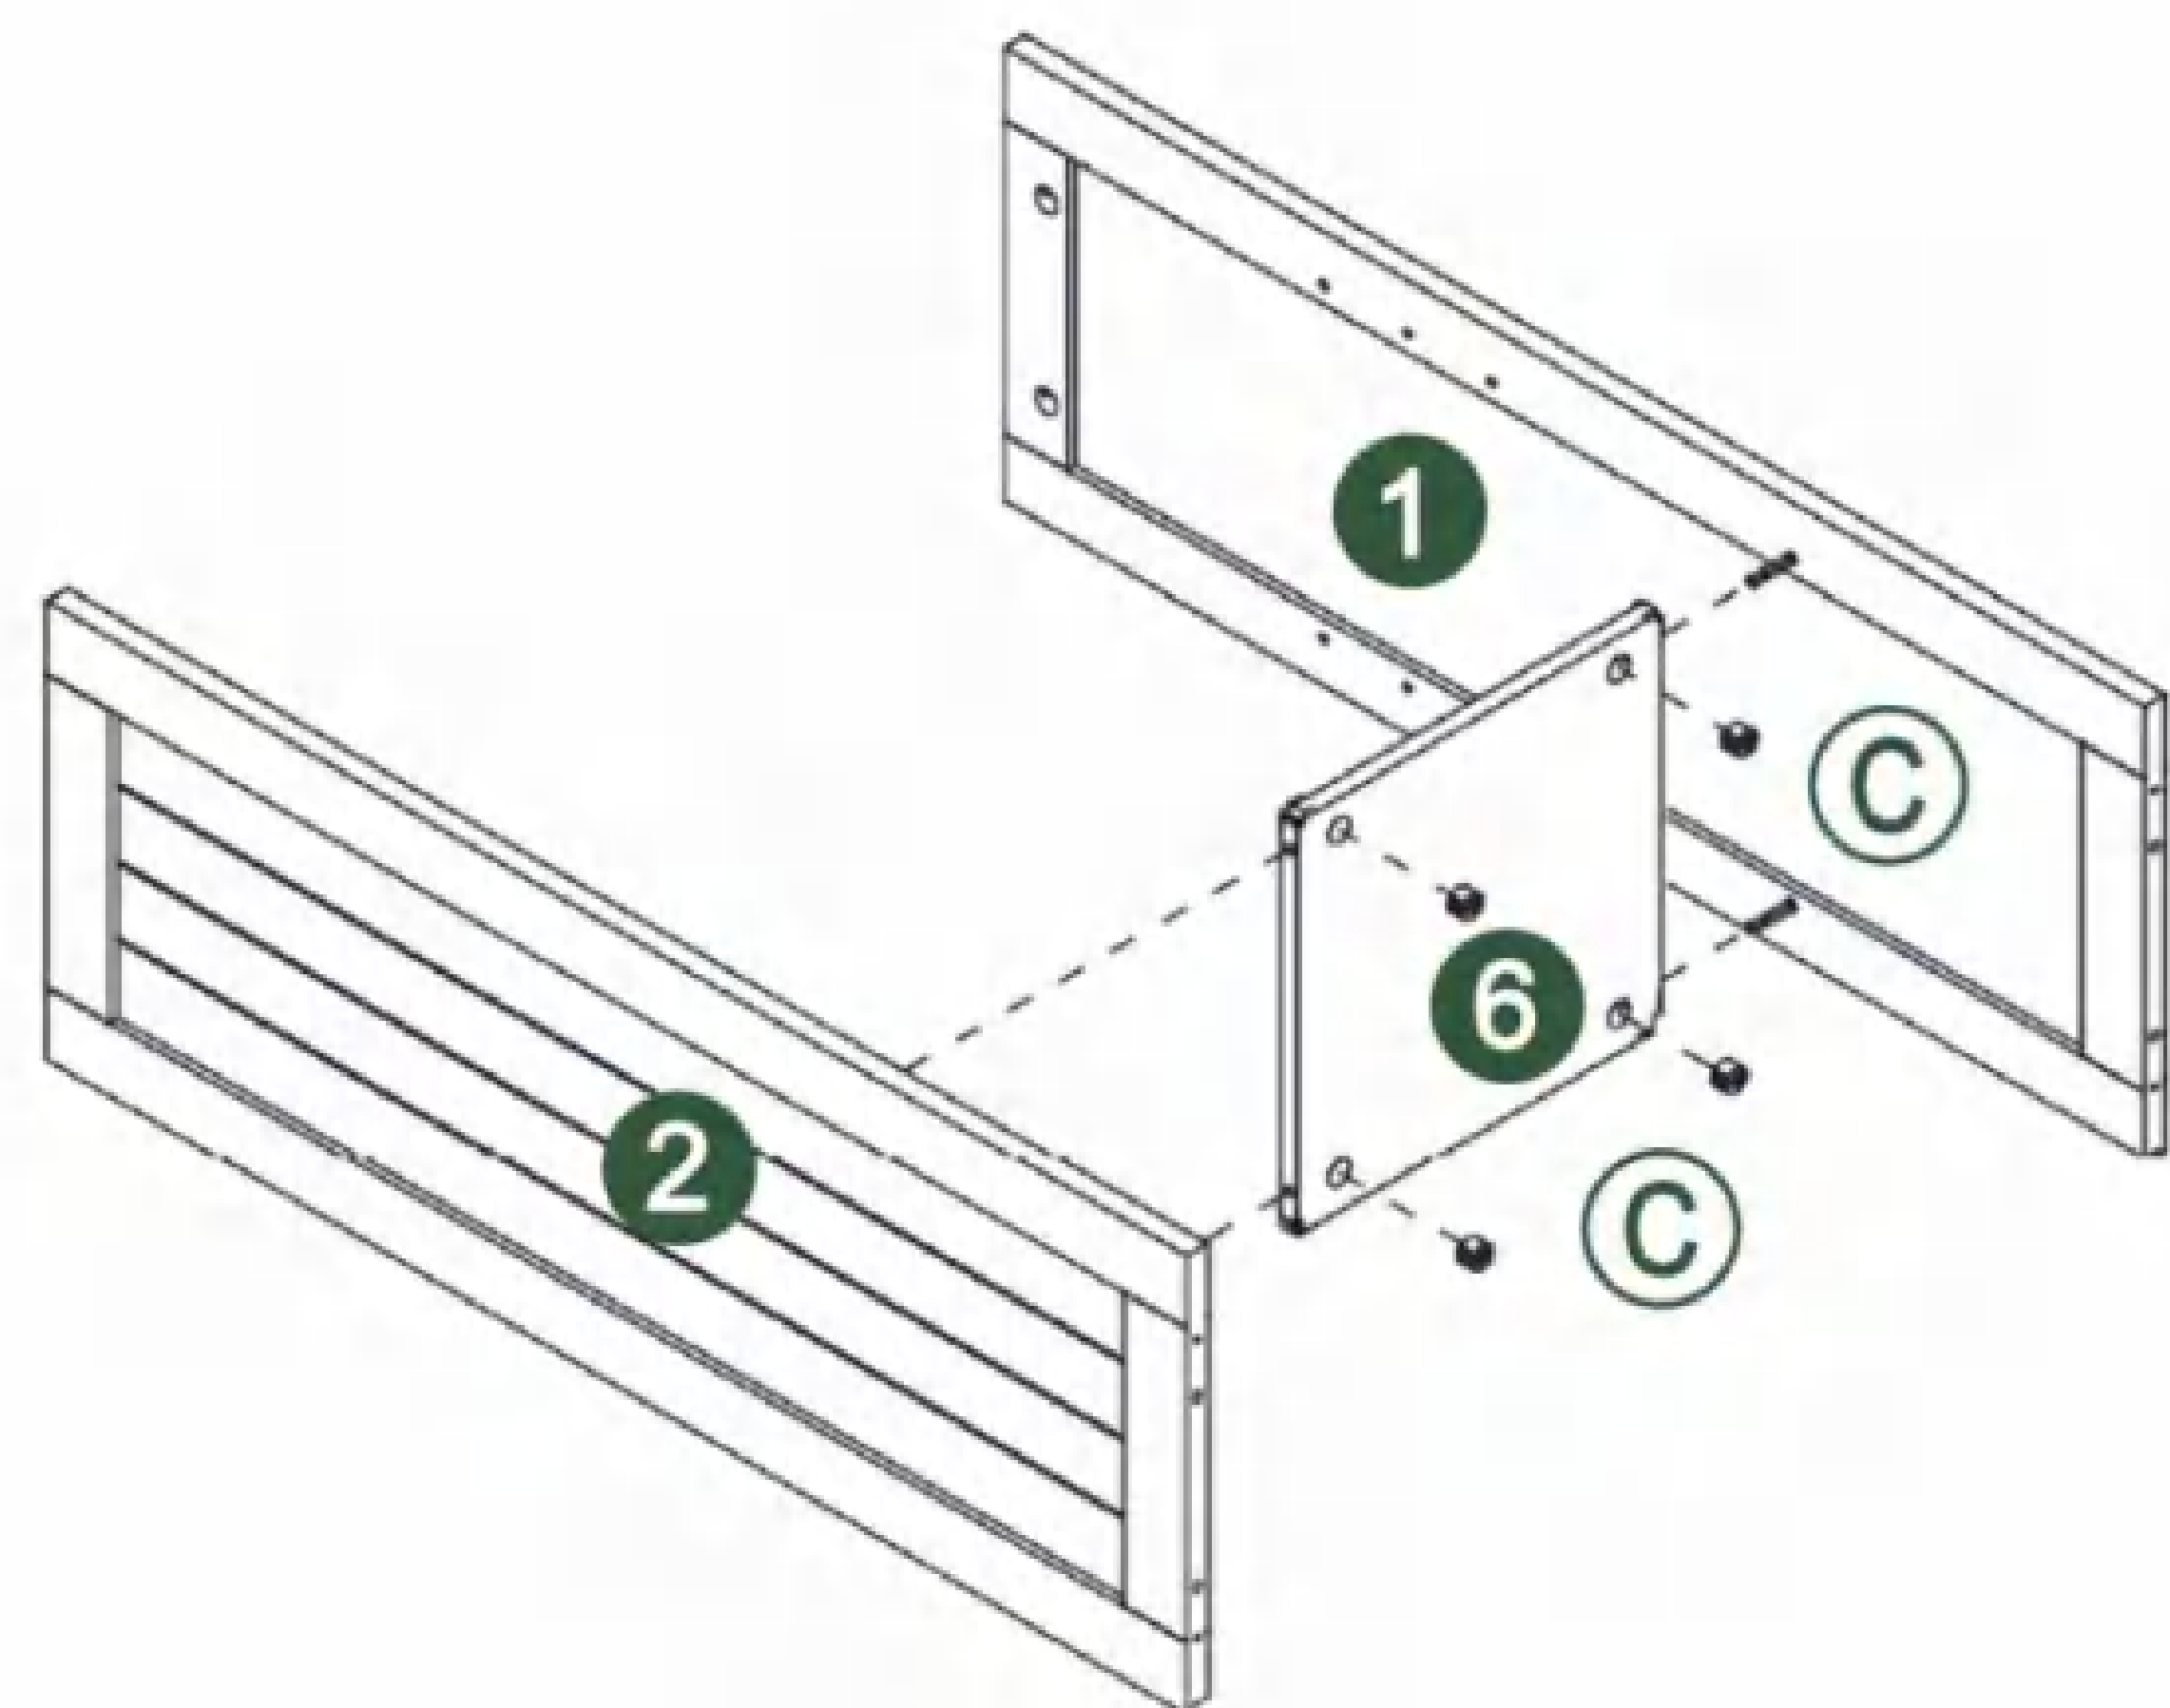


10.

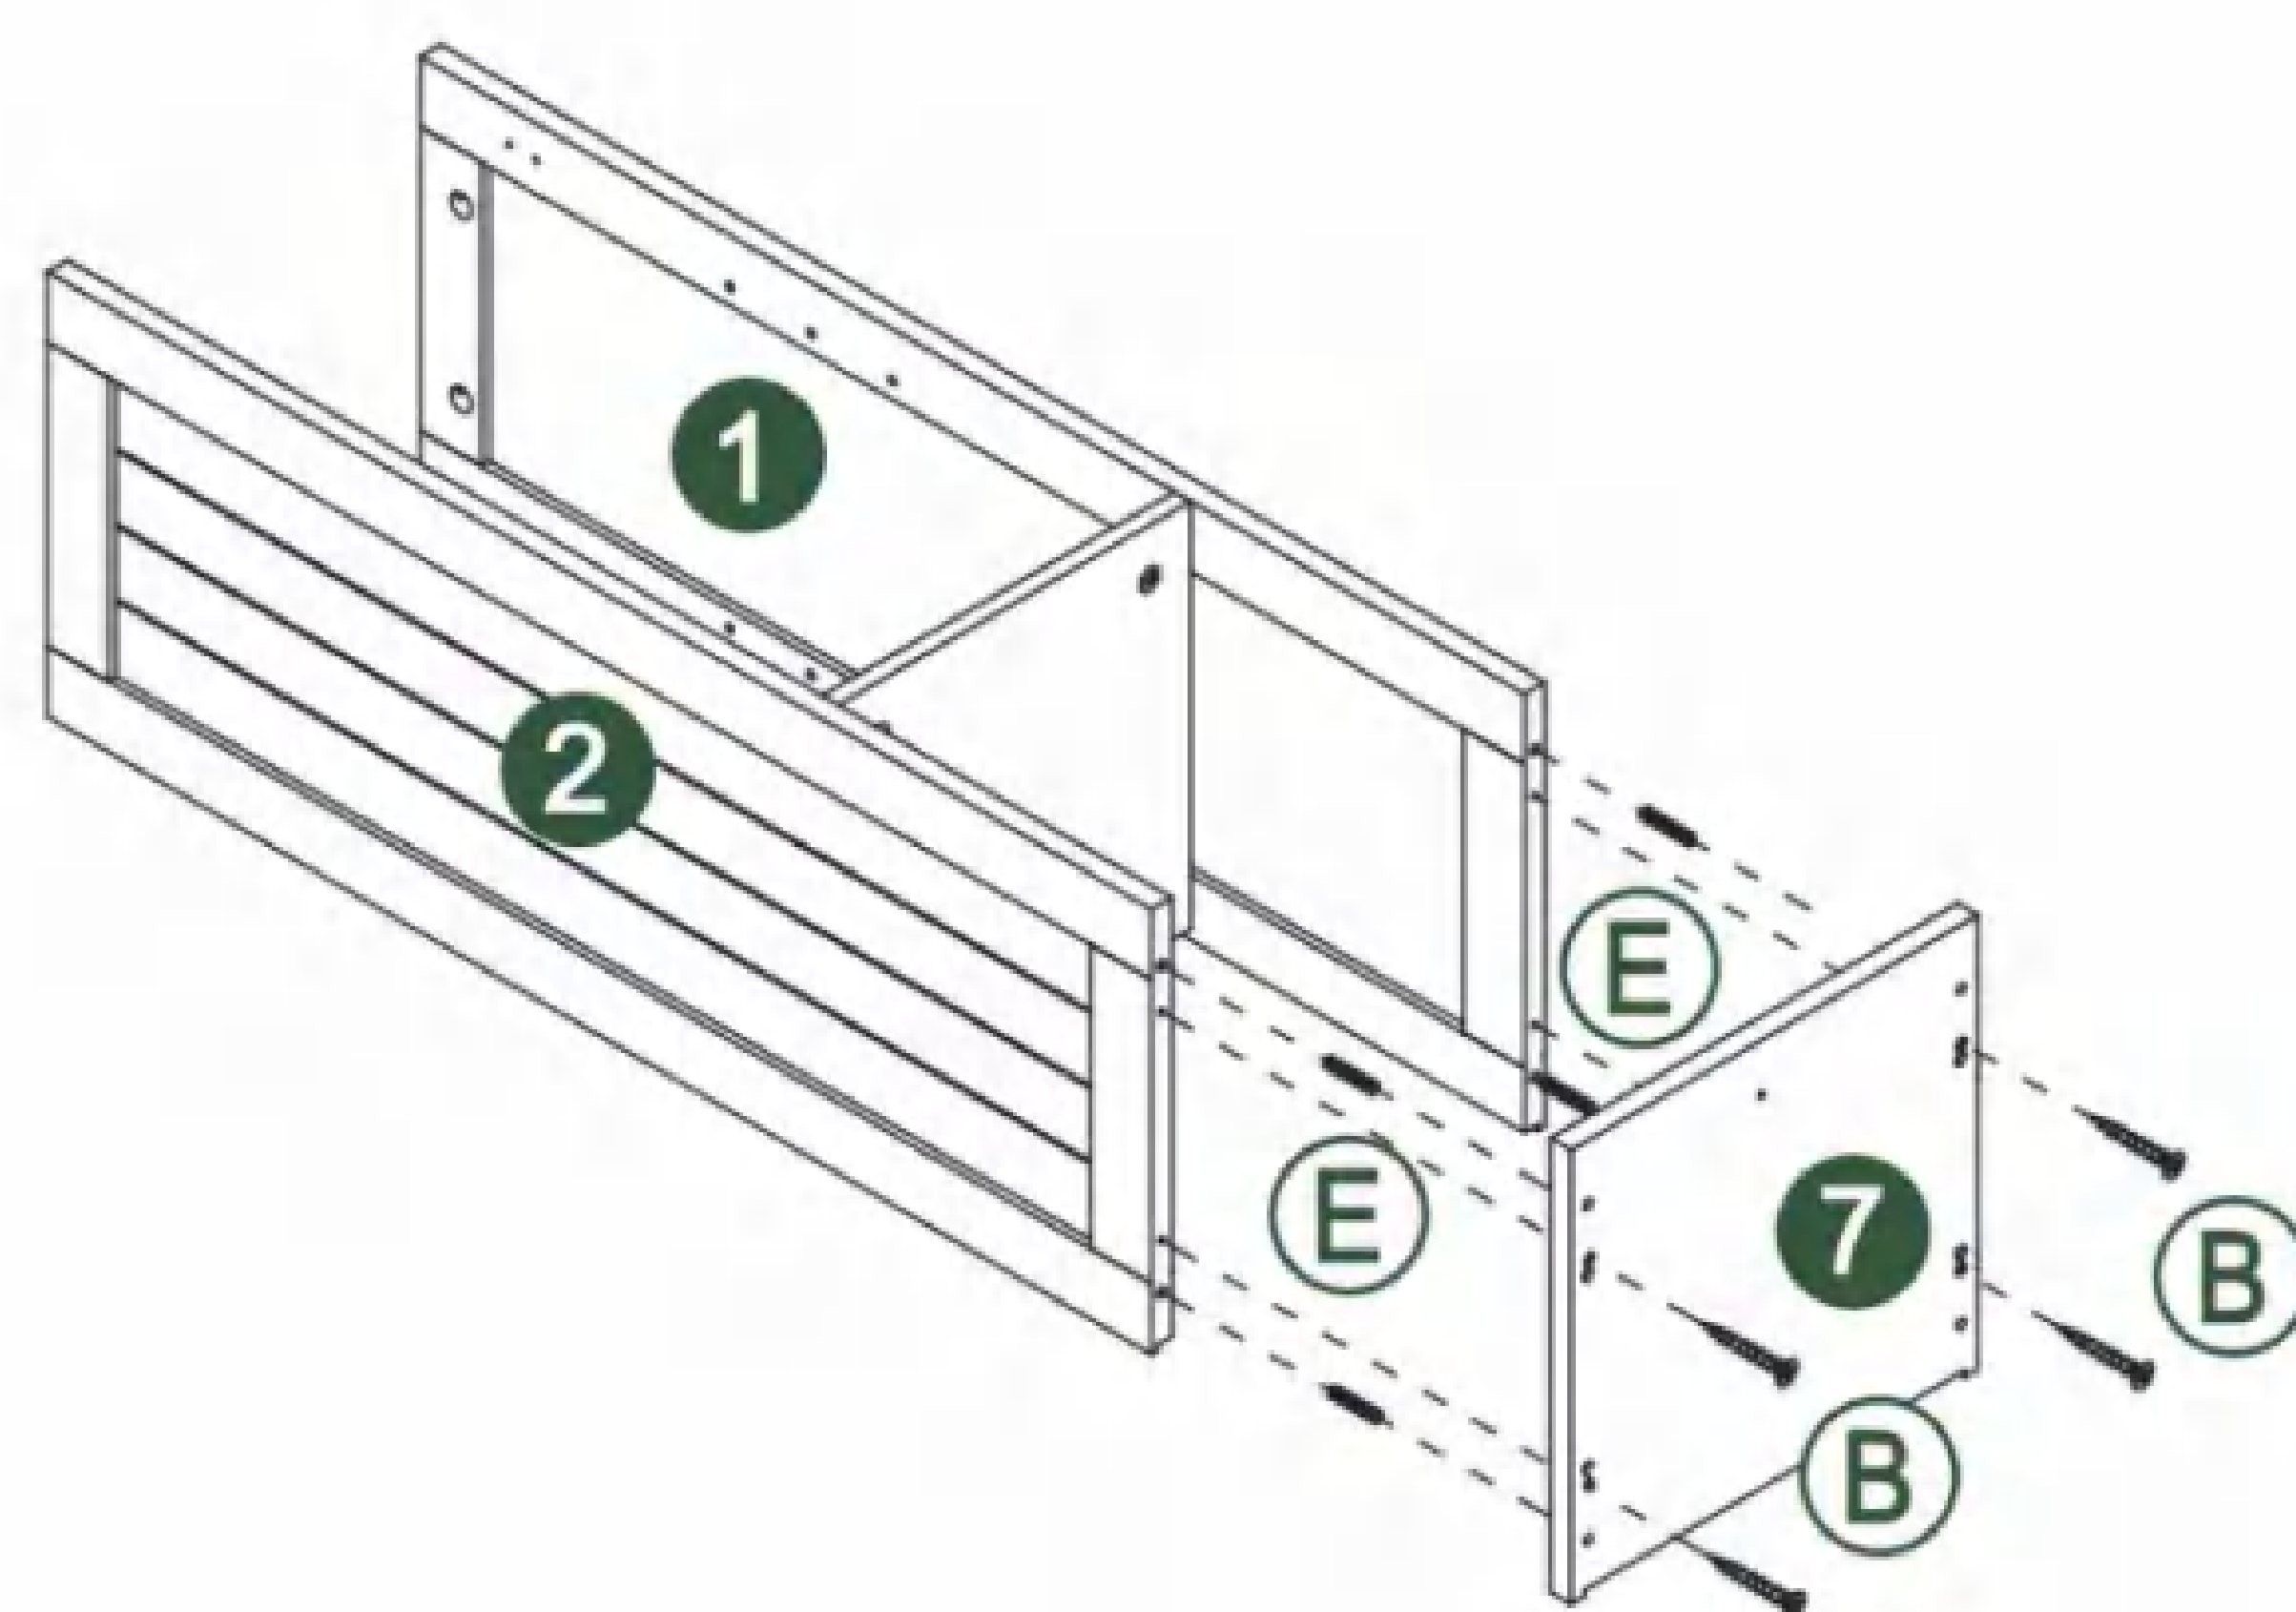


11.

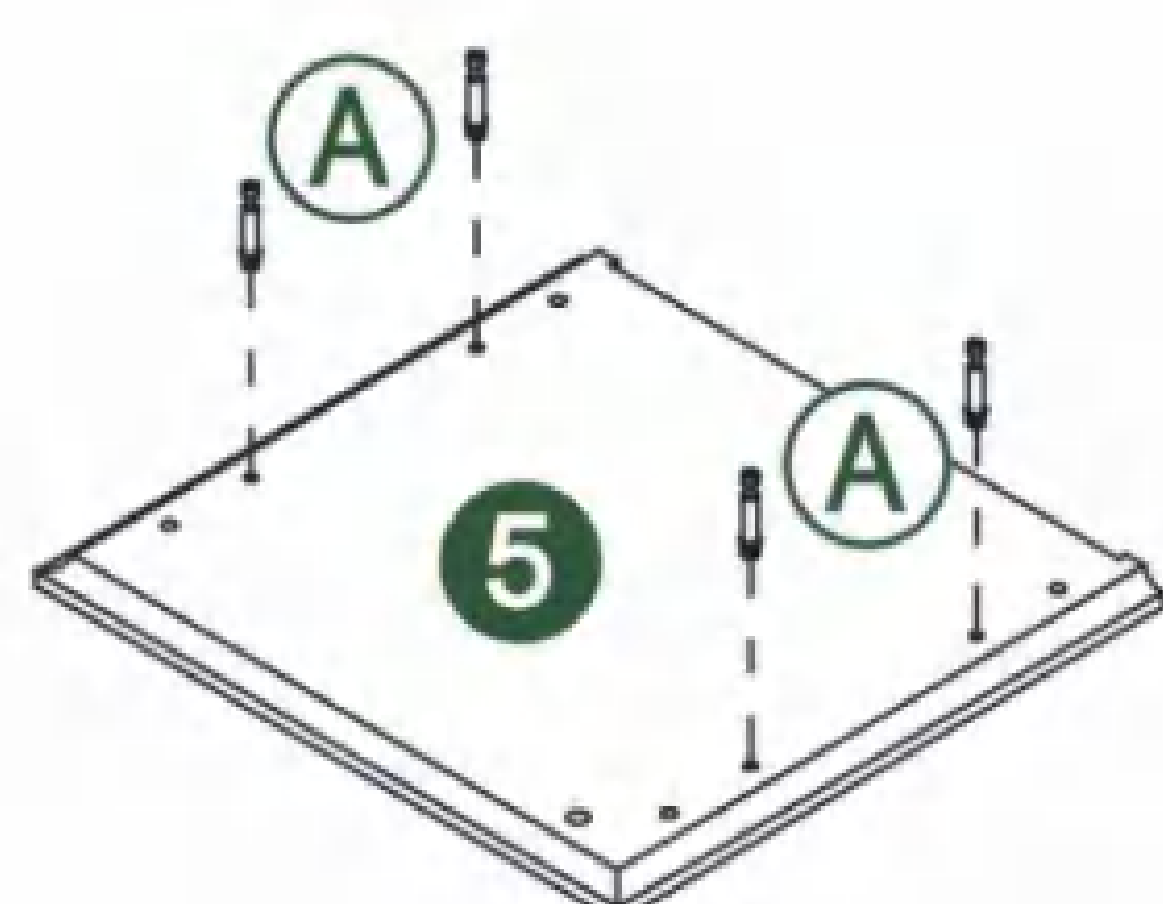


12.

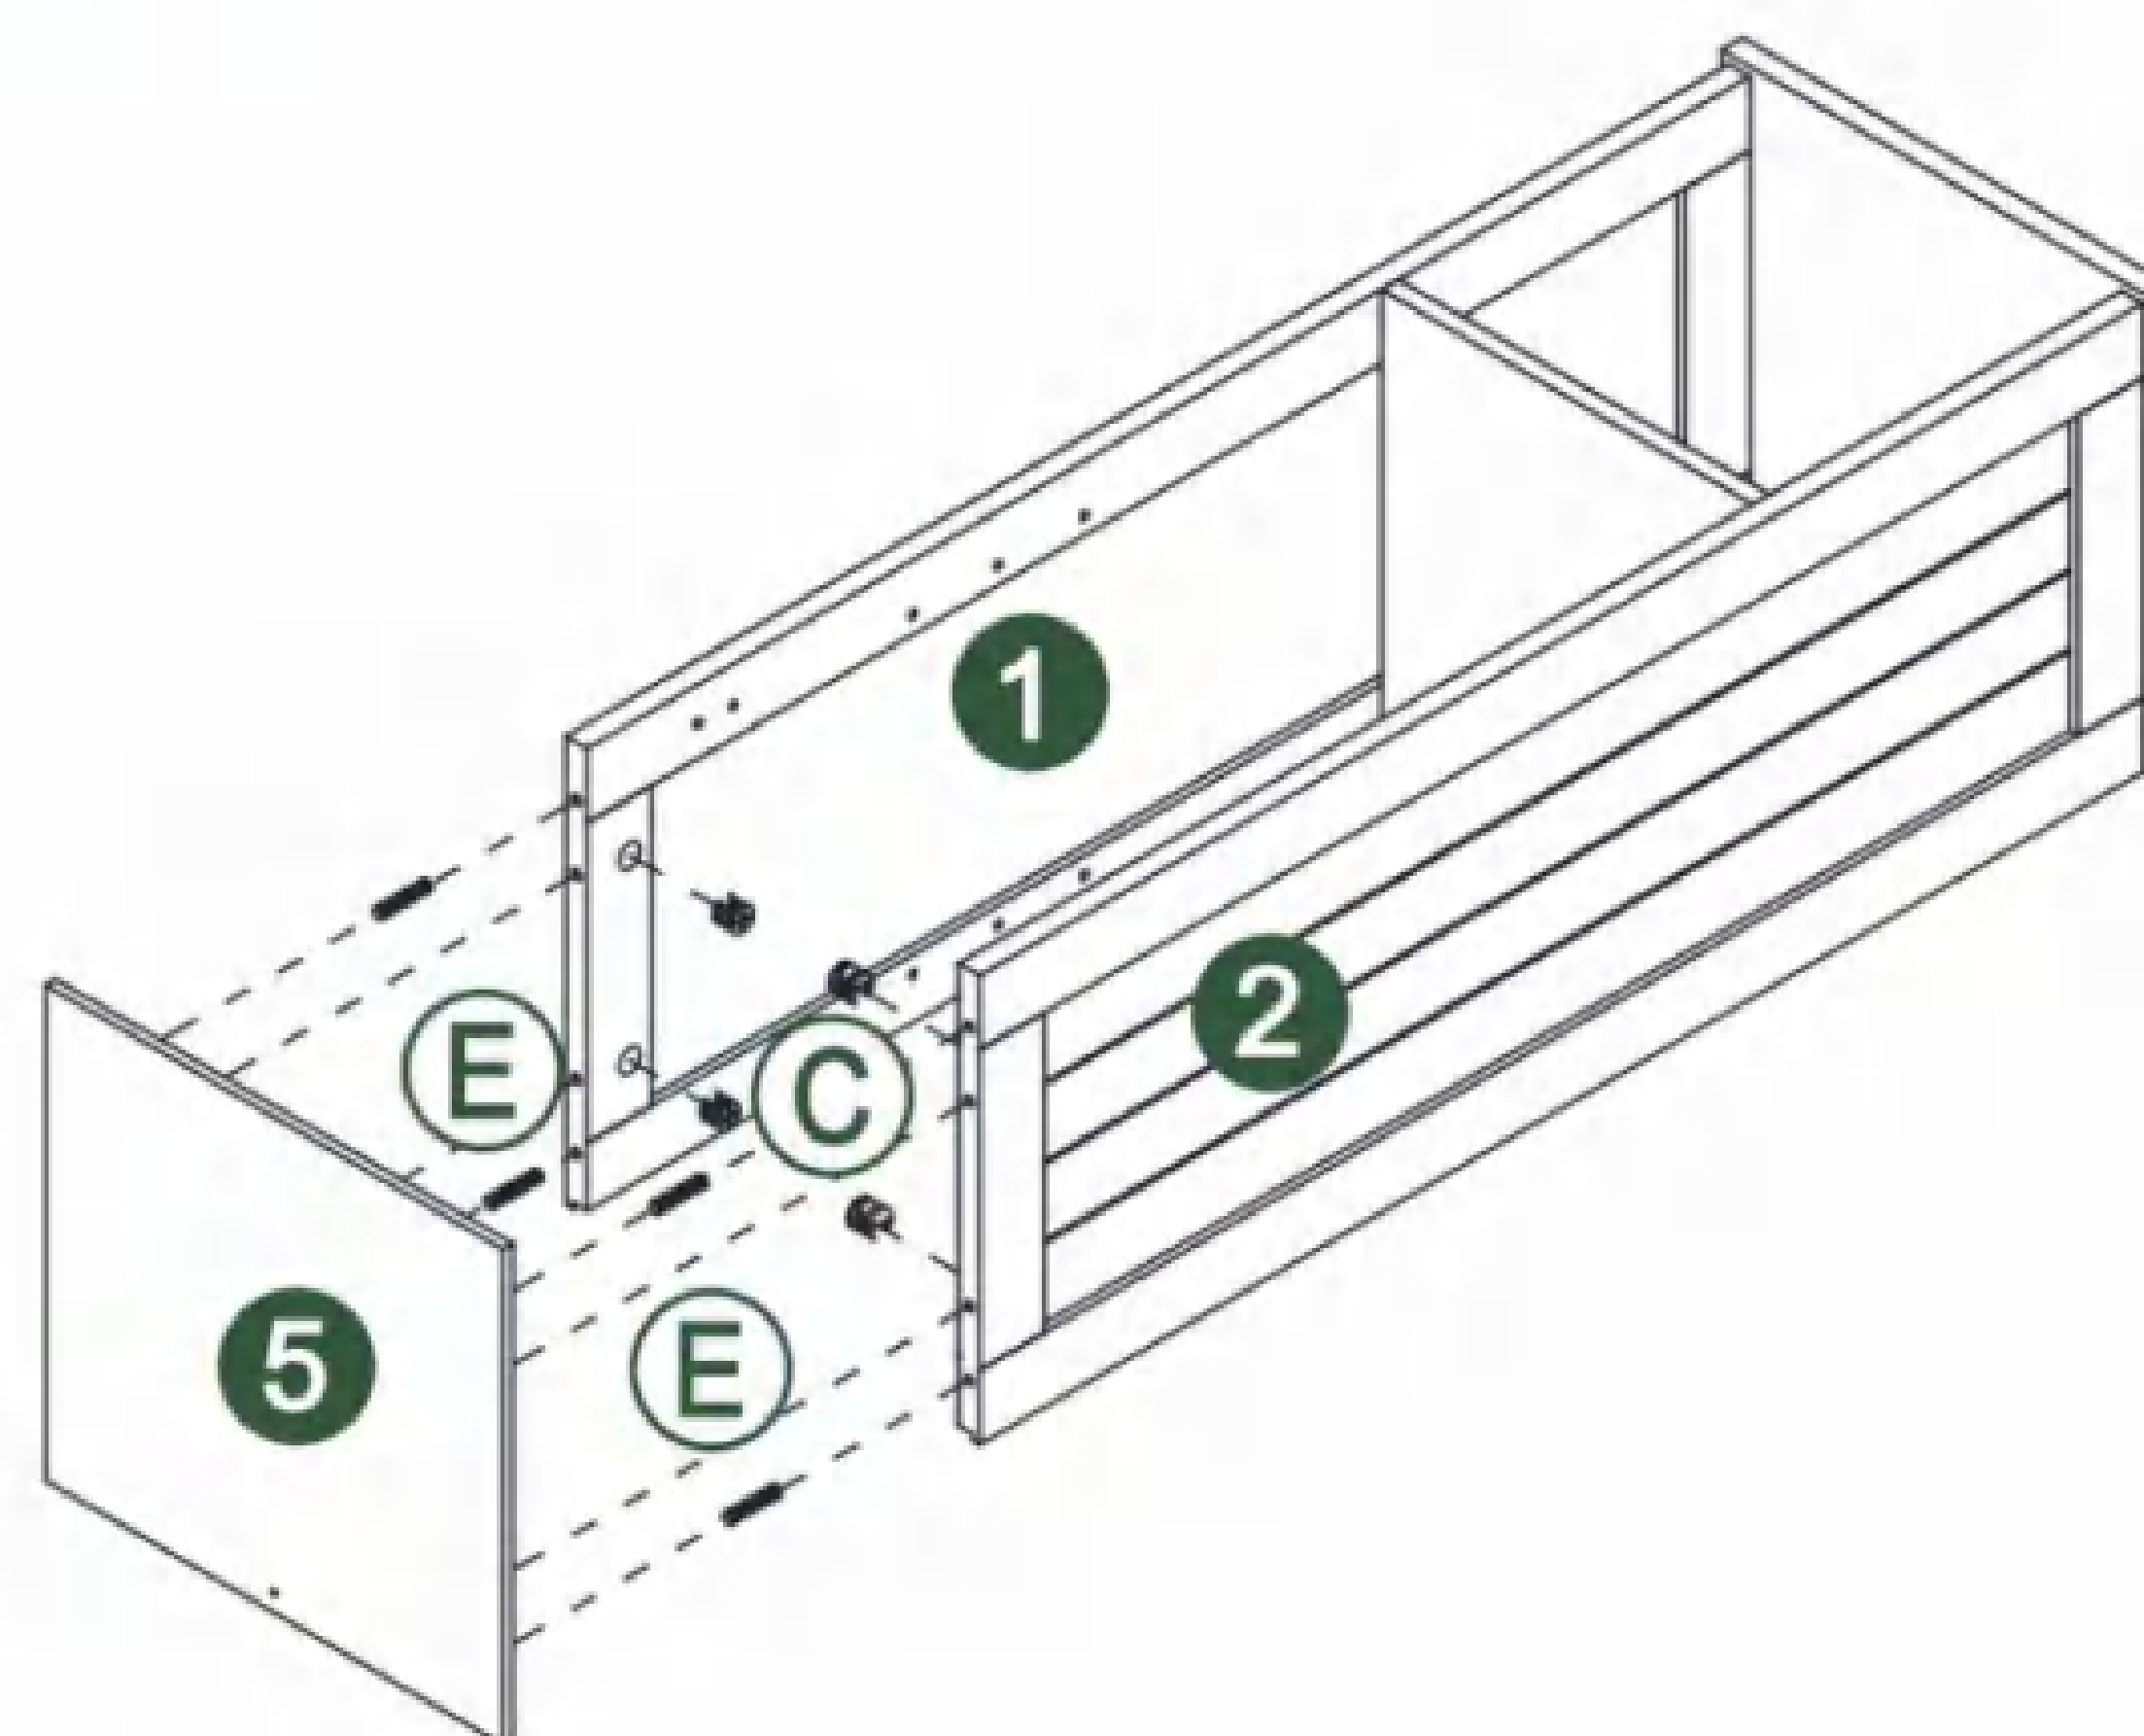


13.

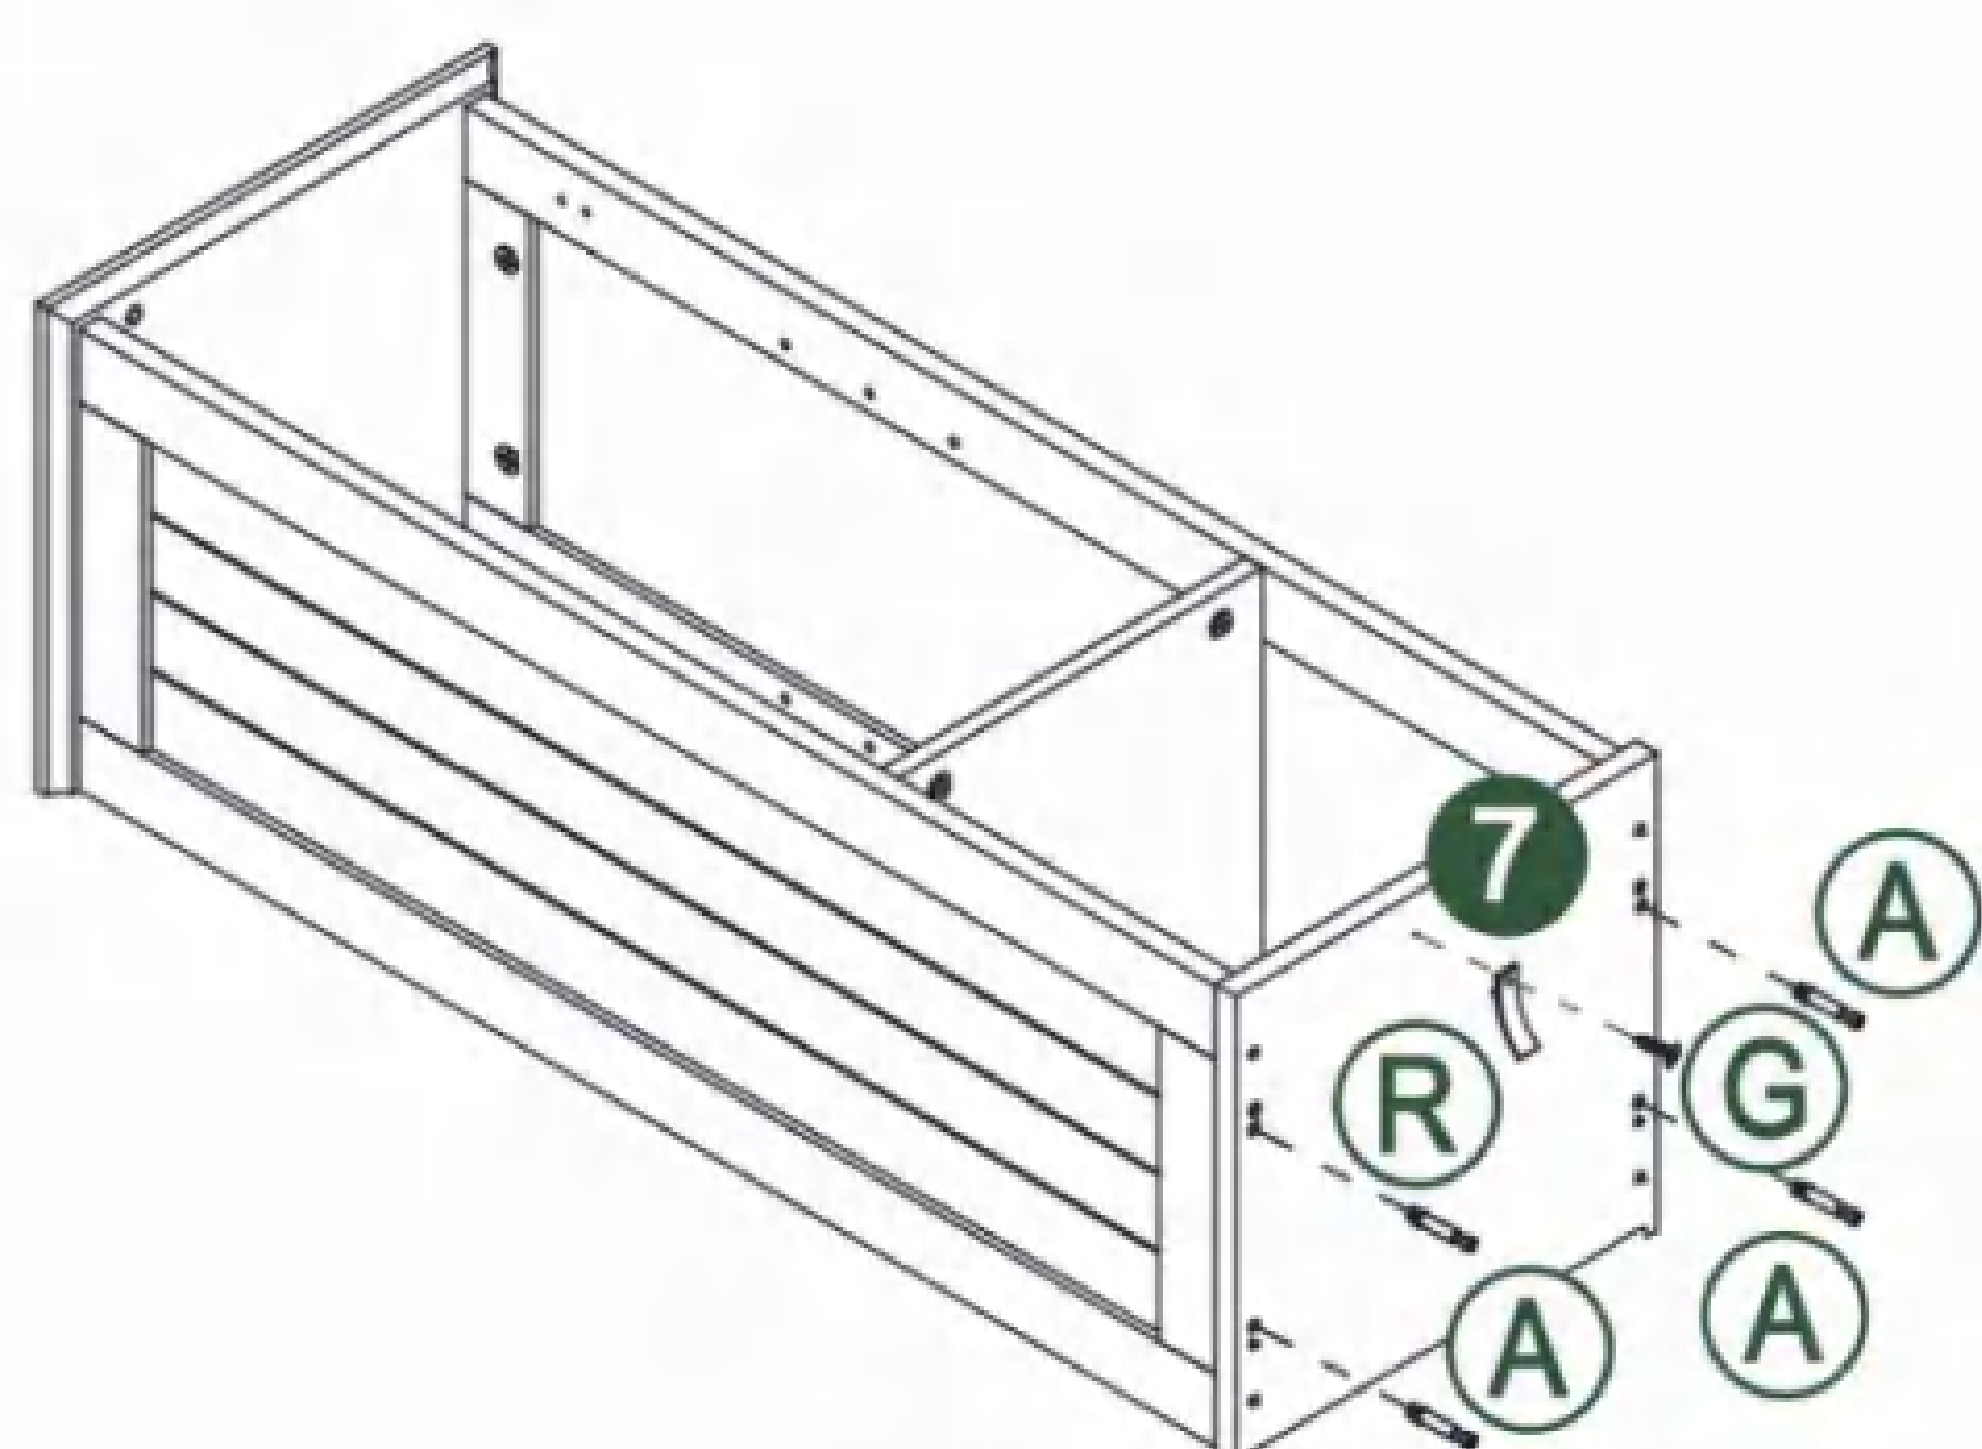


14.

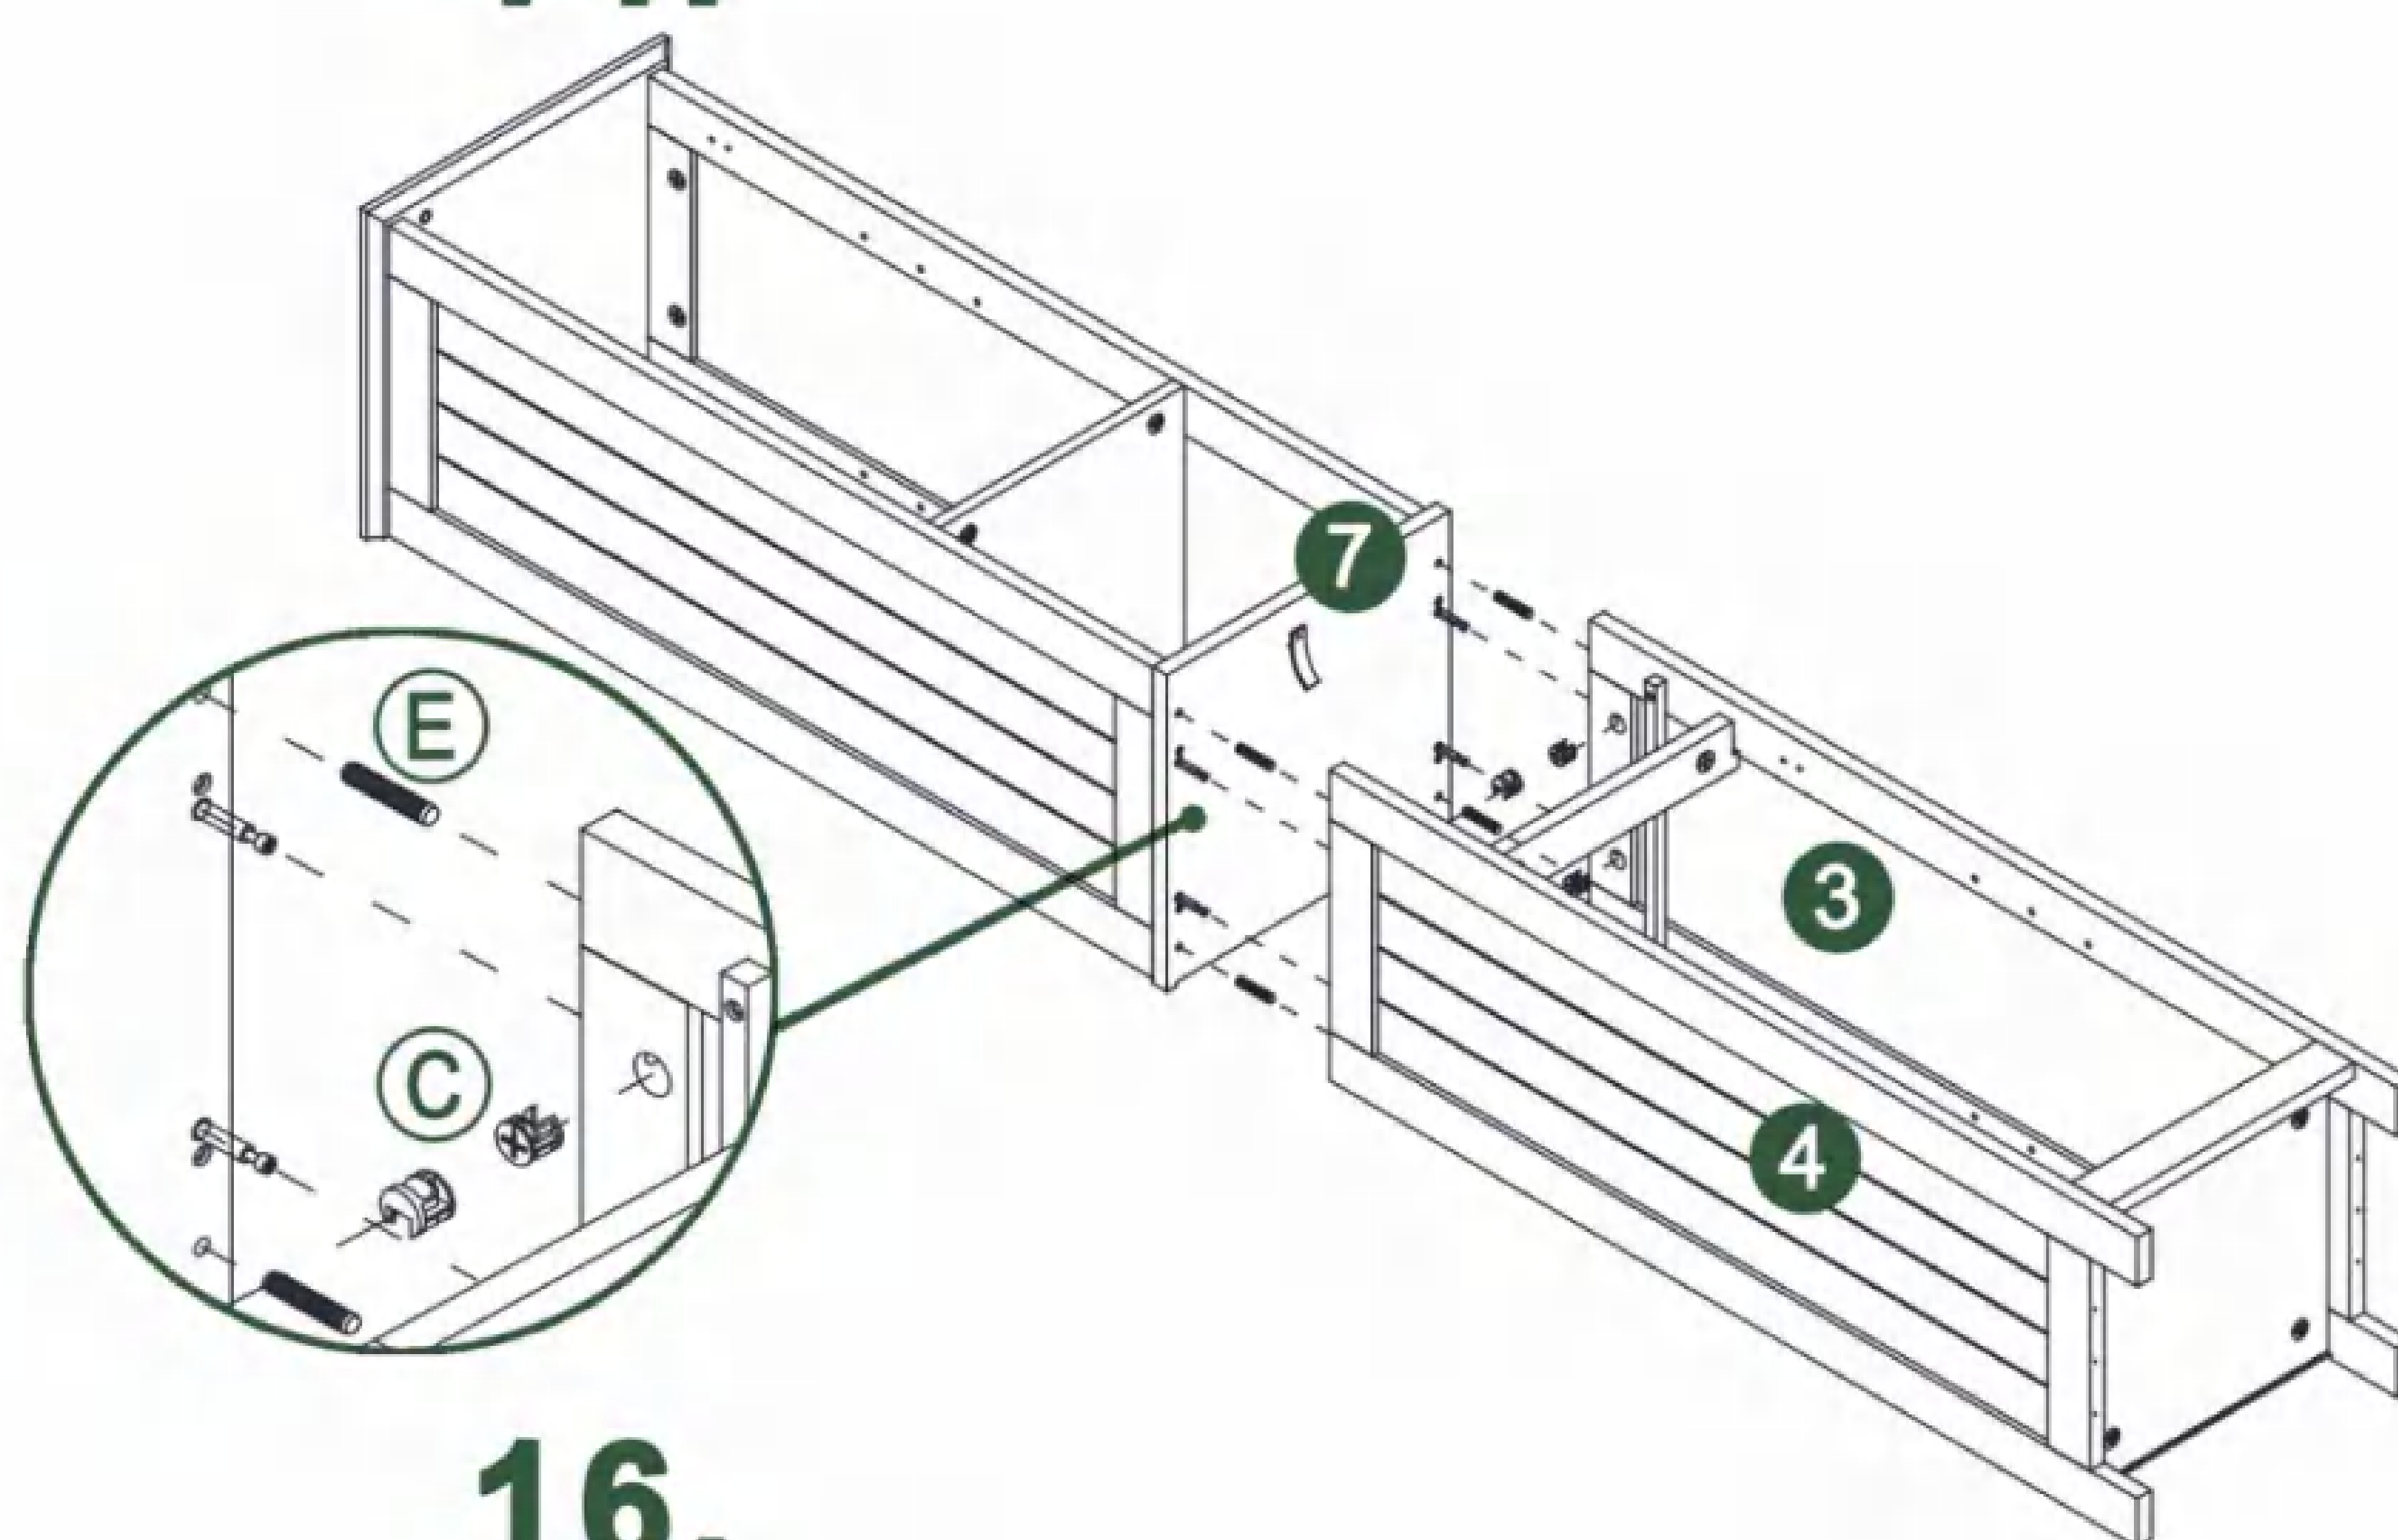


15.

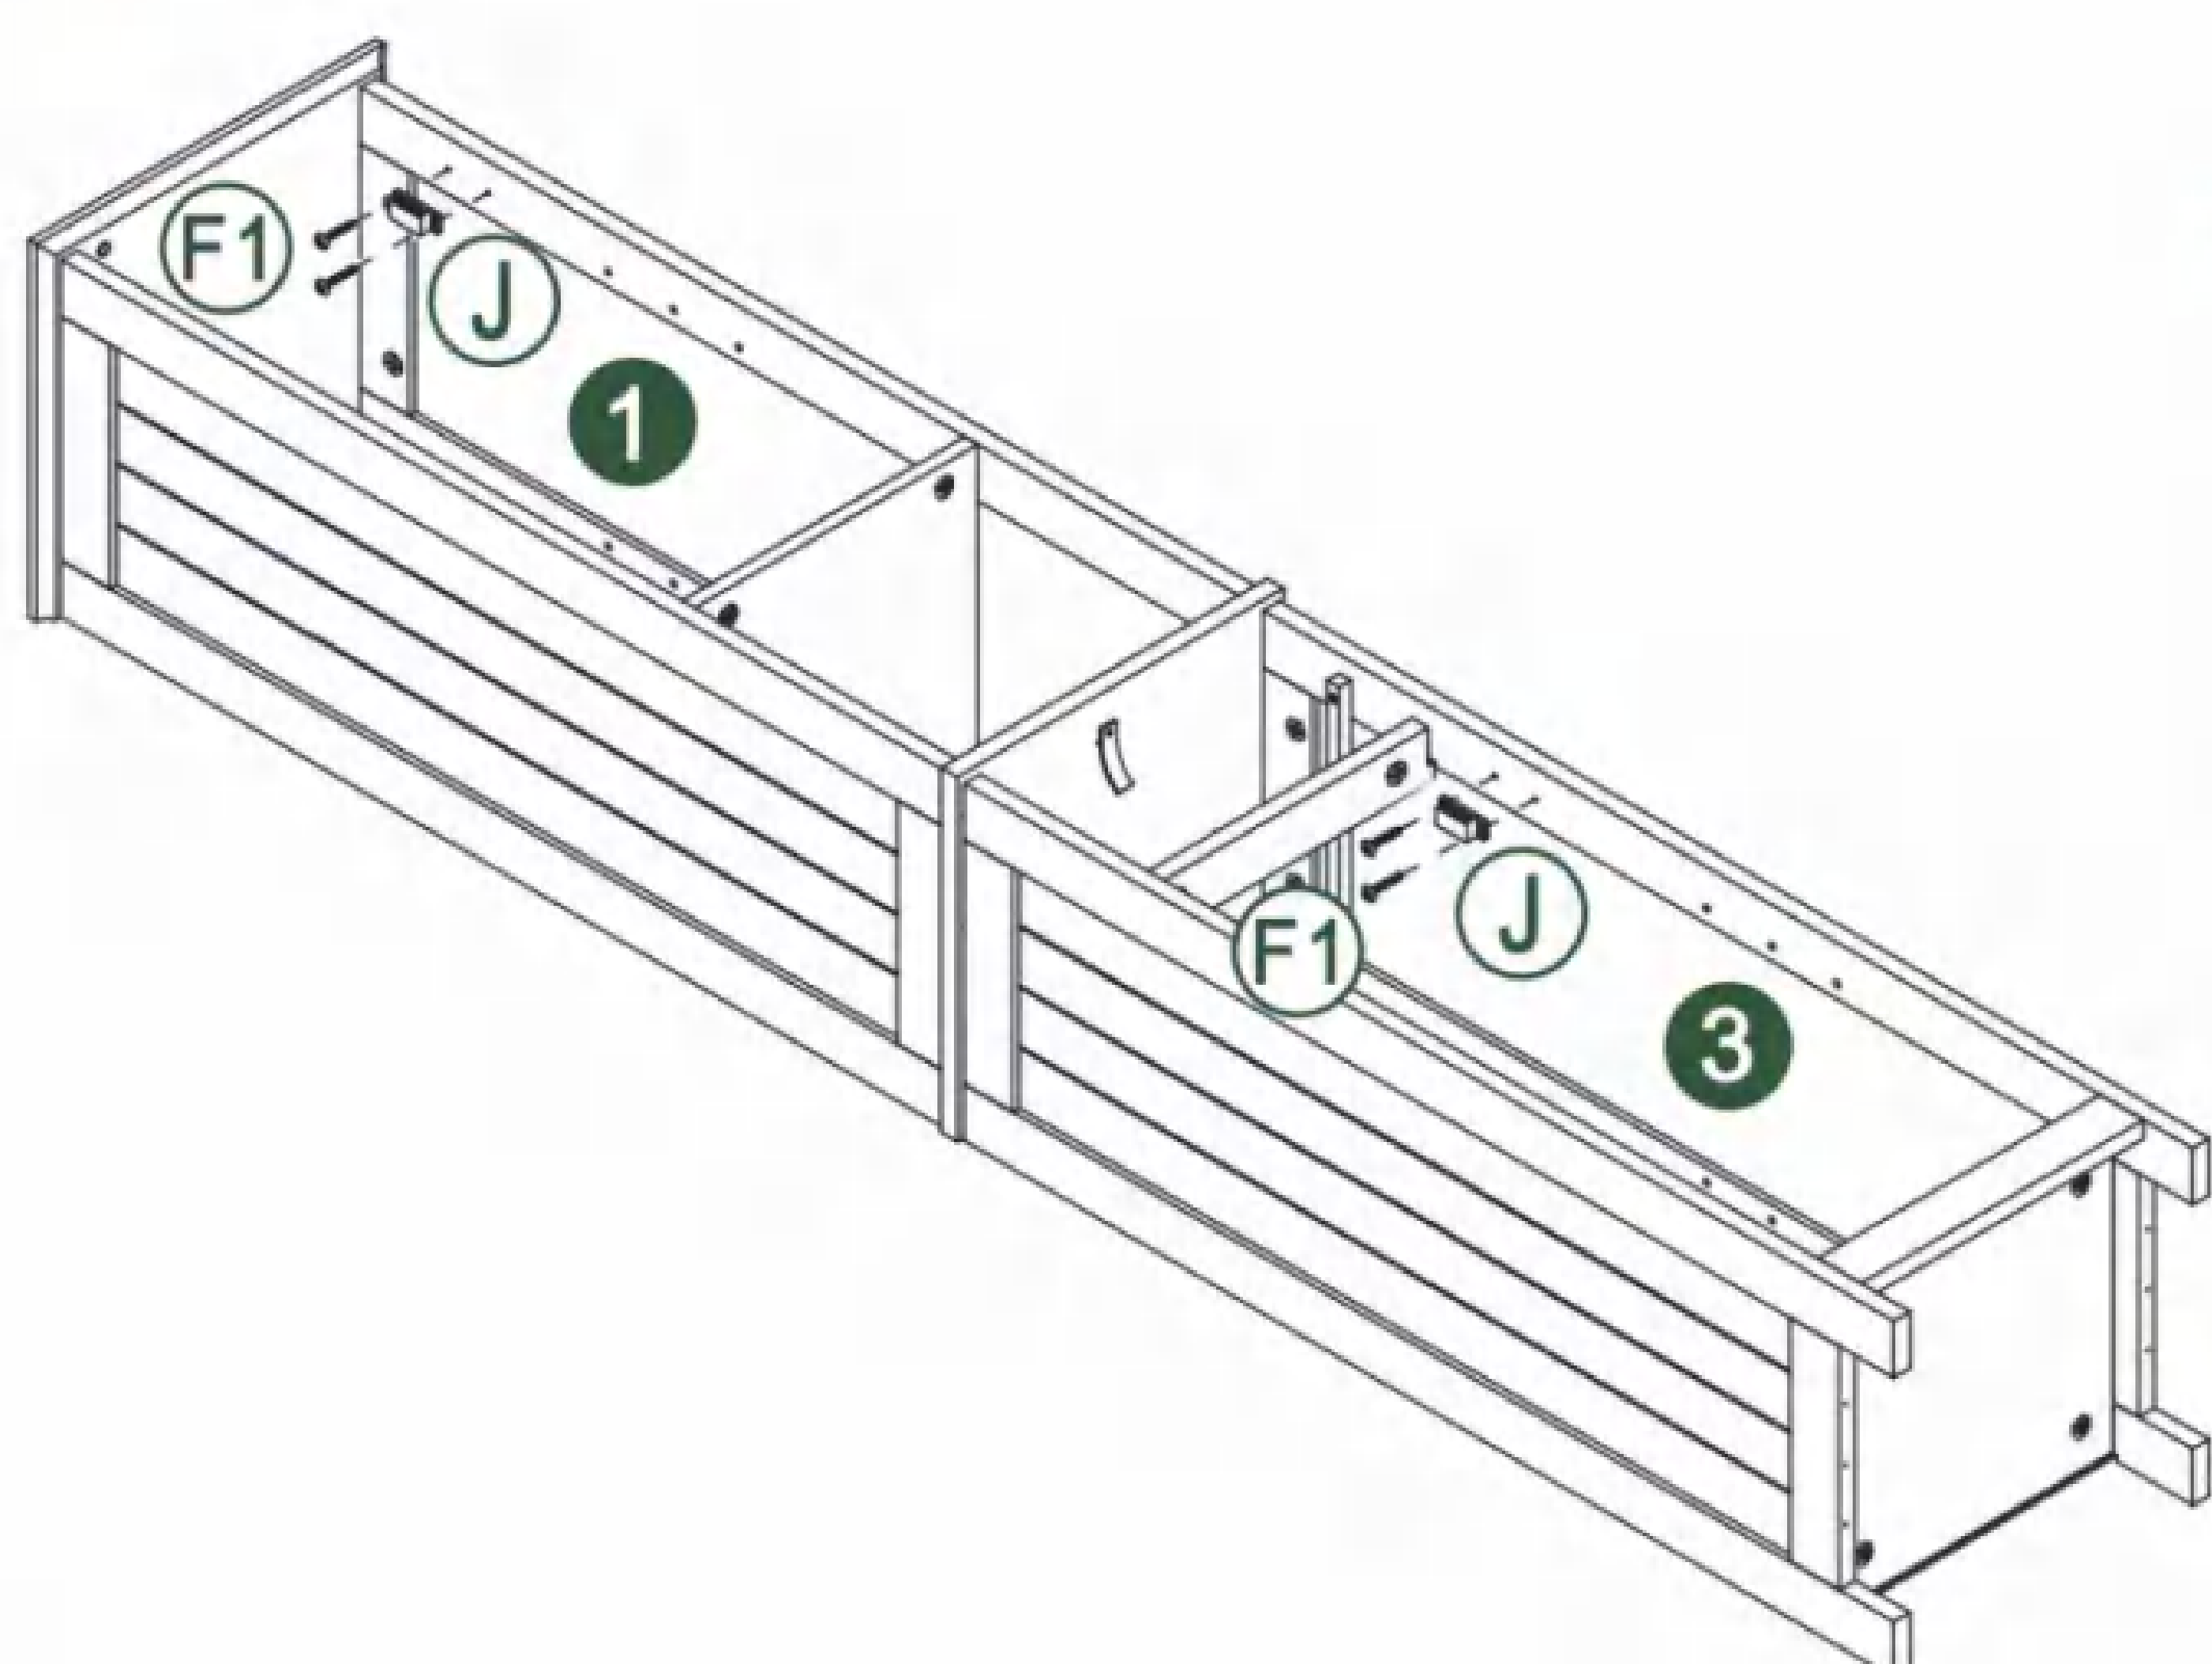


16.

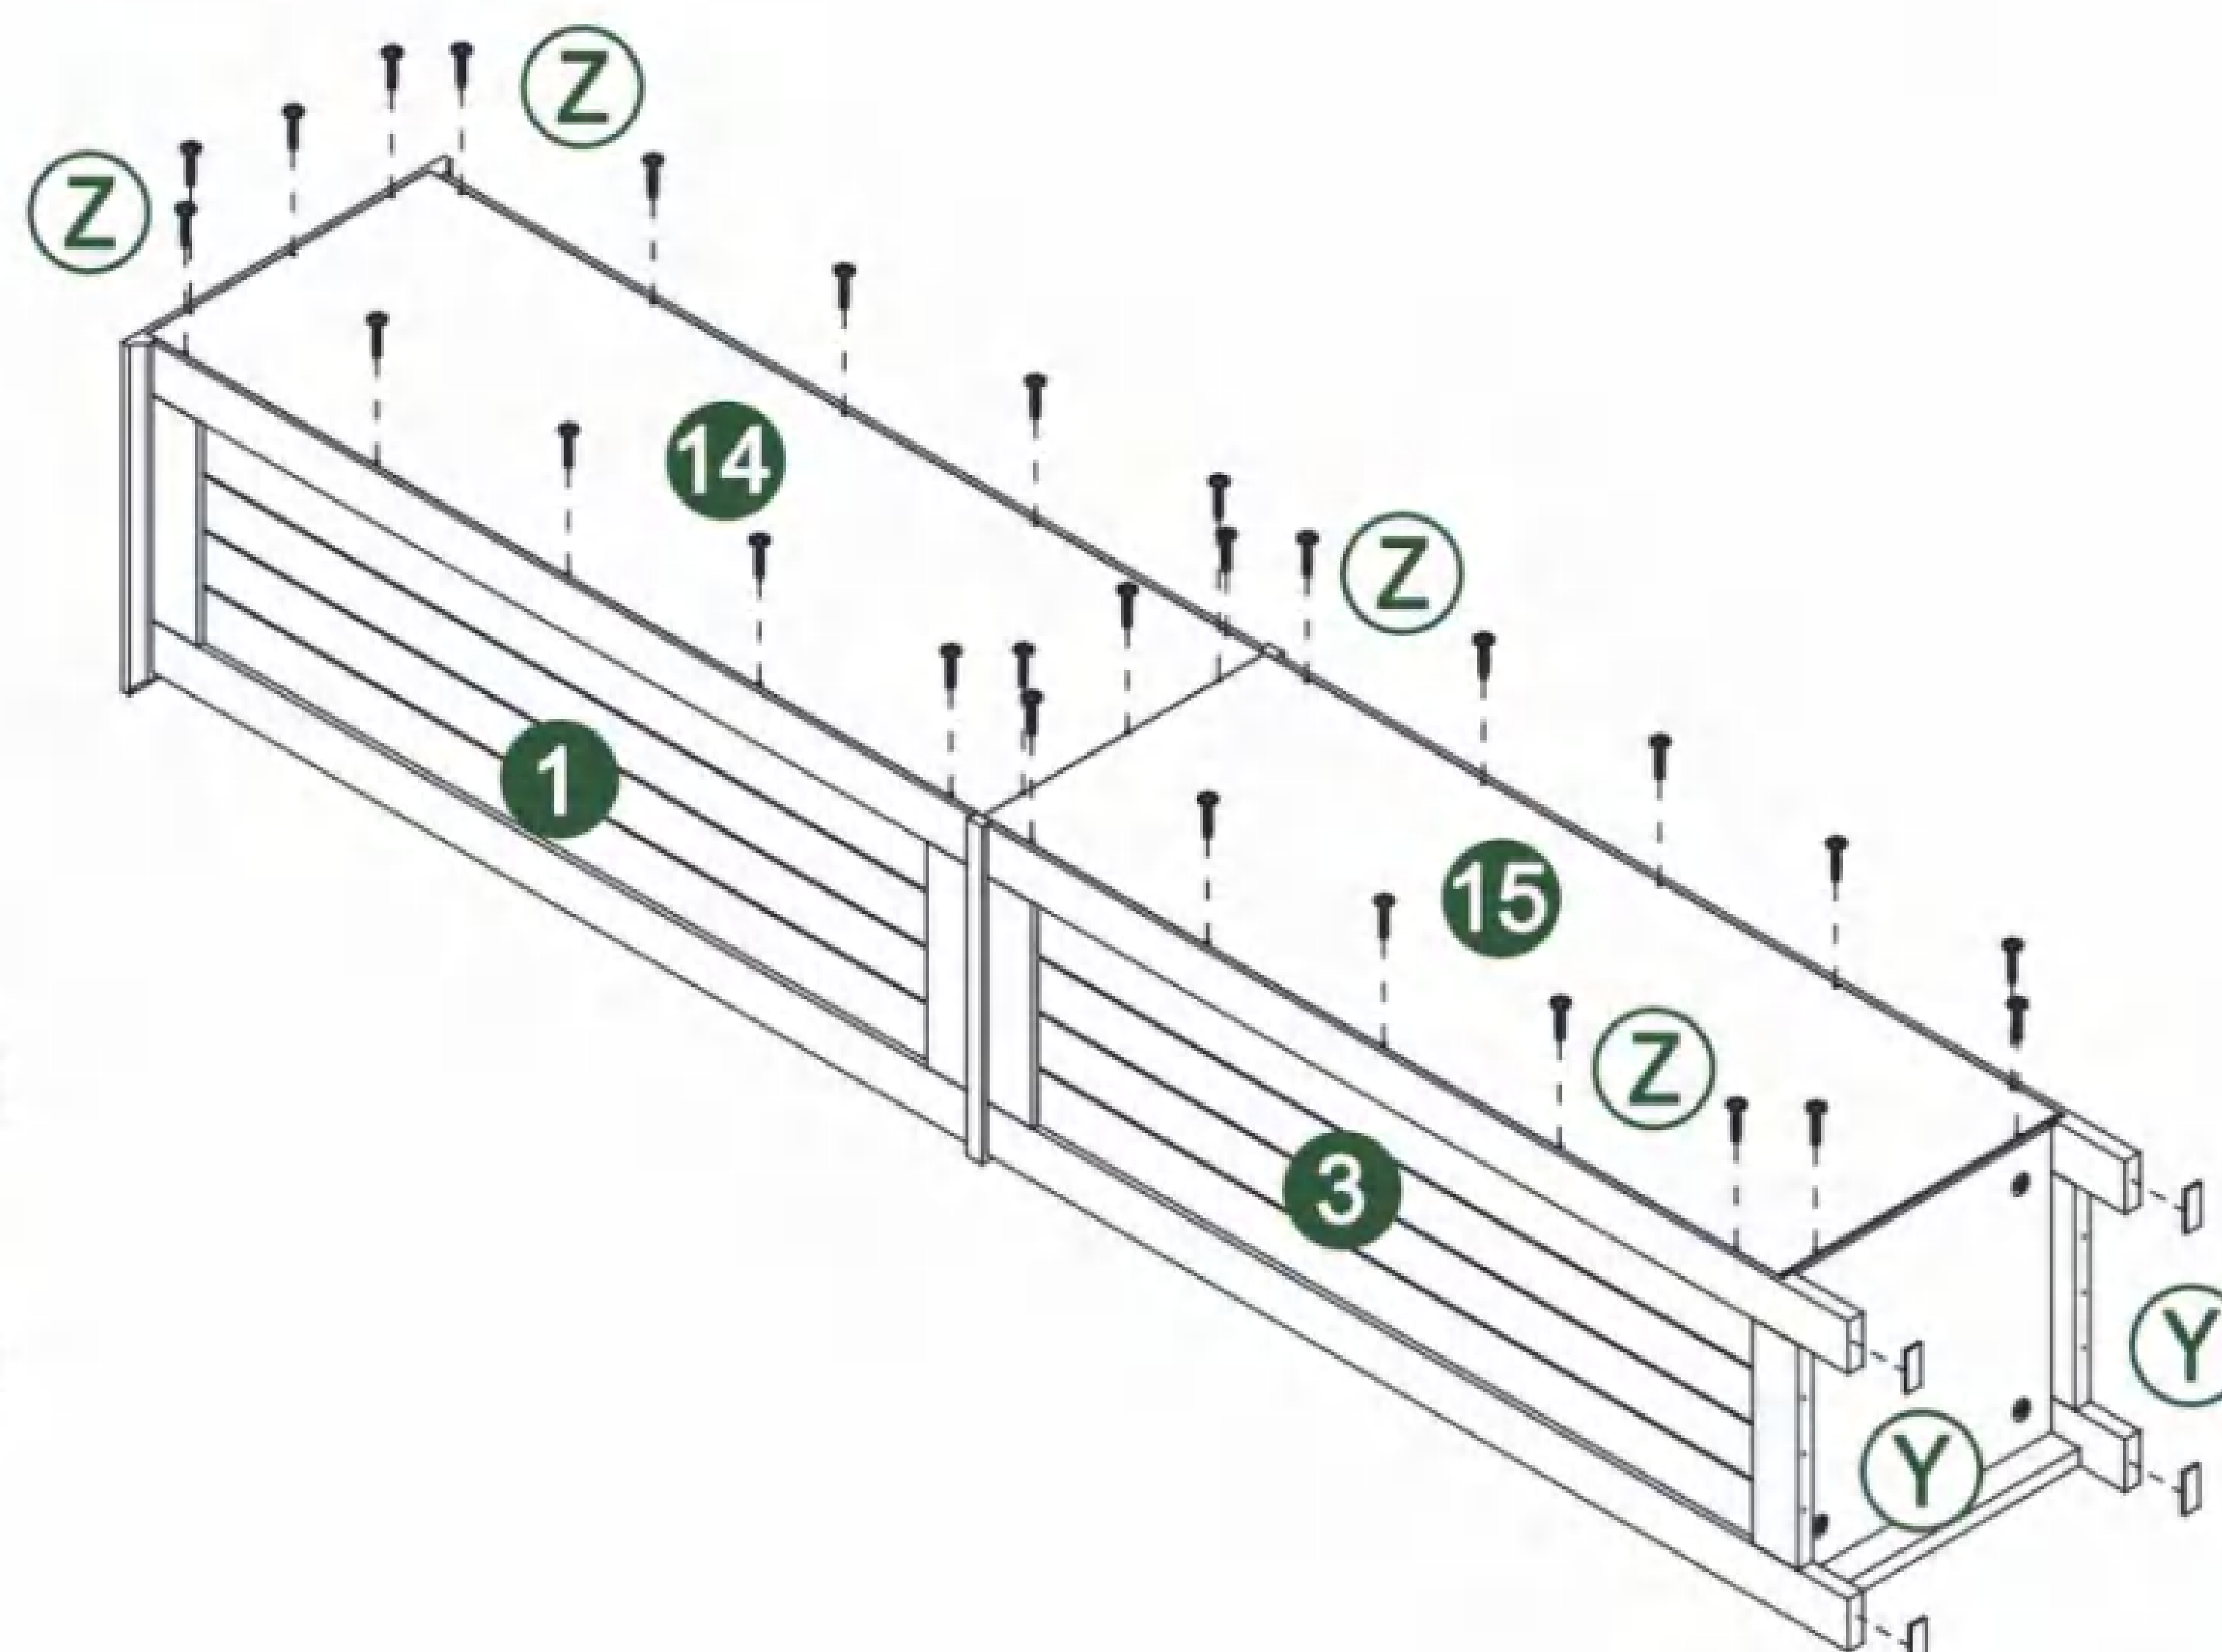


17.

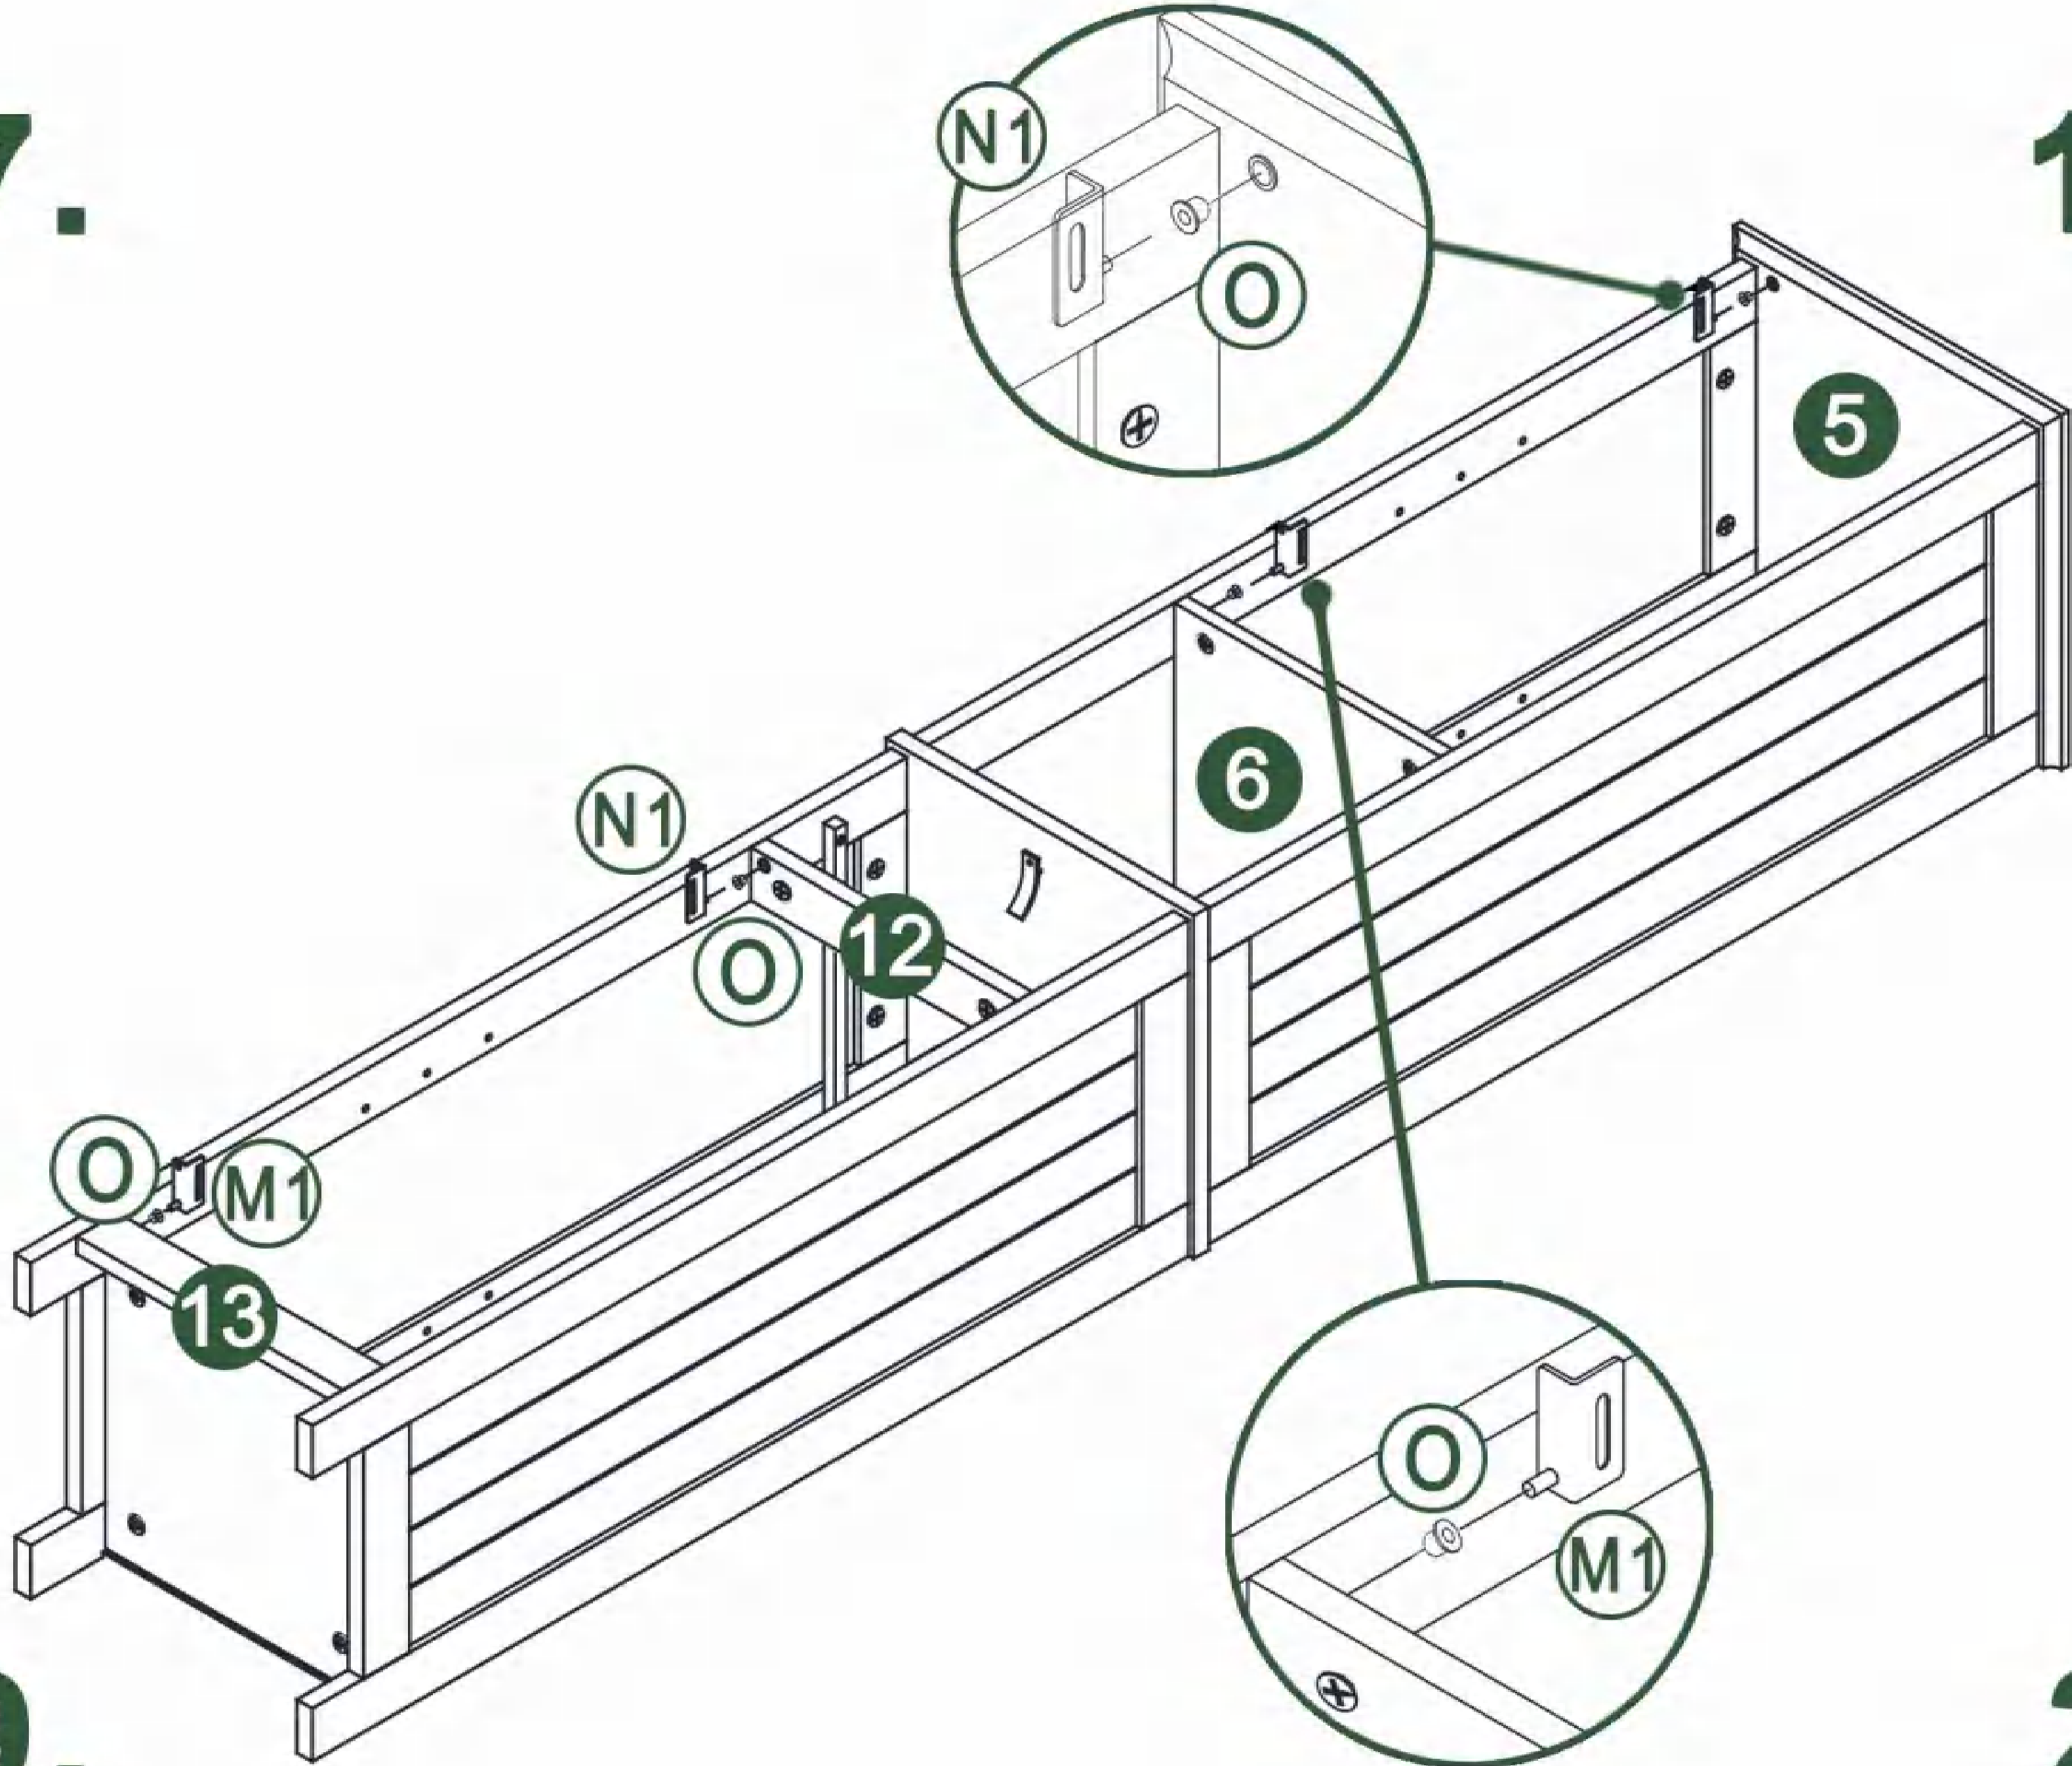


18.

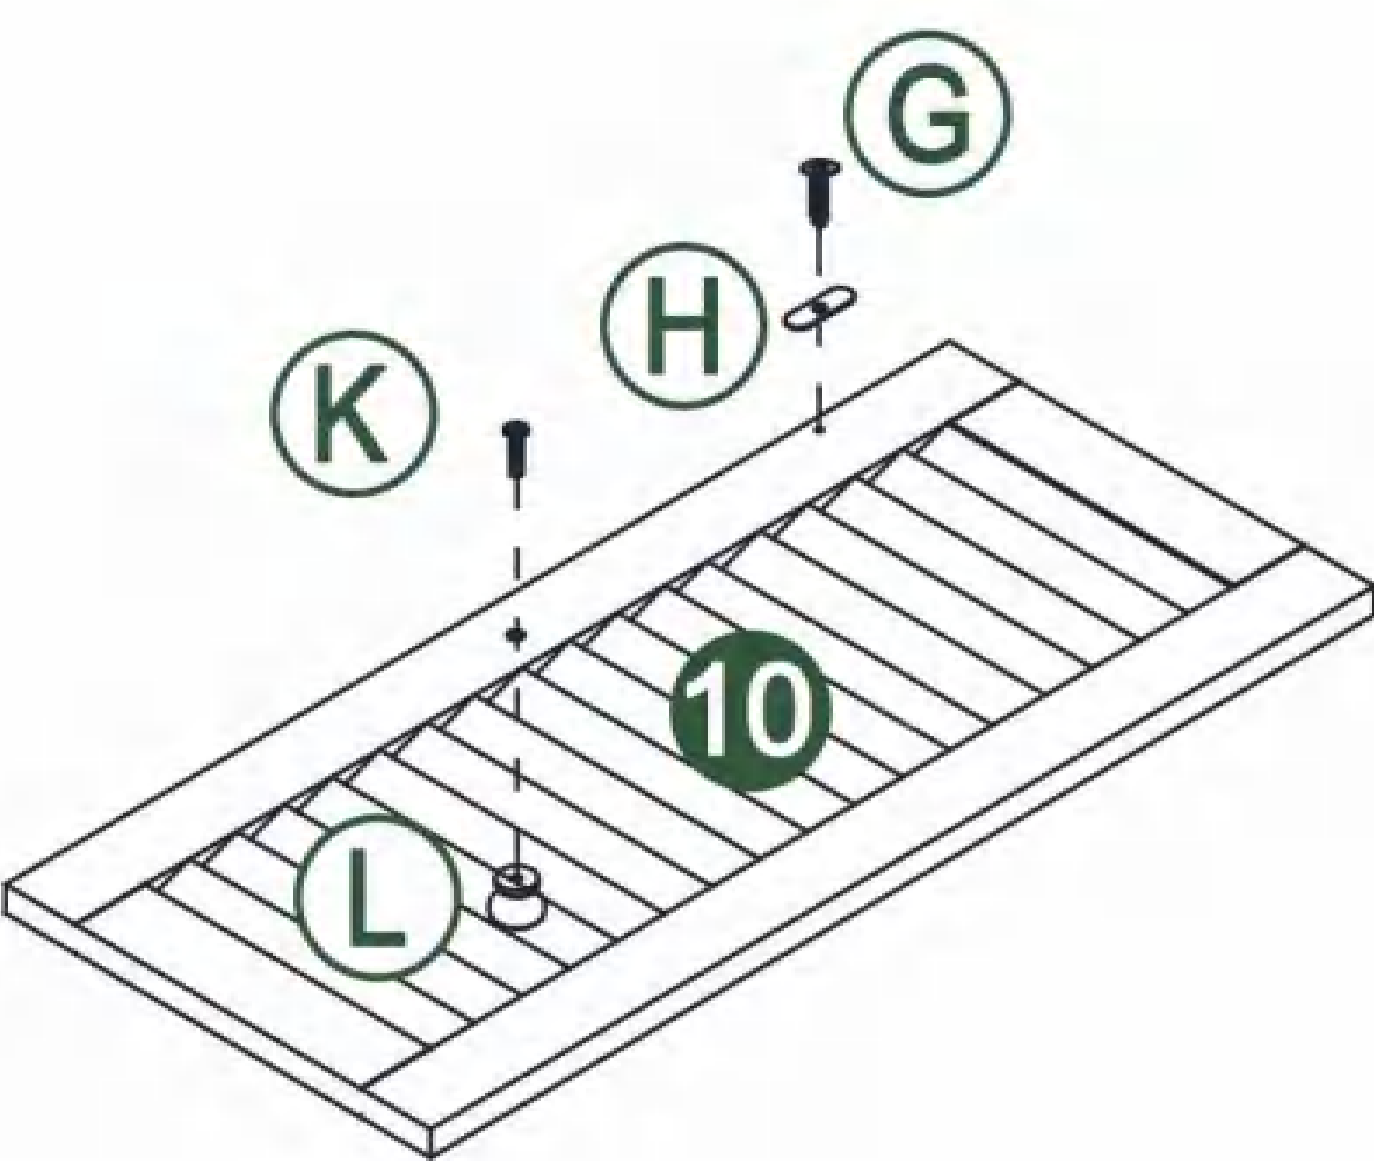


19.

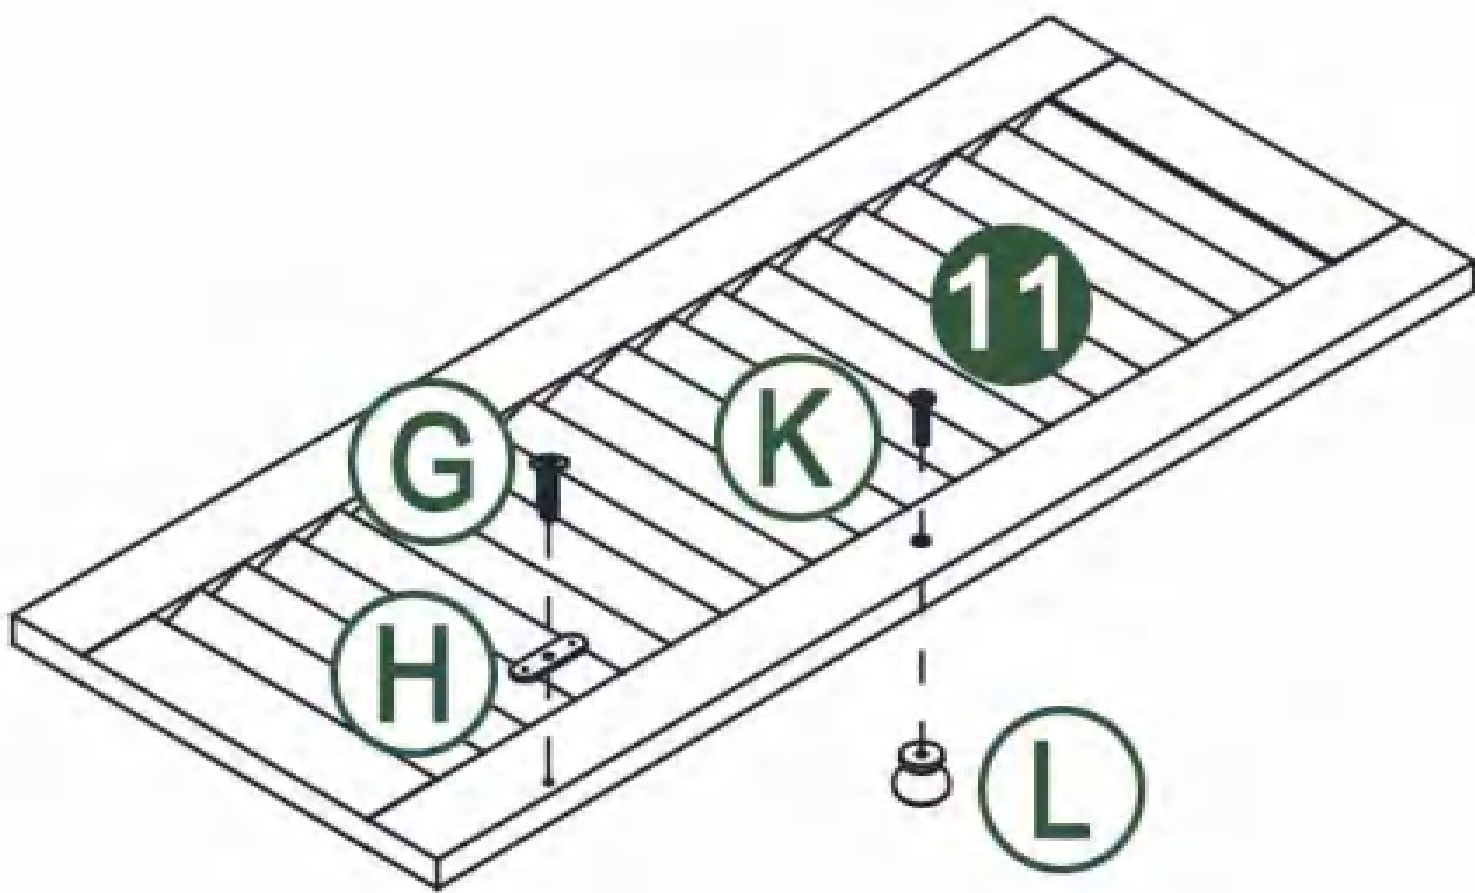


20.

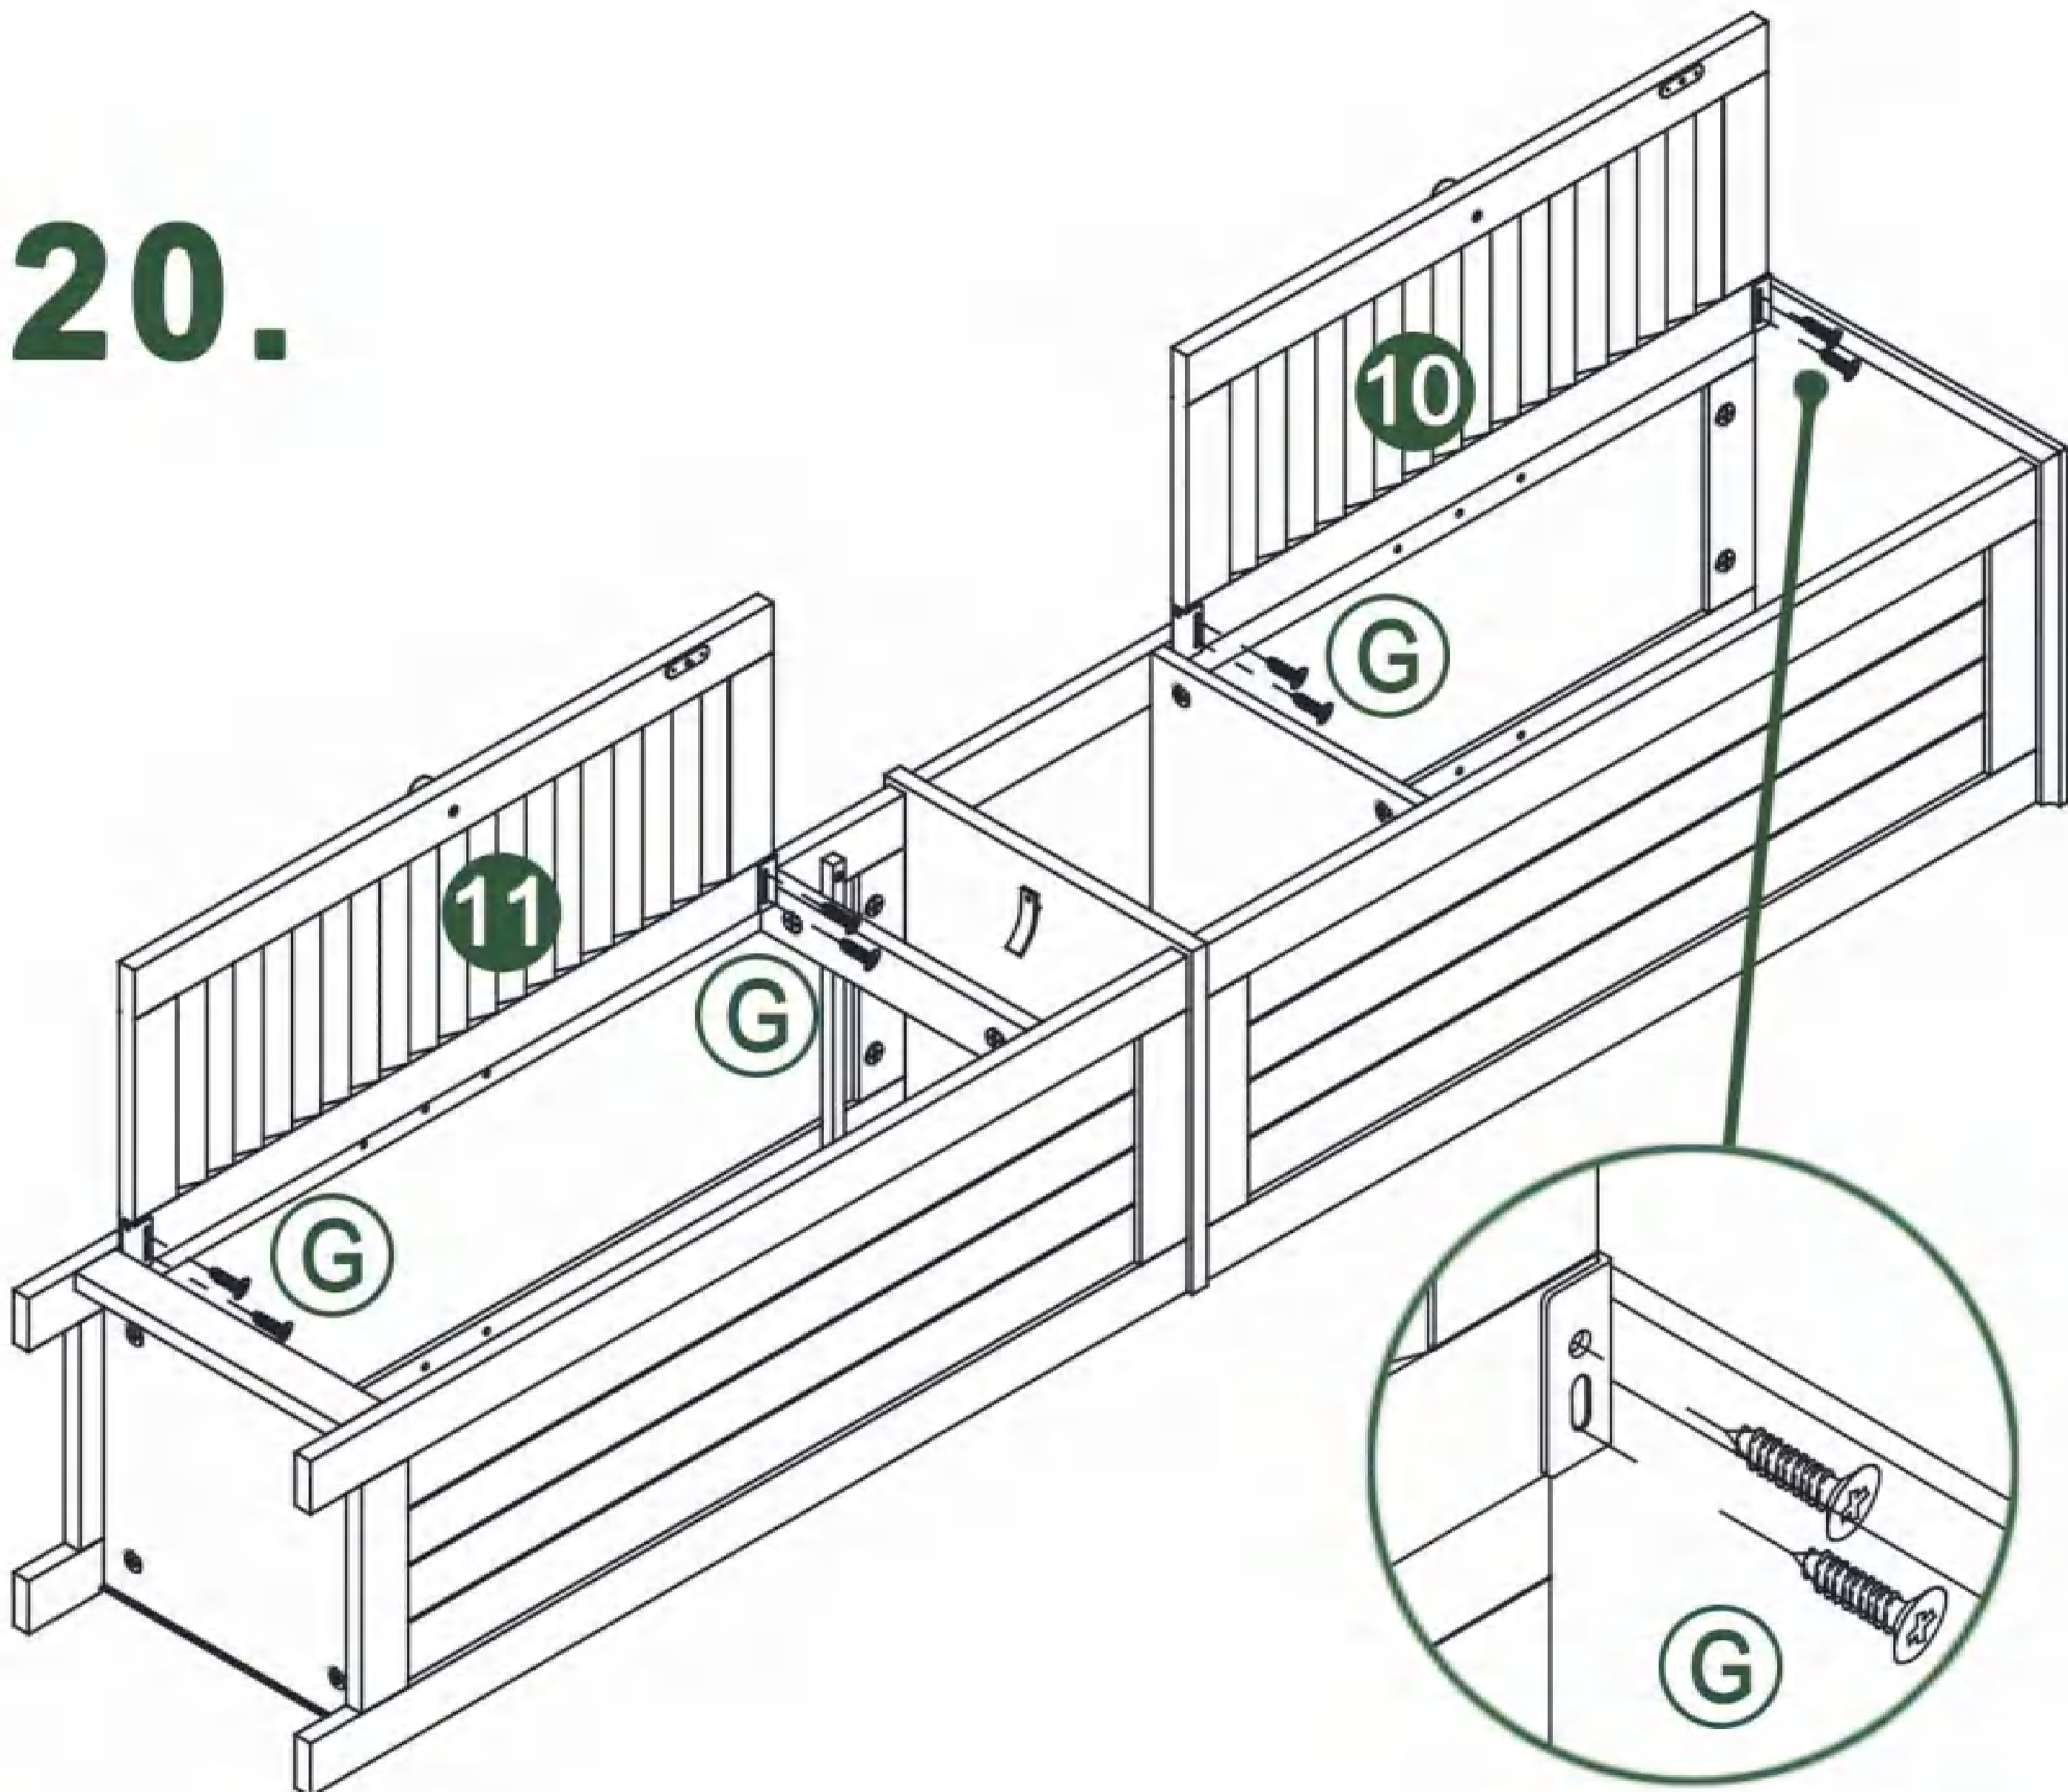


21.

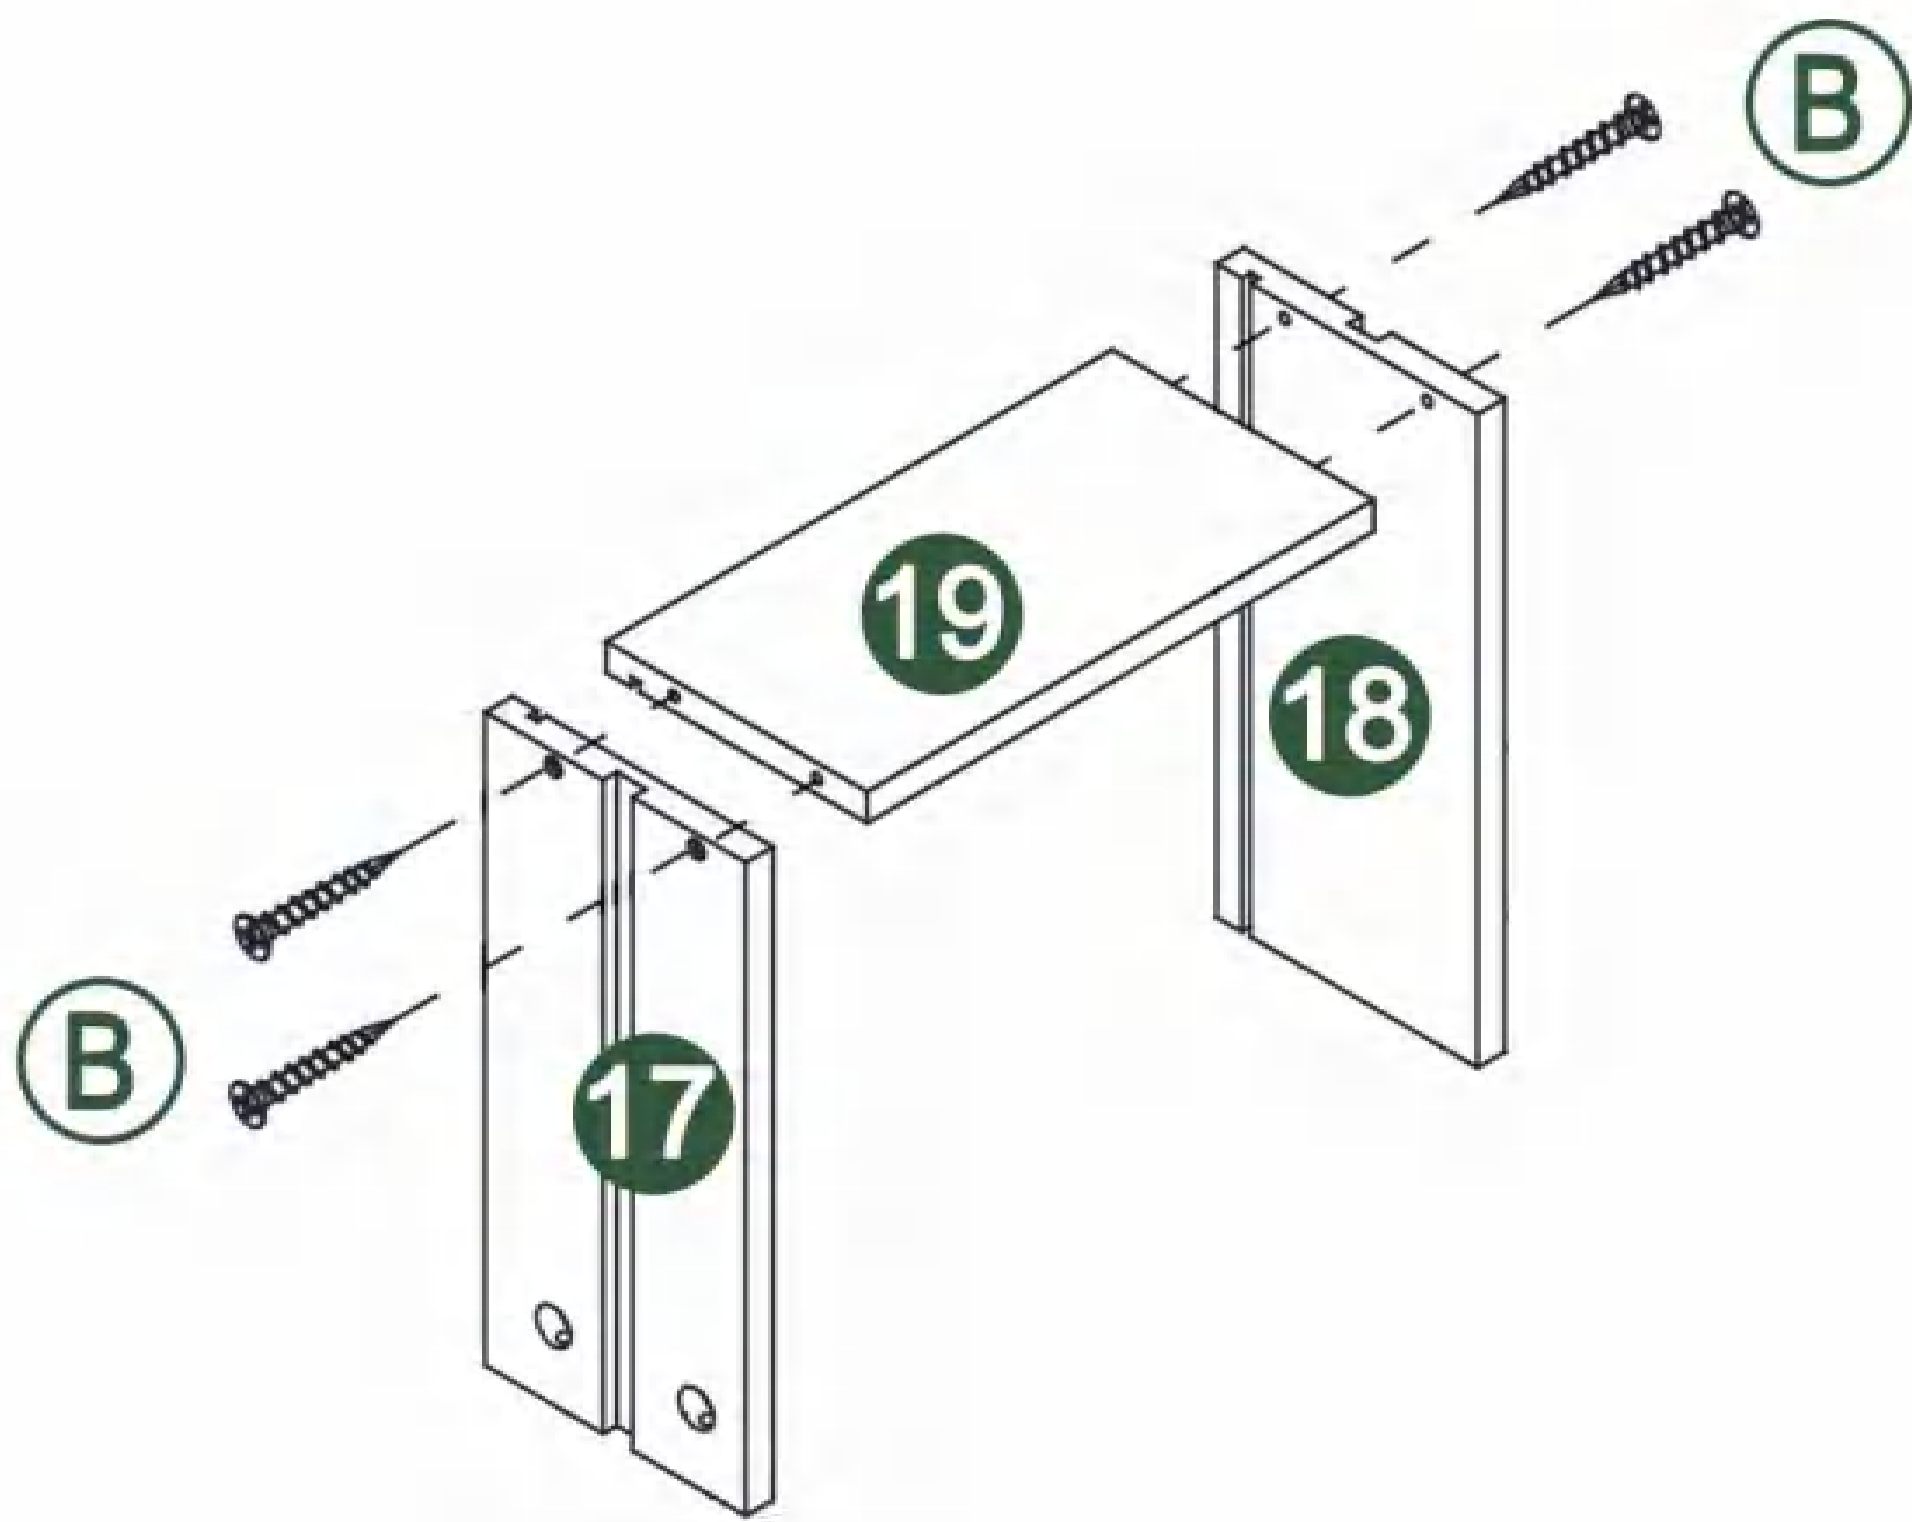


22.

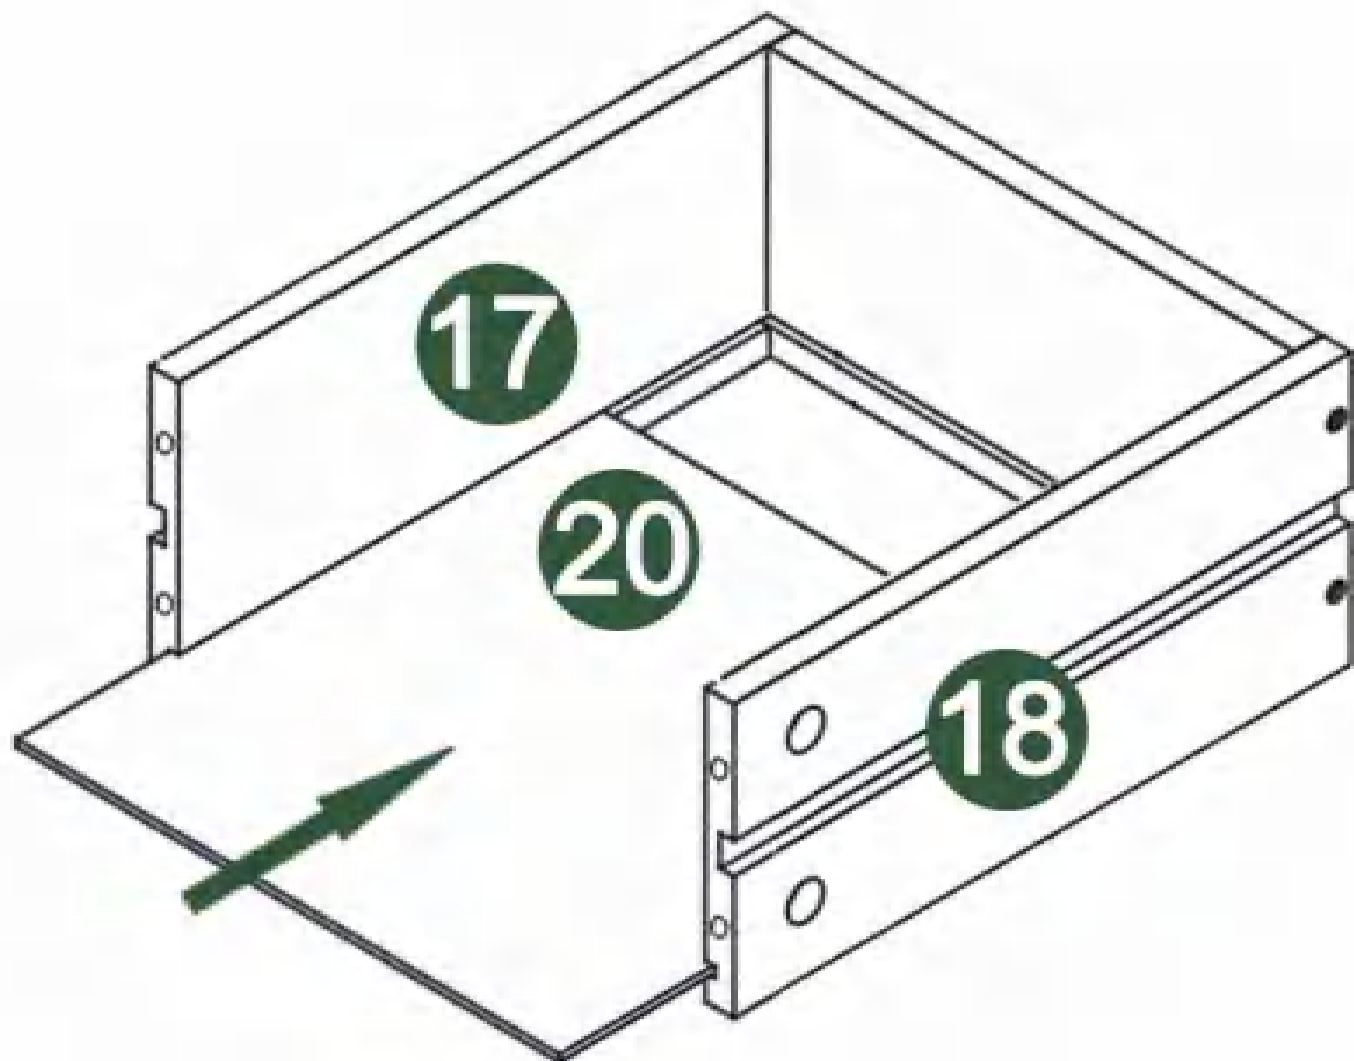


23.

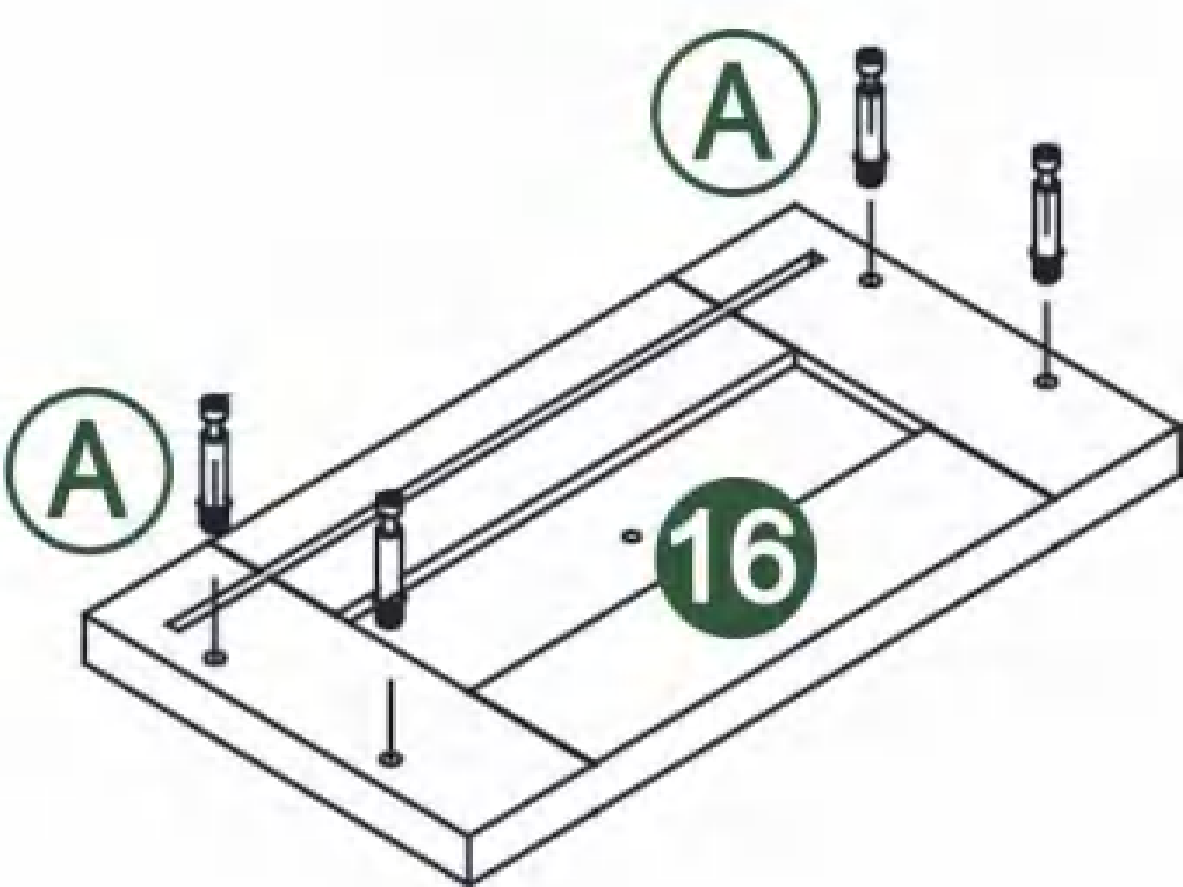


24.

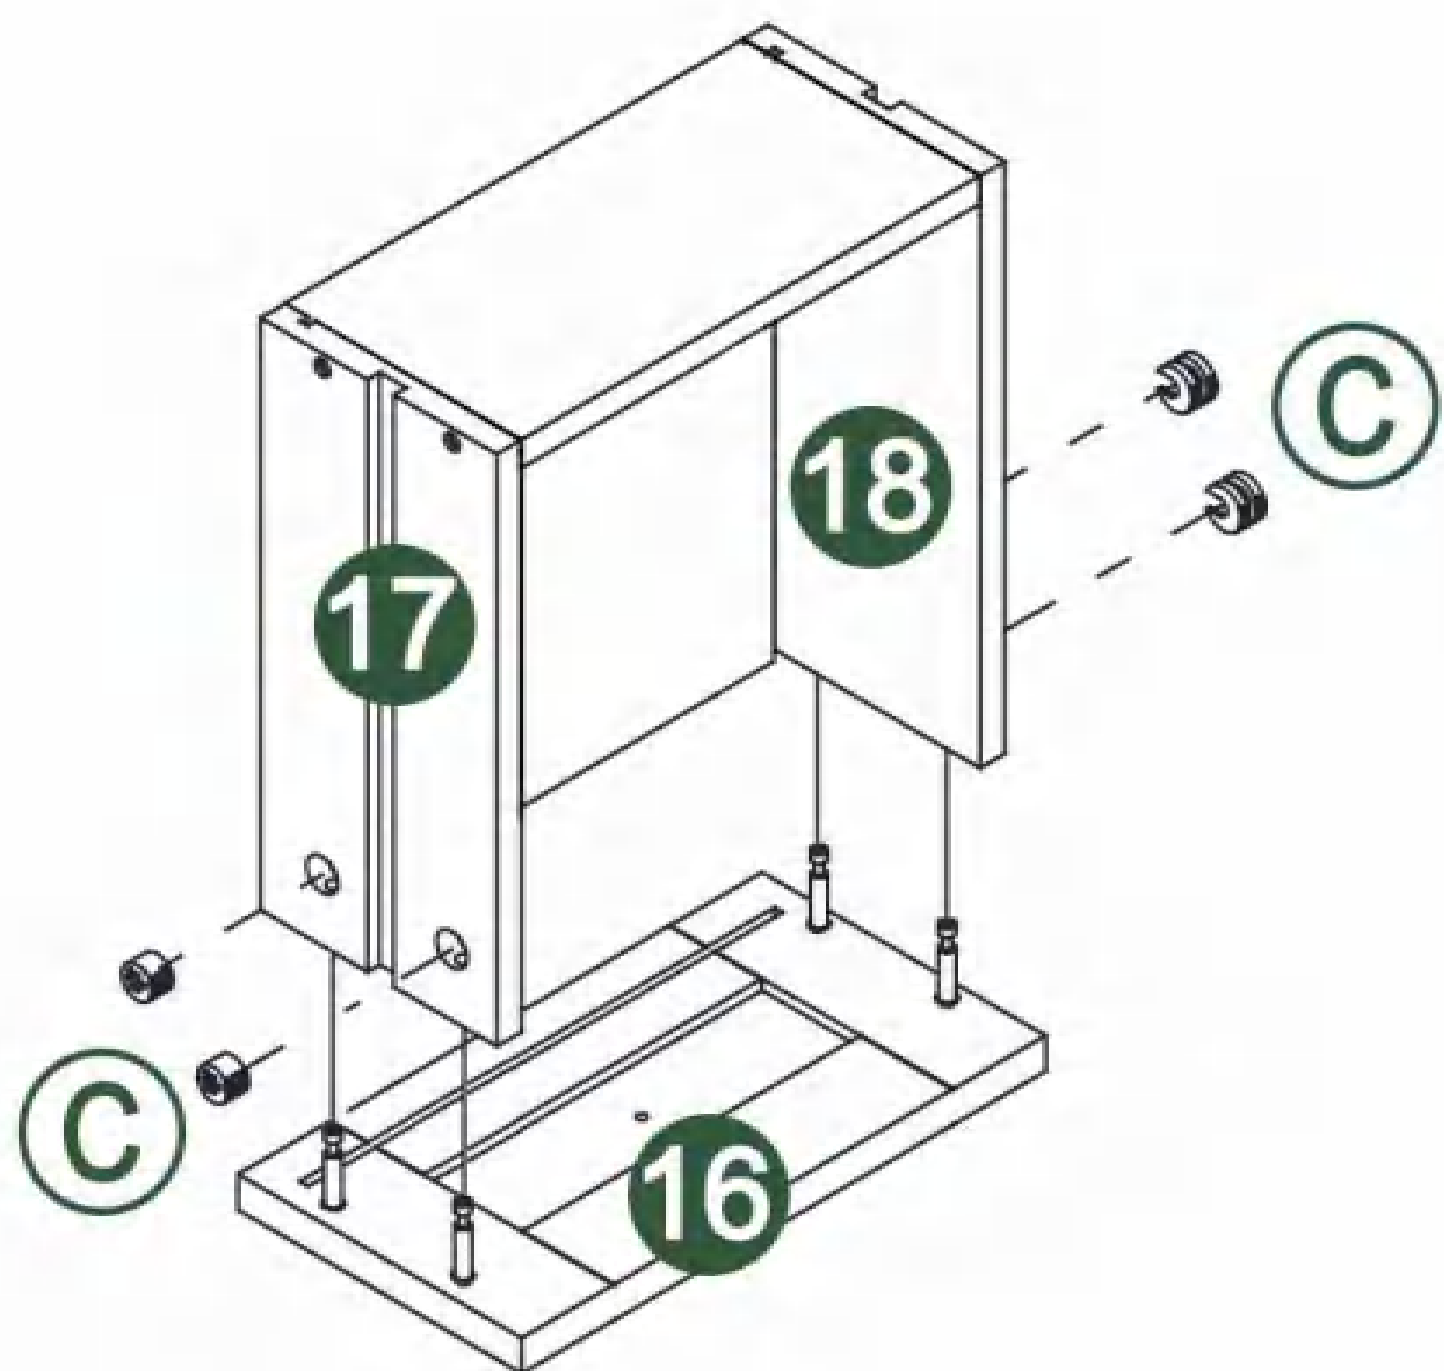


25.

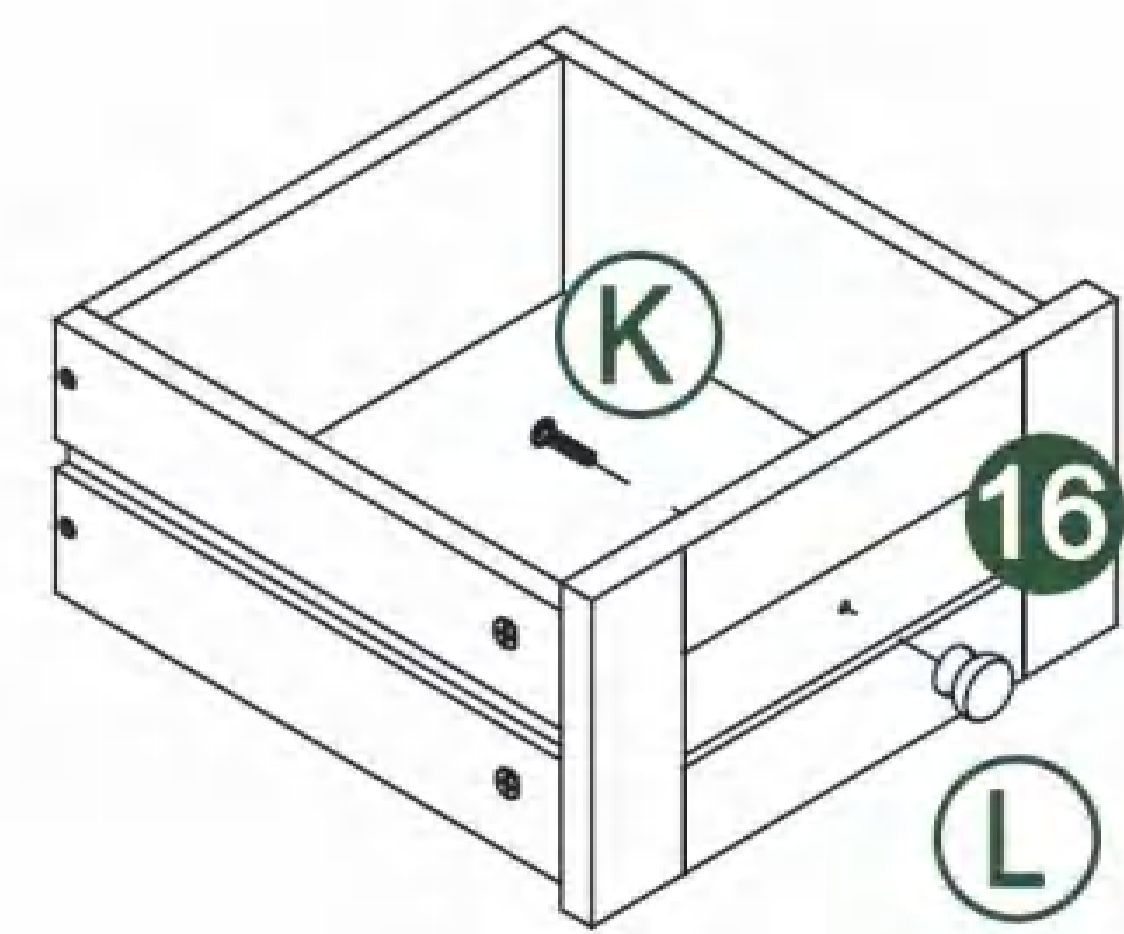

26.

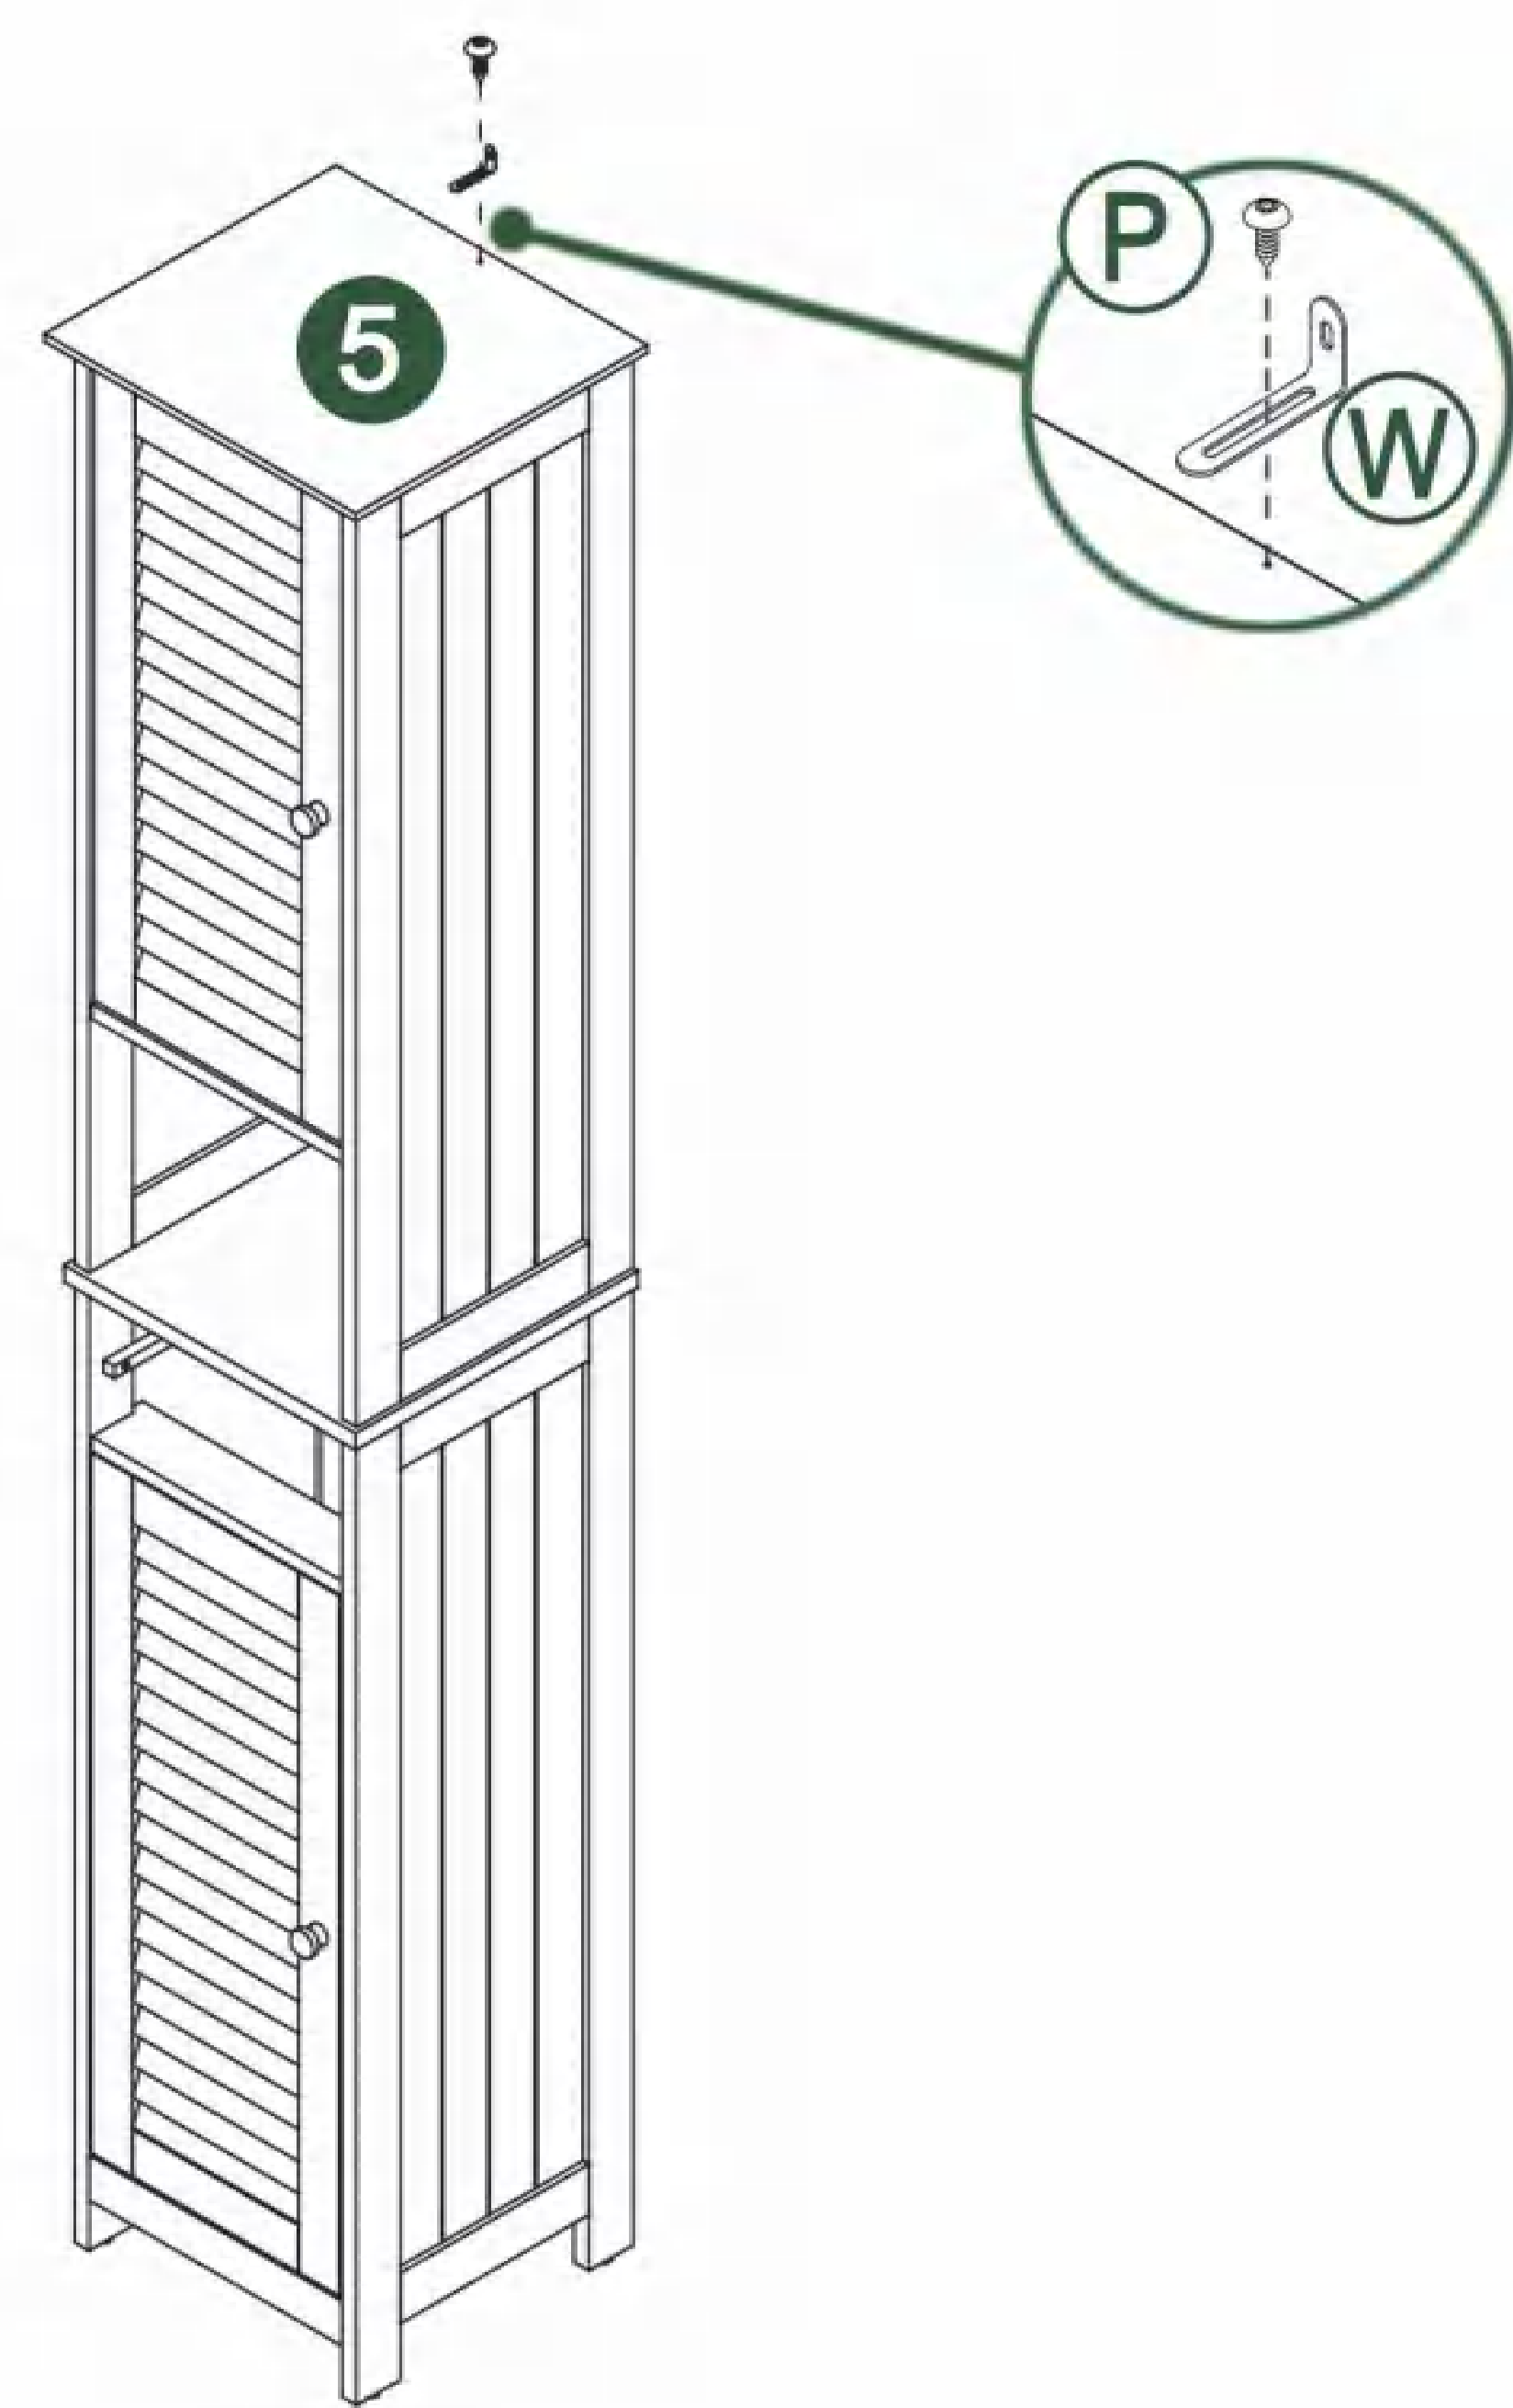

27.

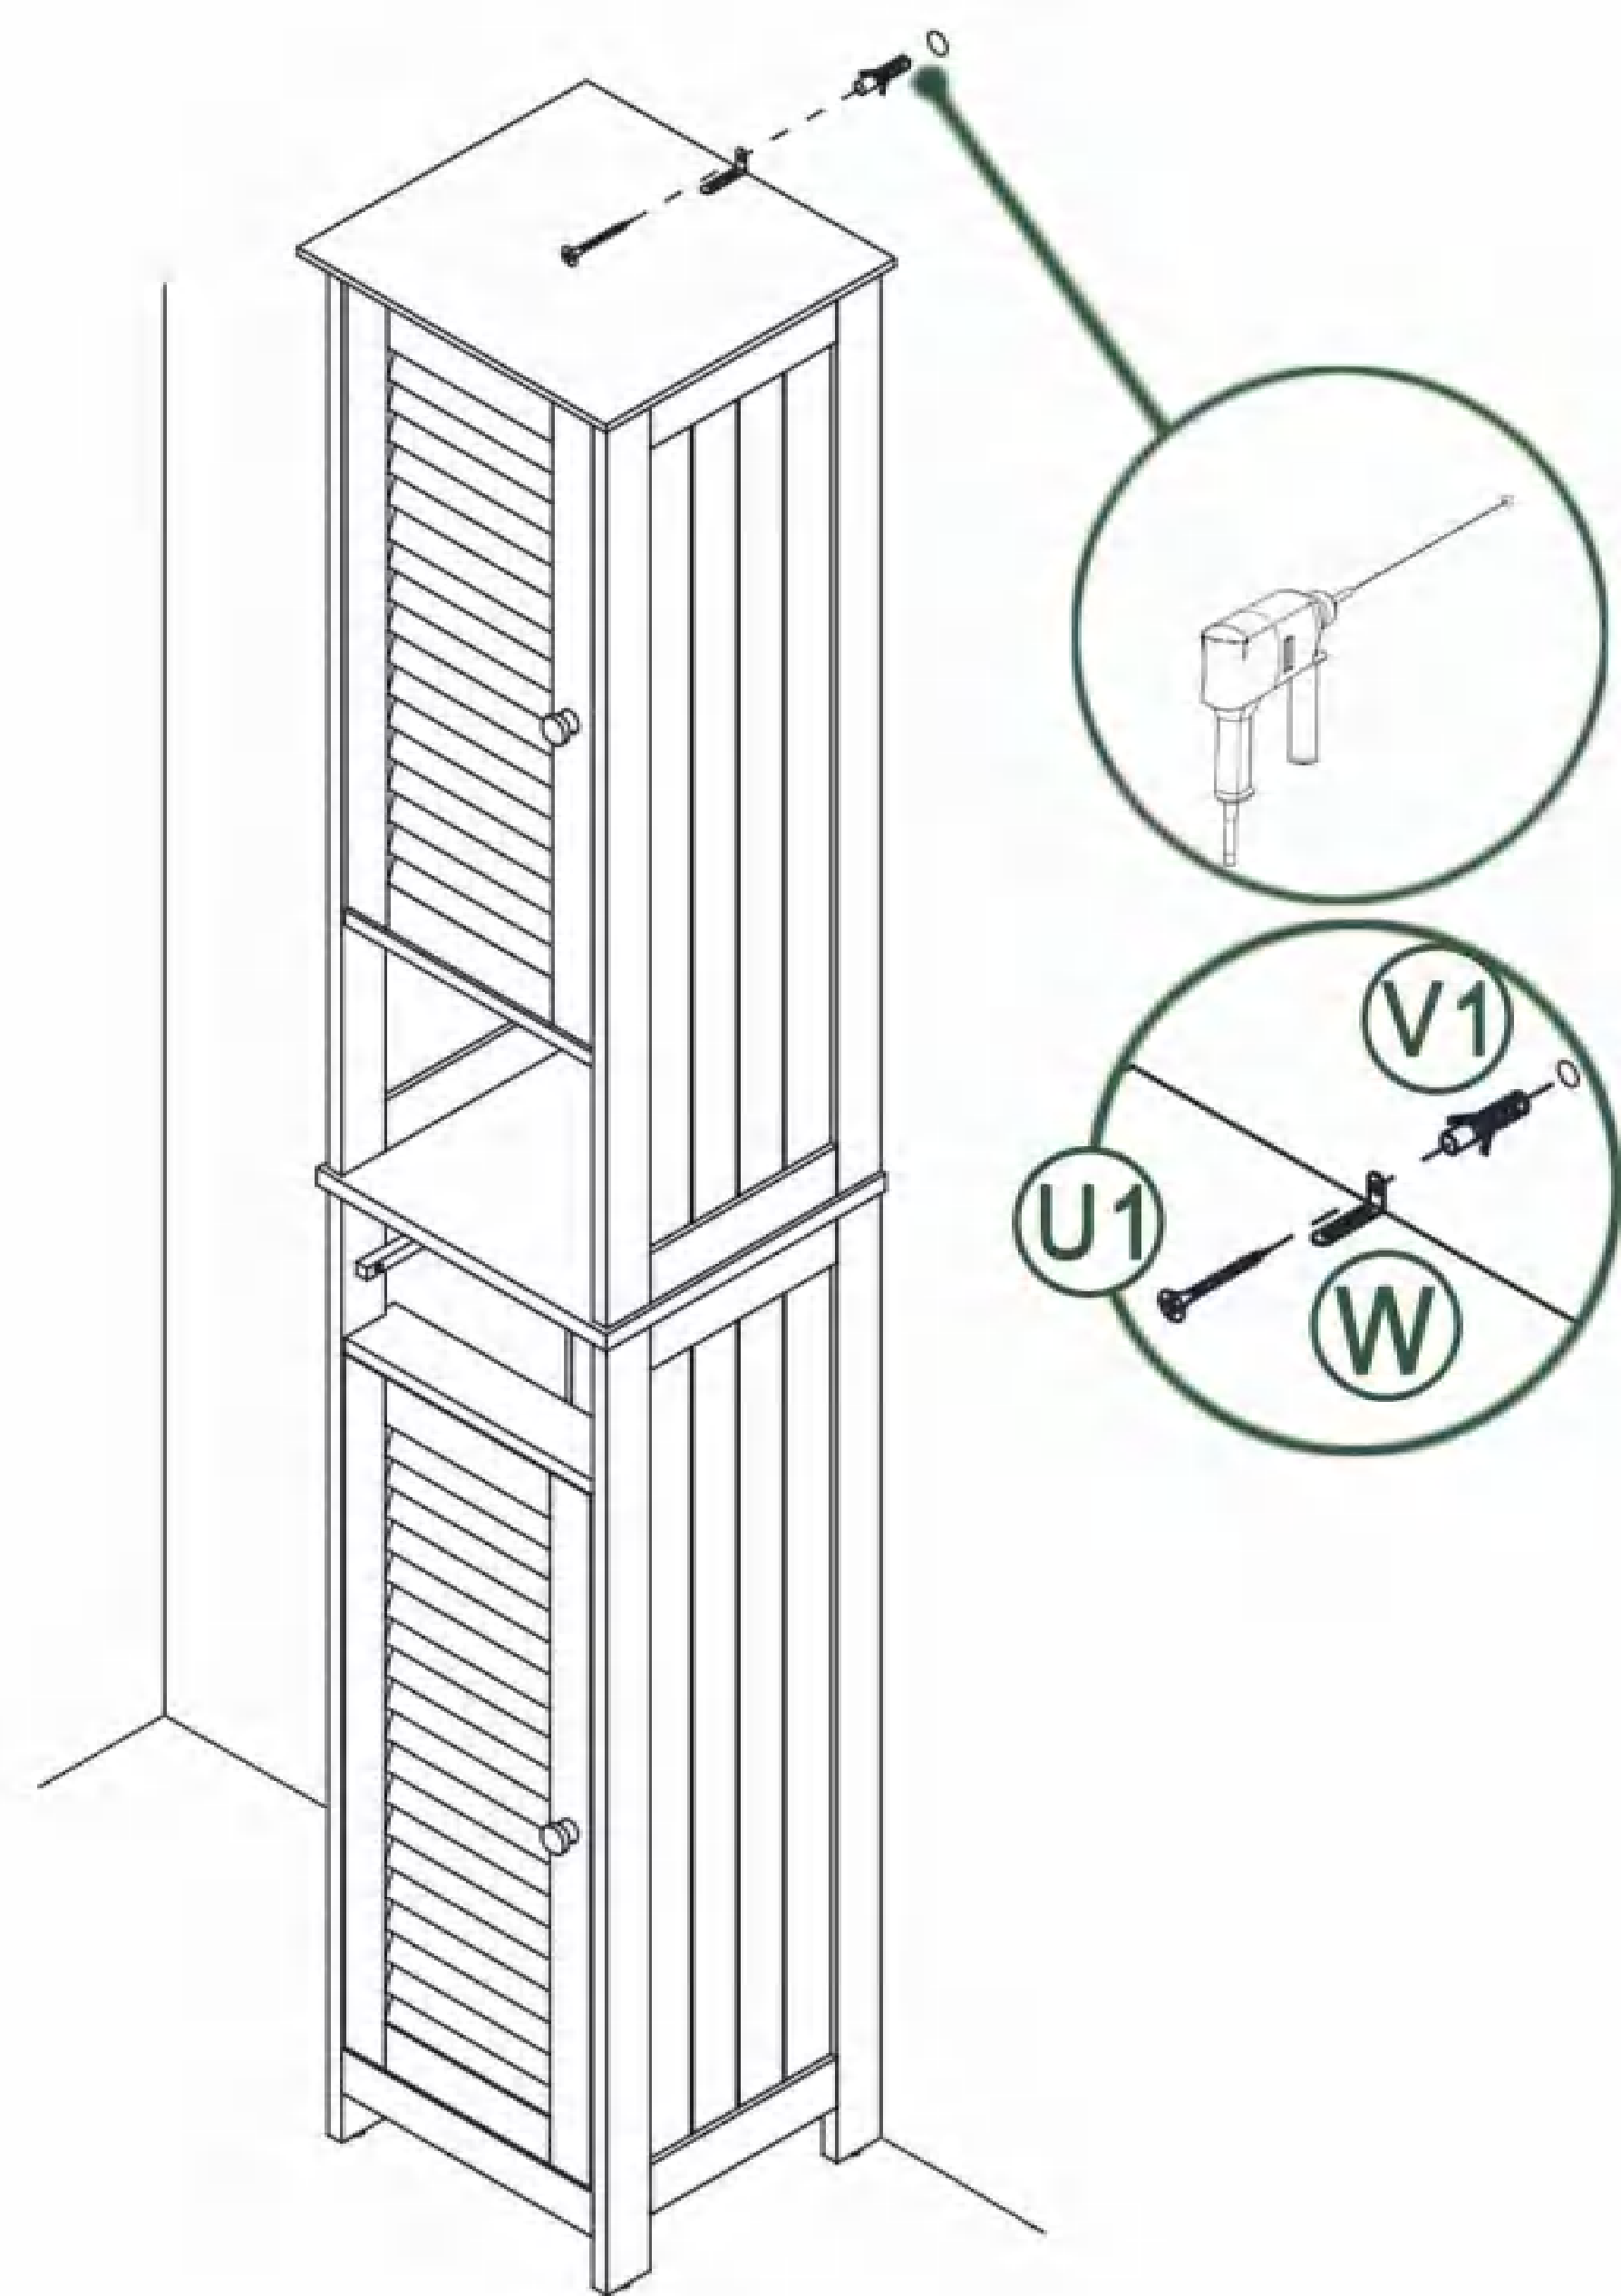

28.

