



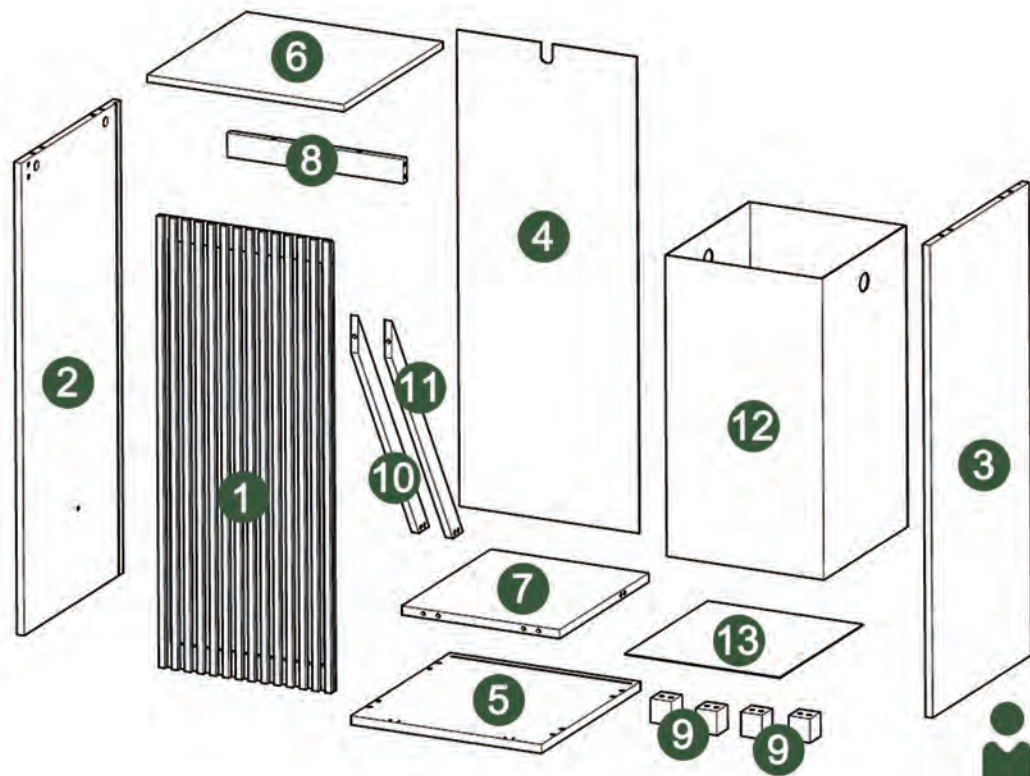

2023-01

# BZR126


# SoBuy

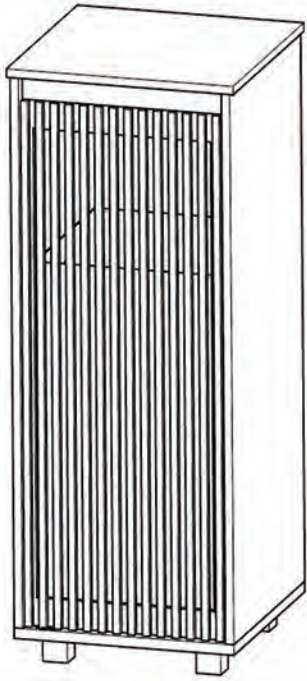


TOOLS:






UNIT:MM

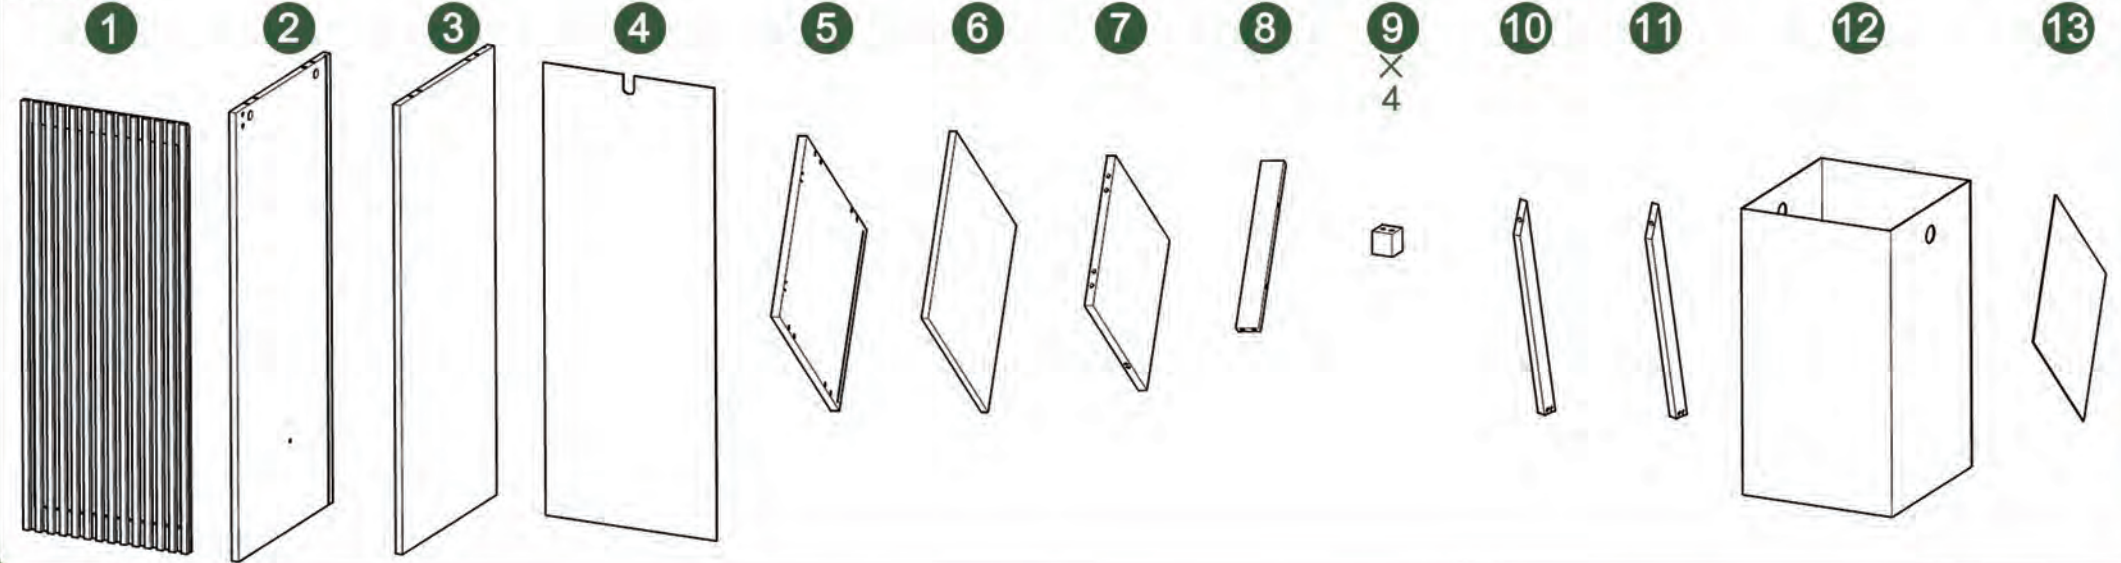


UNIT:MM

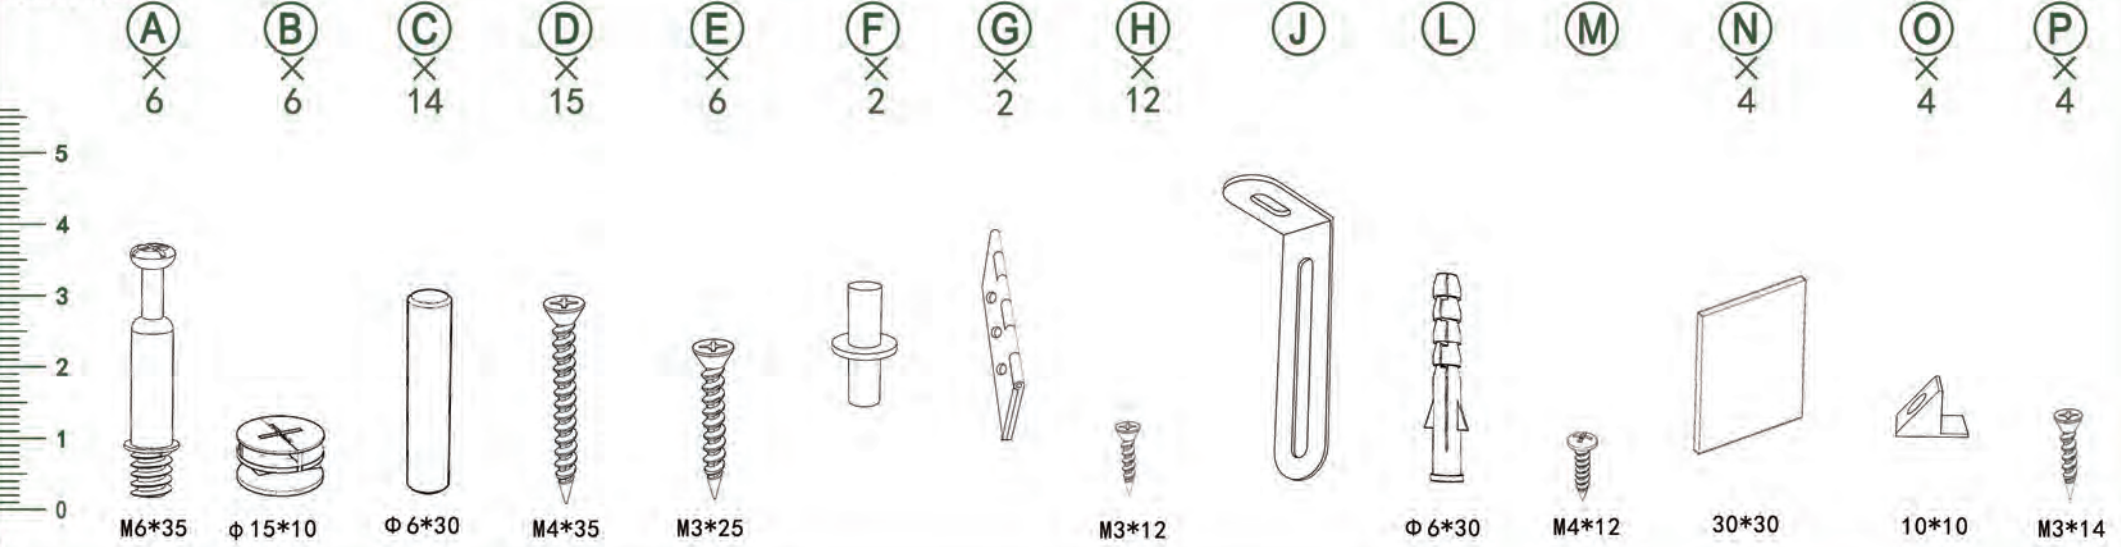

### BOLT INSTALLATION AS BELOW:

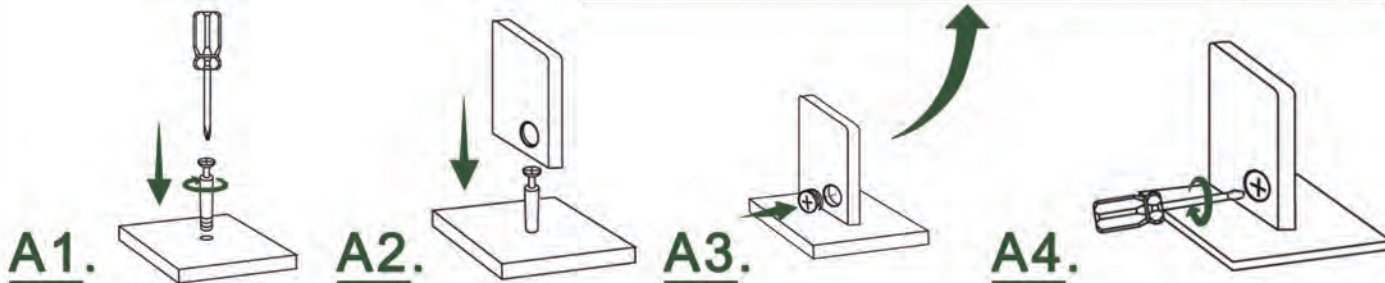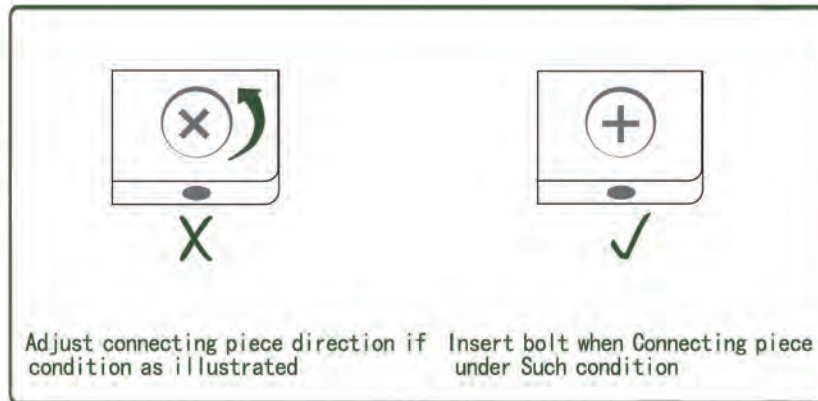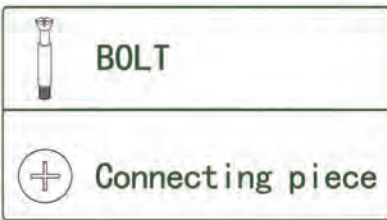


### BACKPLATE BUCKLE INSTALLATION AS BELOW:

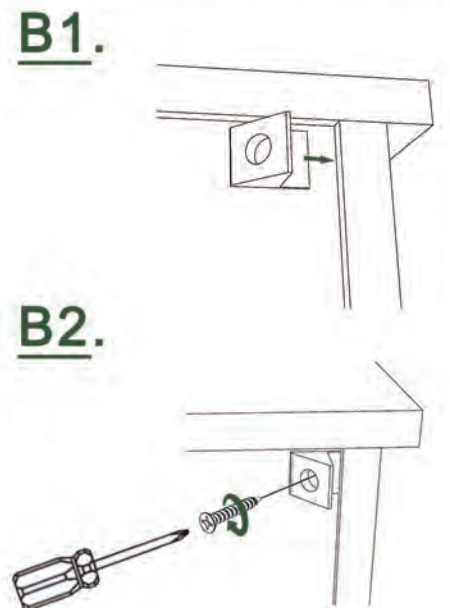


Stand:04.2023


1.

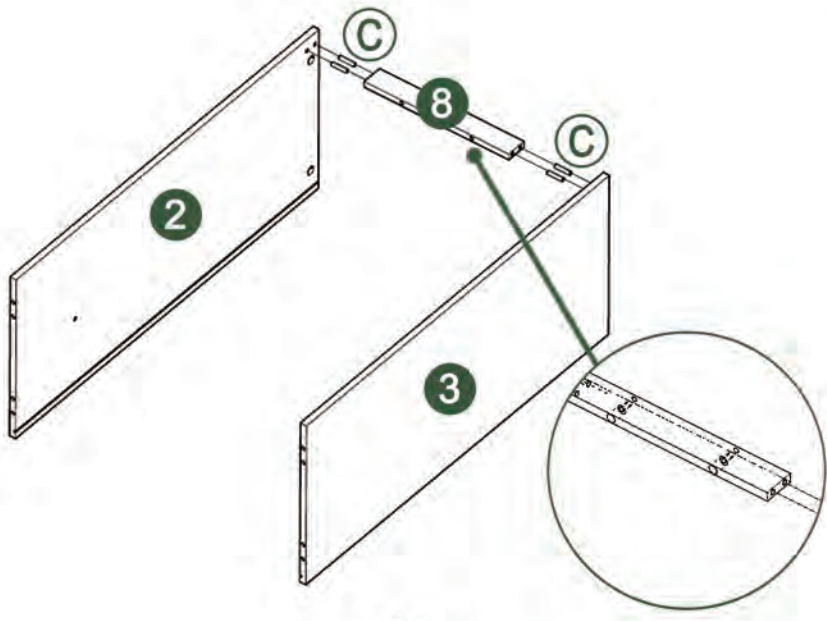


2.

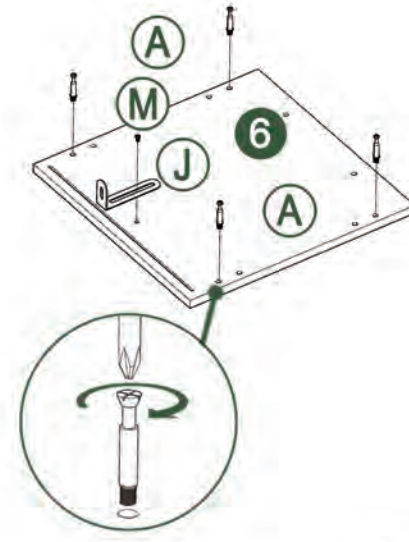


3.

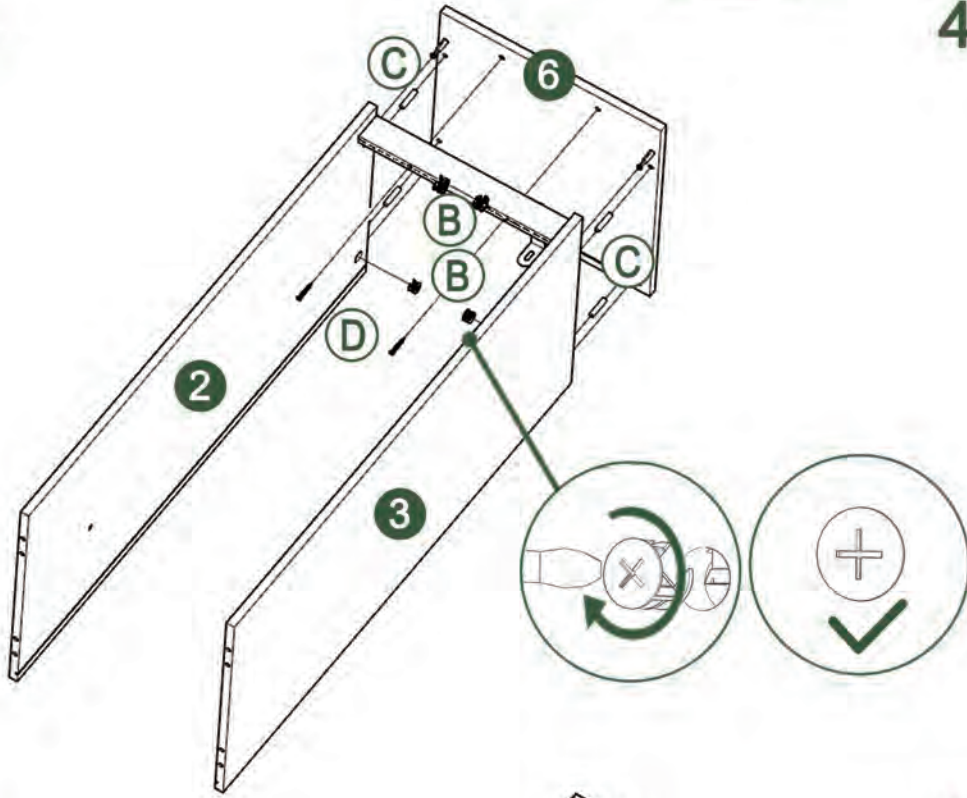


4.

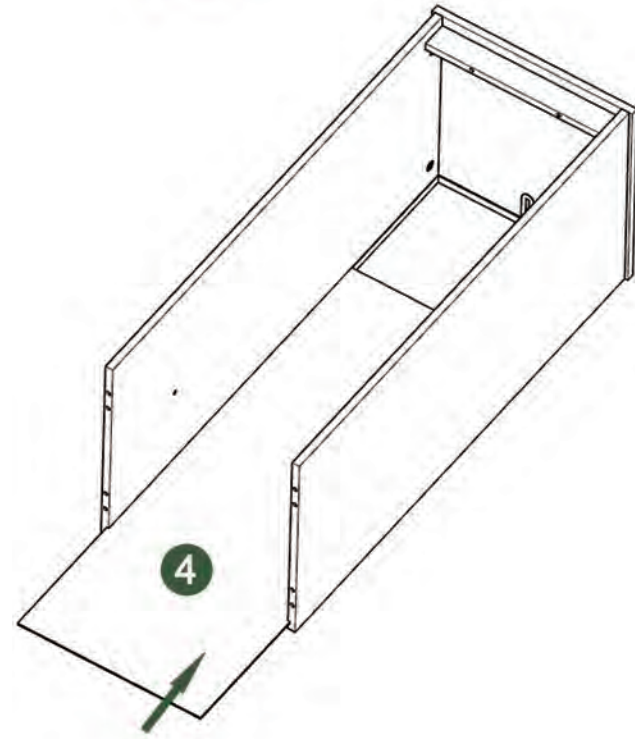


5.

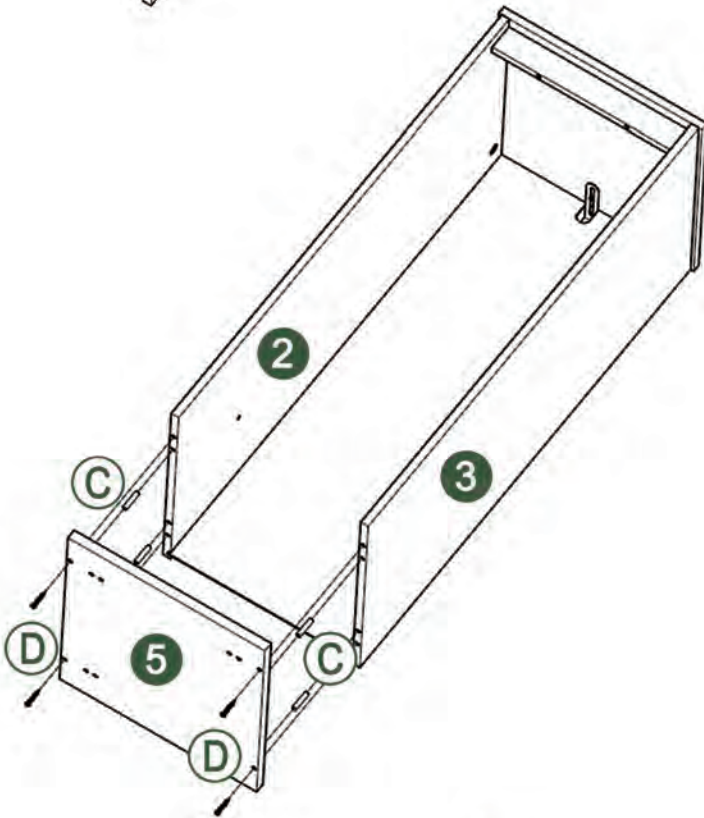


6.

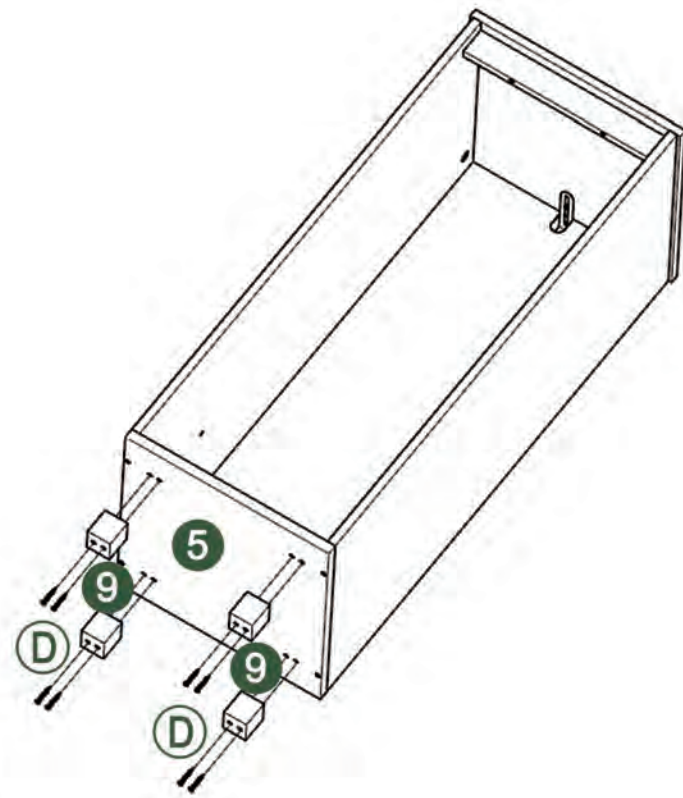


7.

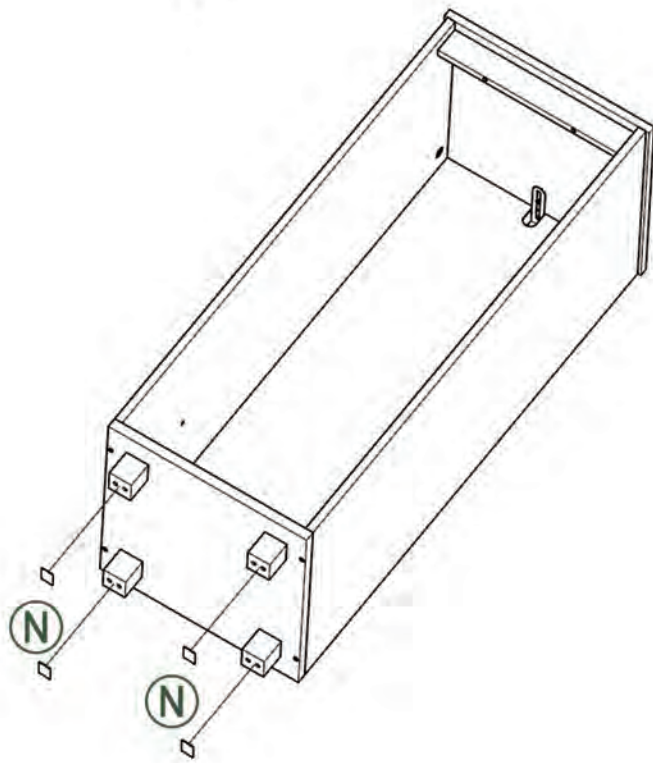


8.

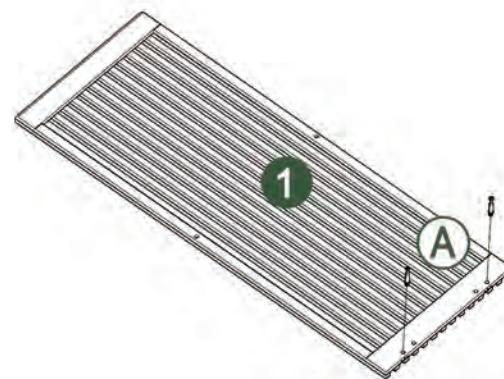


9.

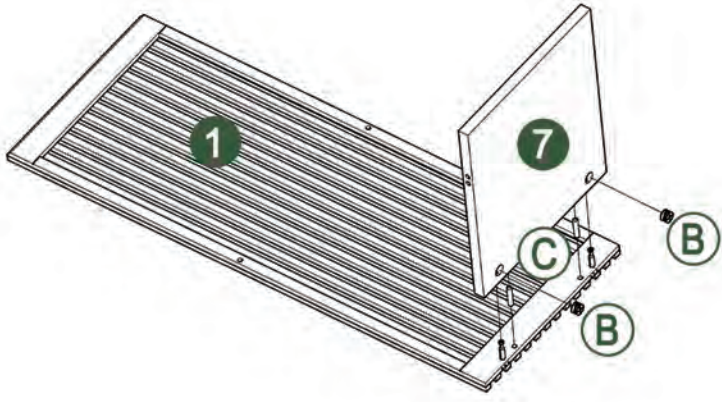


10.

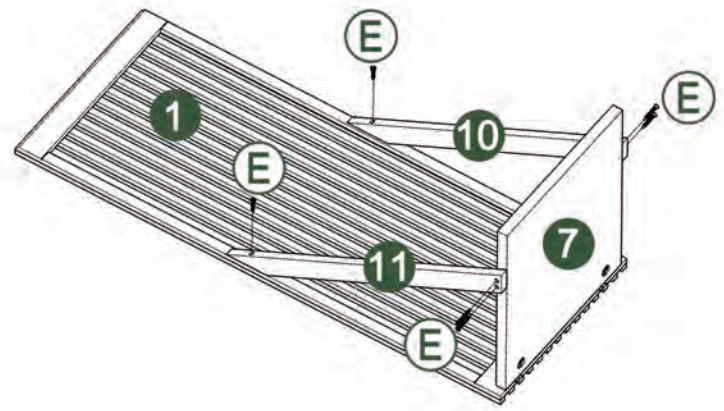


11.

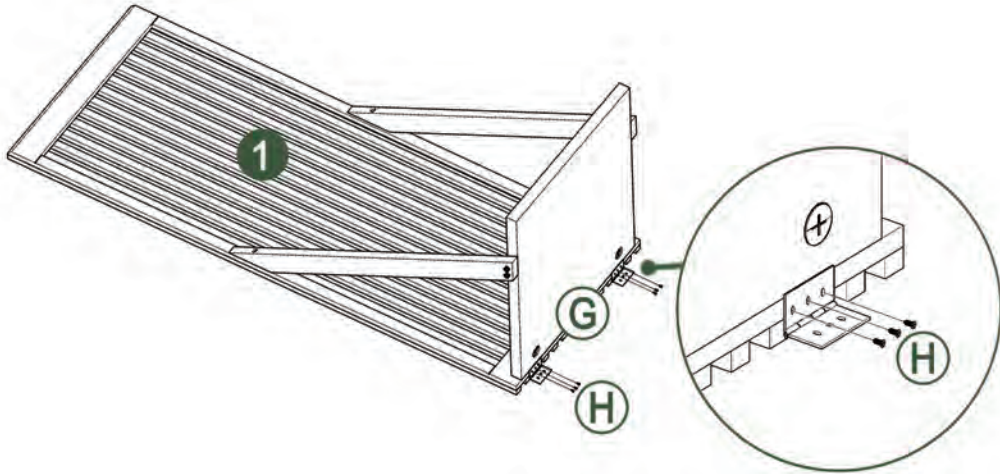


12.

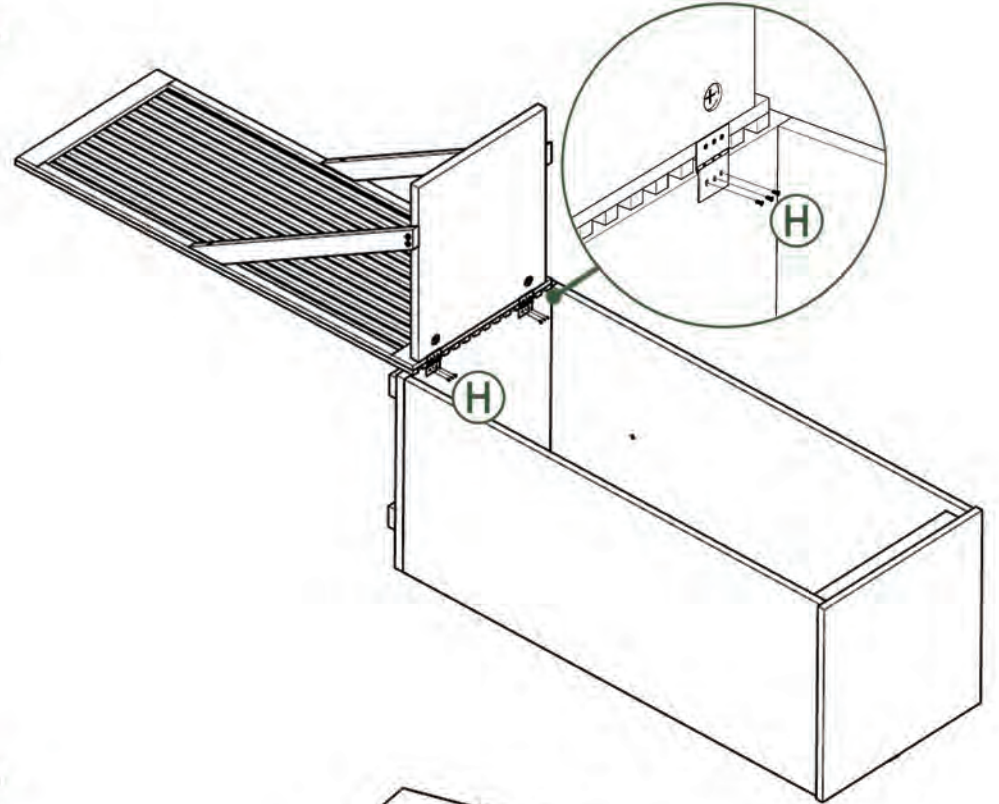


13.

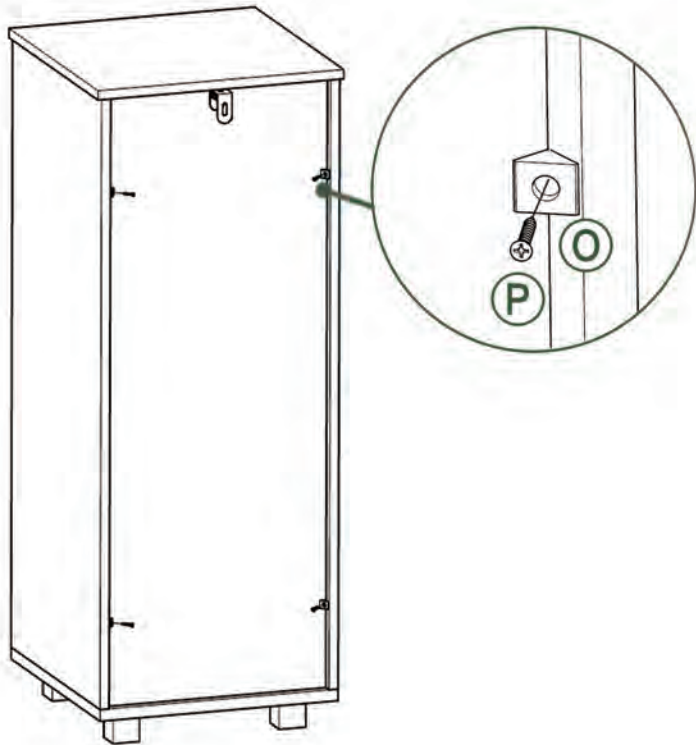


14.

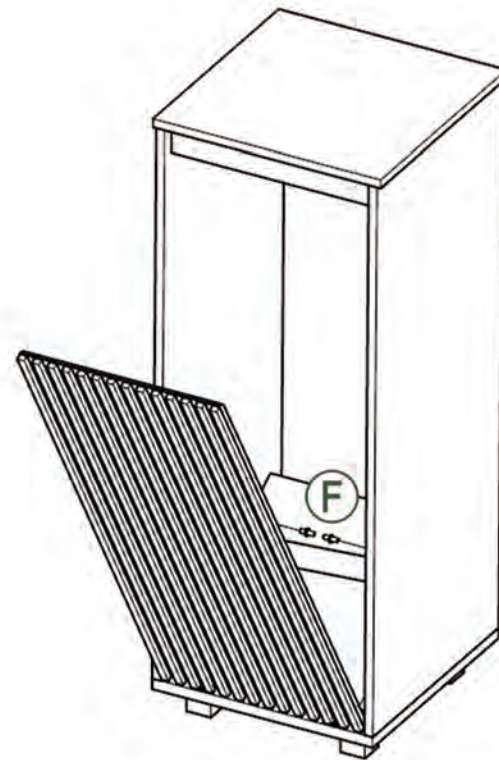


15.

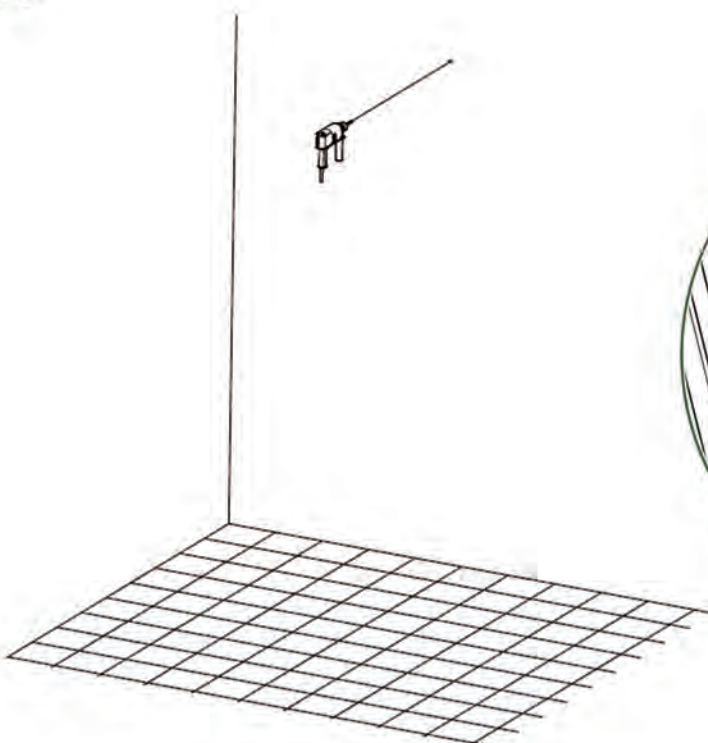


16.

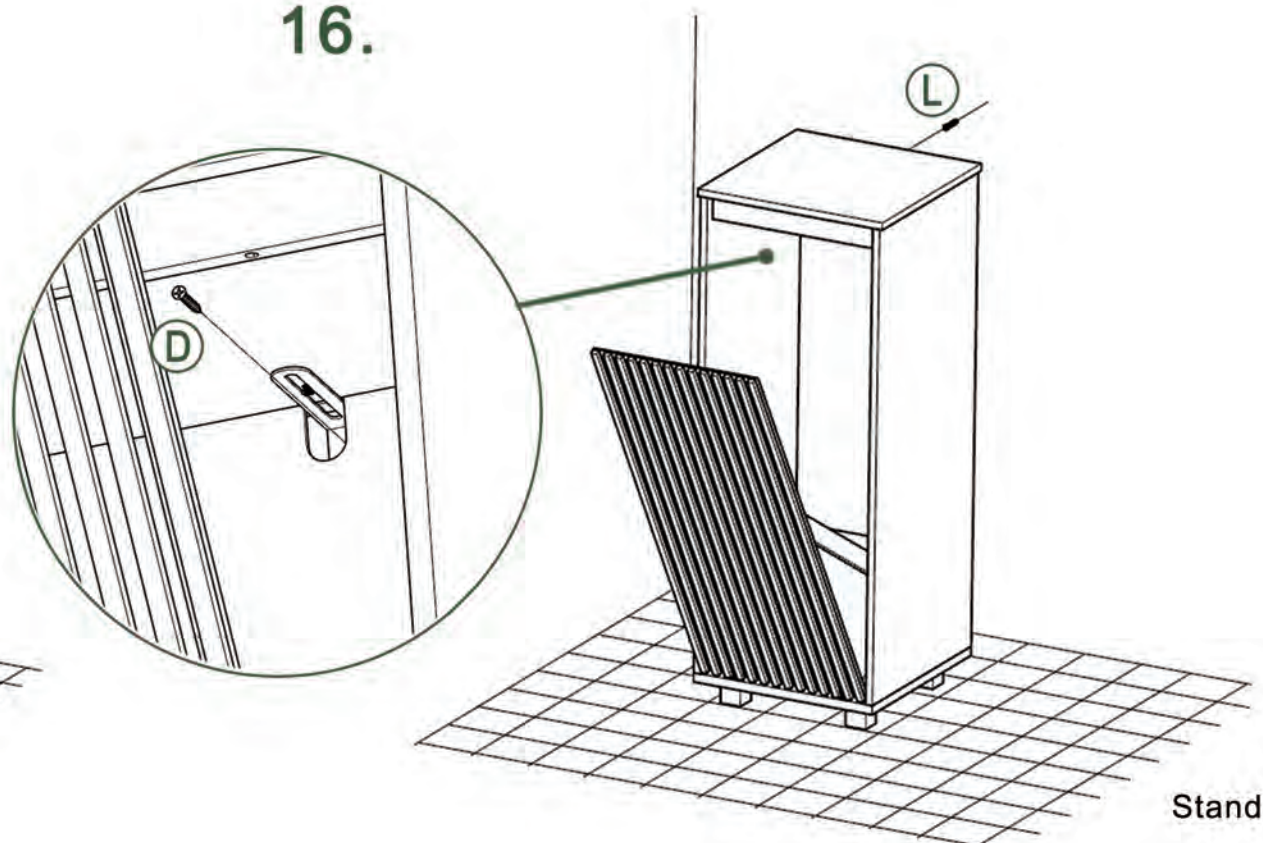

17.

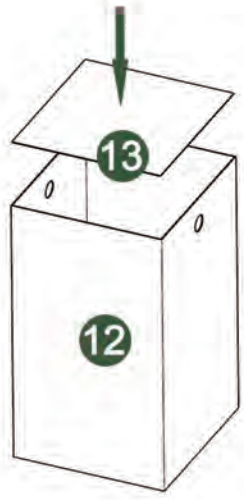

18.

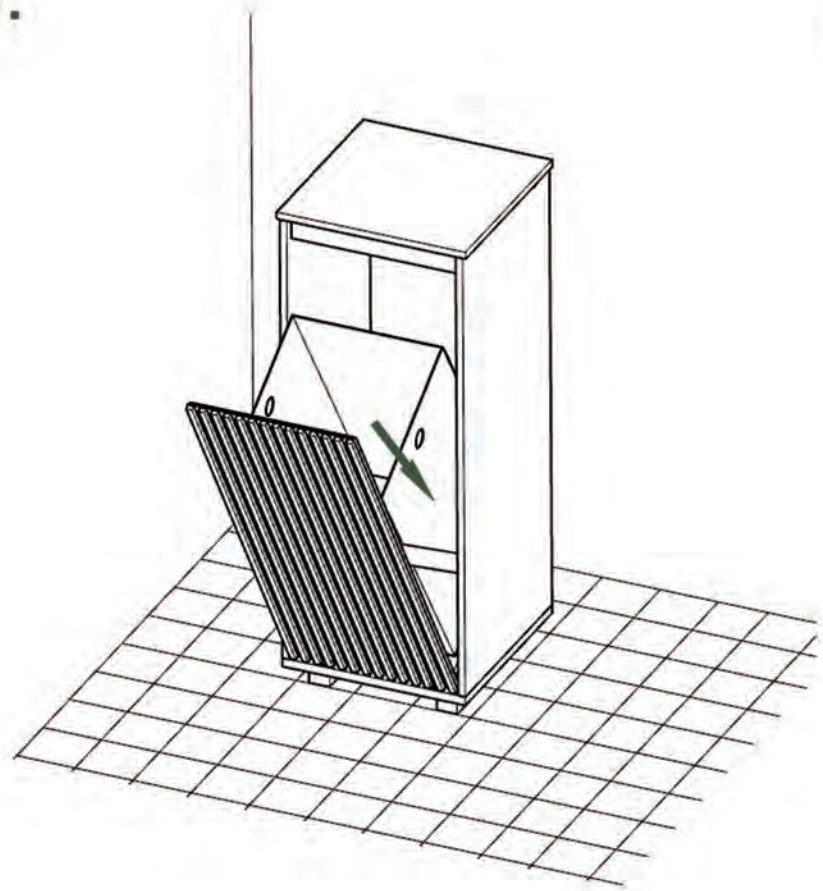

**SoBuy**