



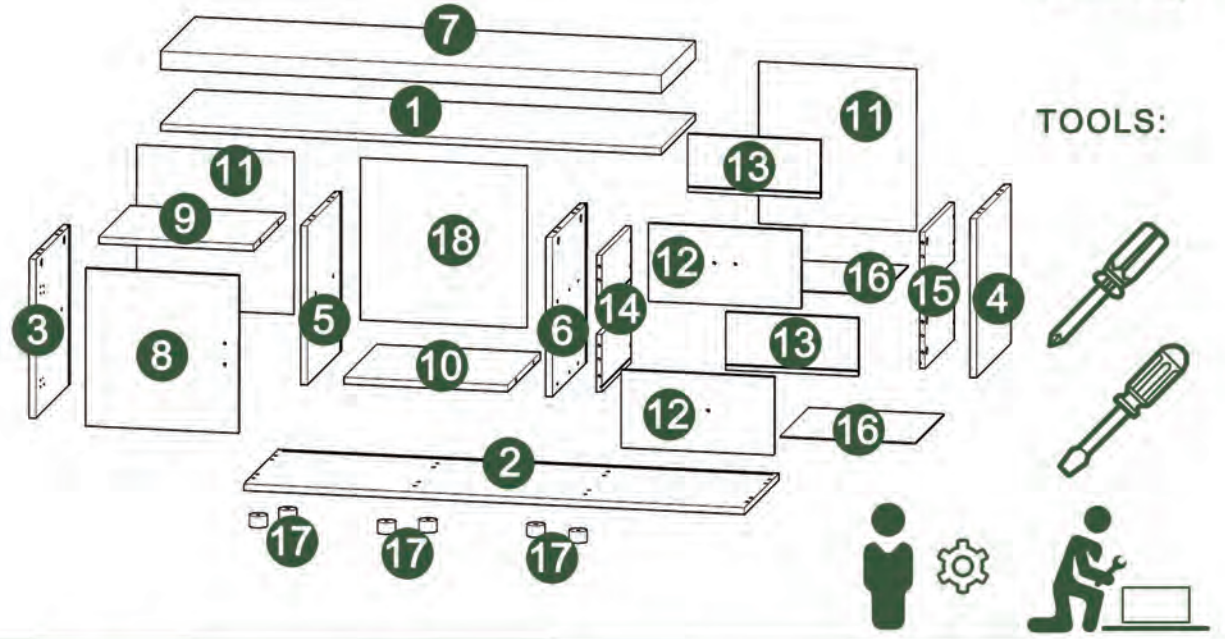

# FSR148


2023-01

# SoBuy

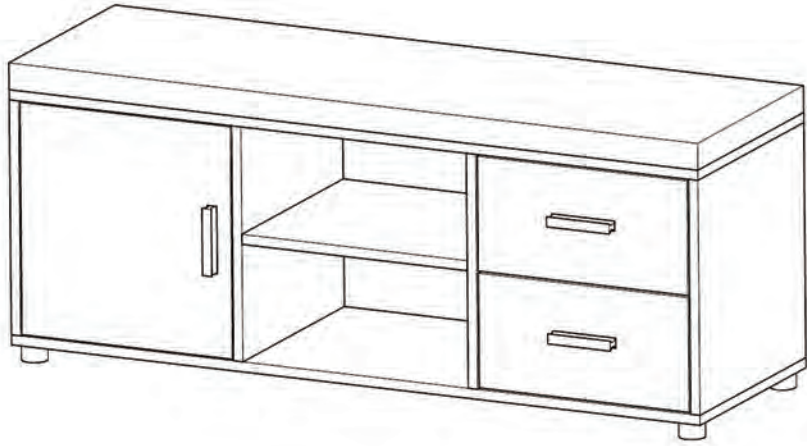


TOOLS:




UNIT:MM

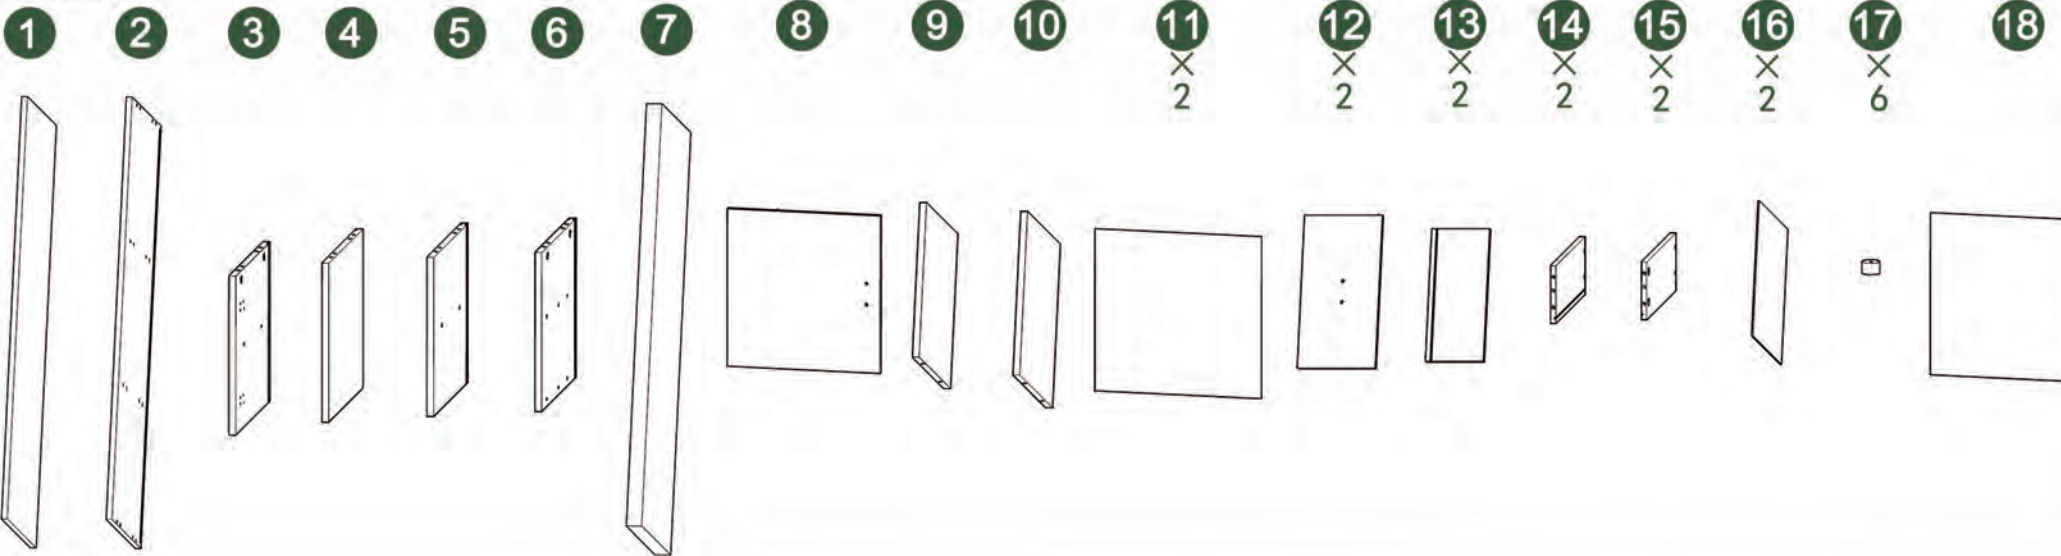


UNIT:MM

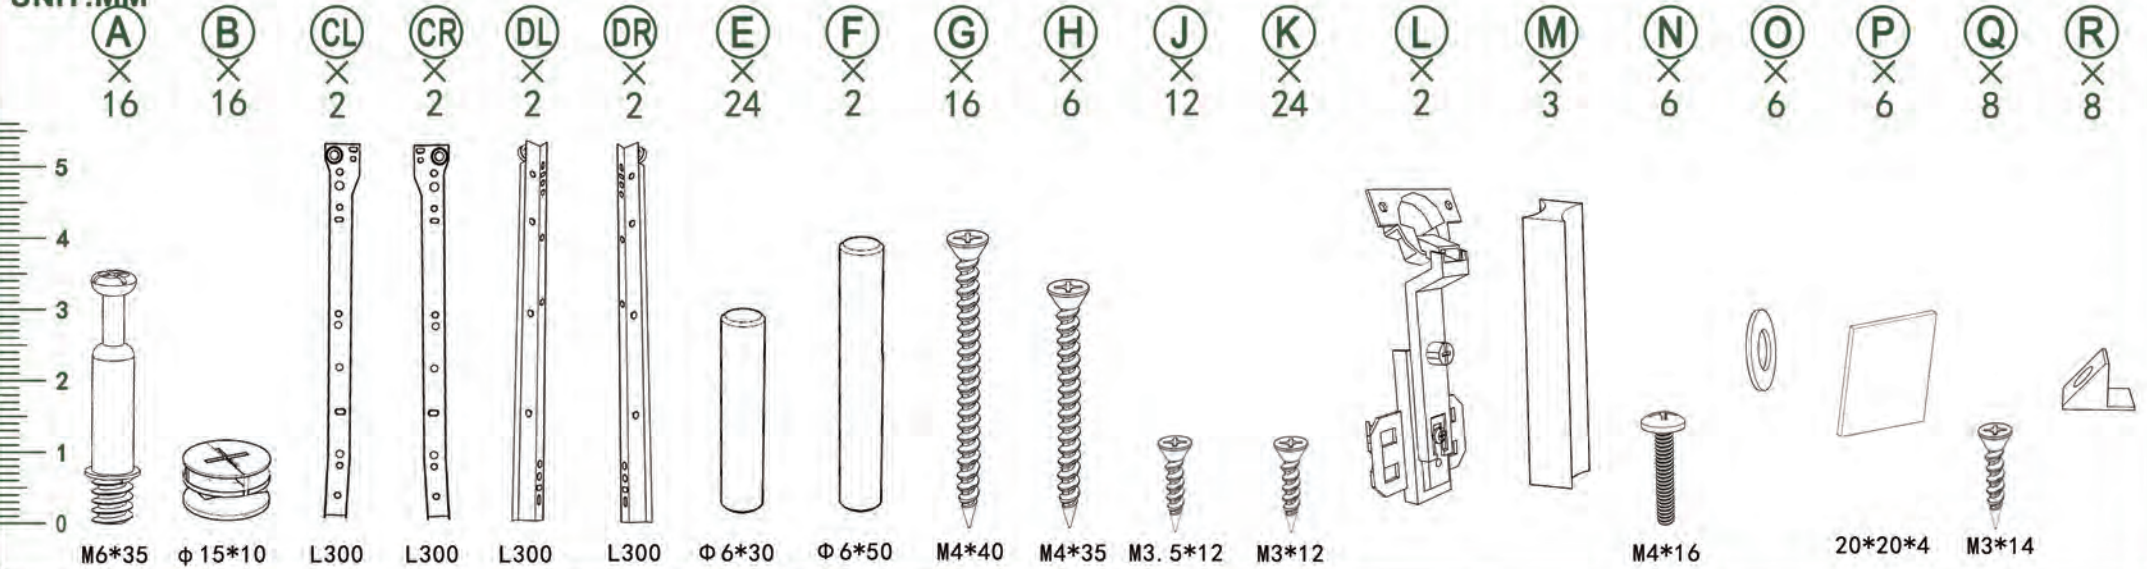

### BOLT INSTALLATION AS BELOW:

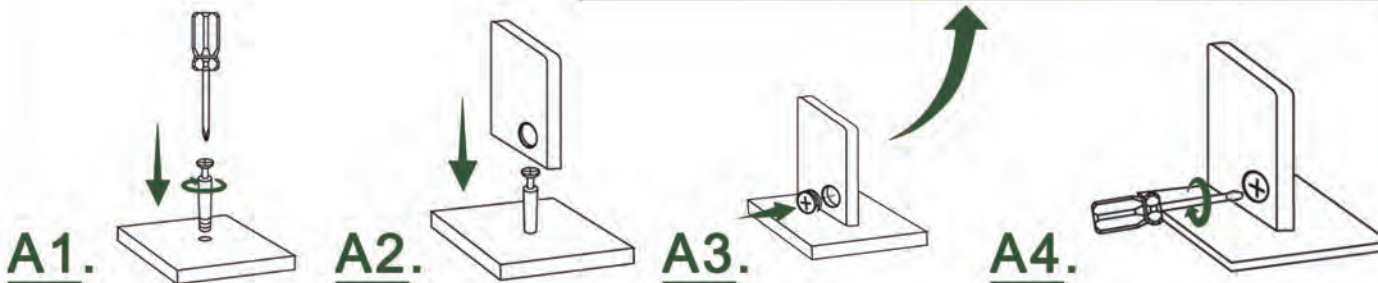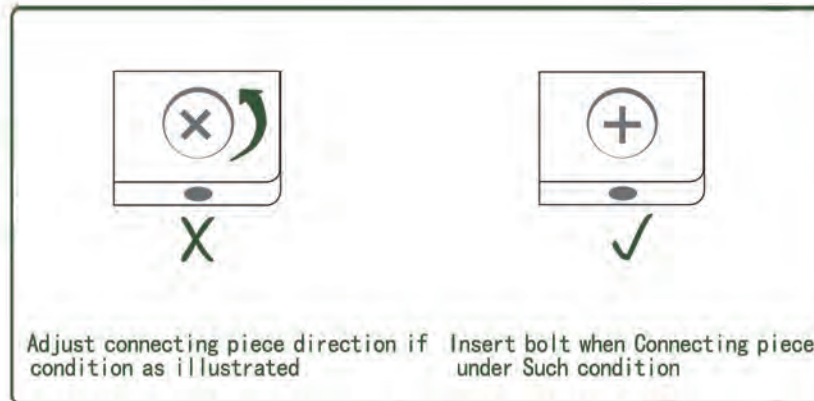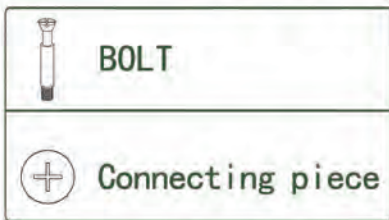


### BACKPLATE BUCKLE INSTALLATION AS BELOW:

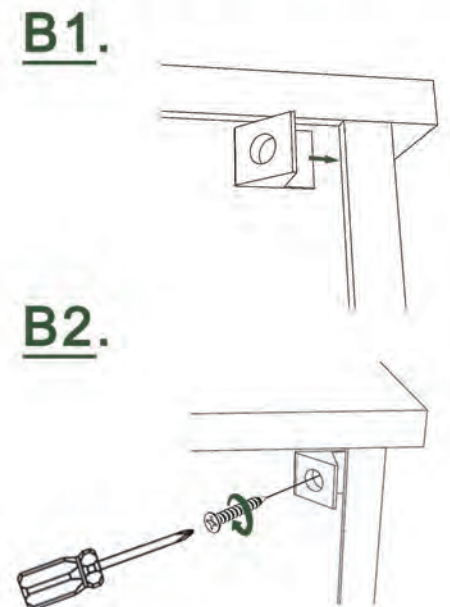


Stand:04.2023


1.

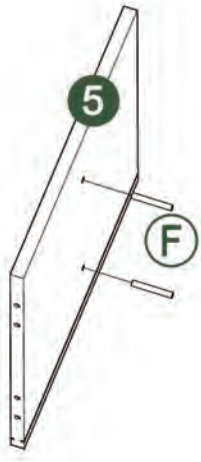


2.

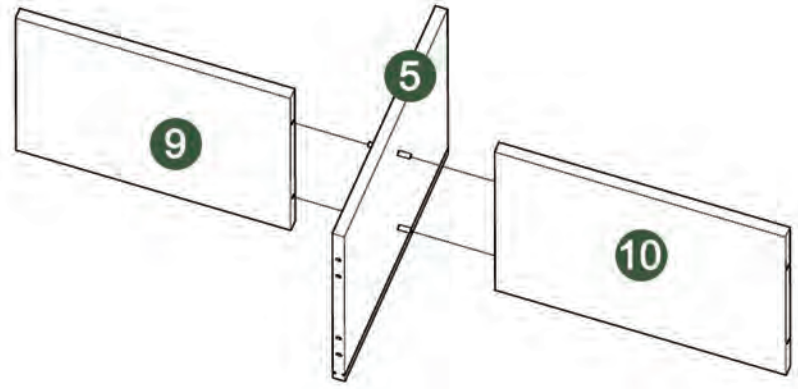


3.

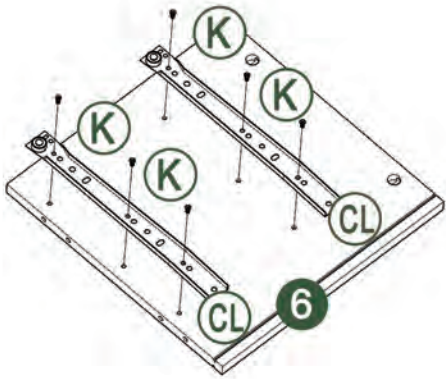


4.

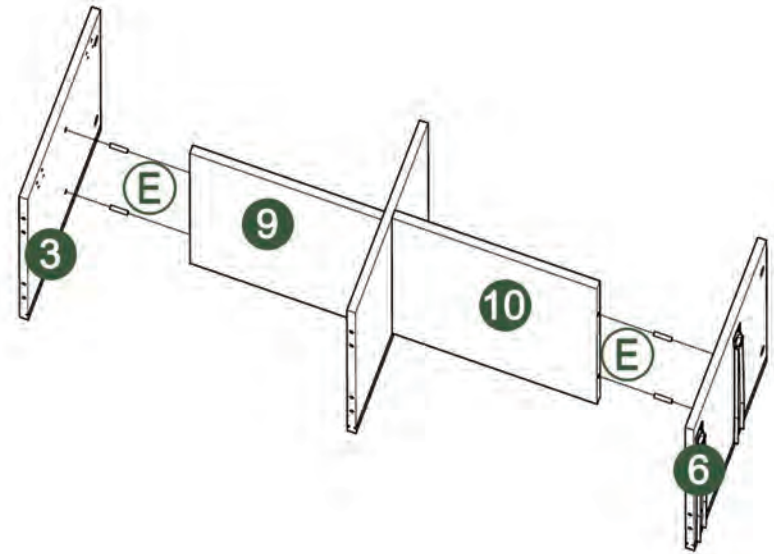


5.

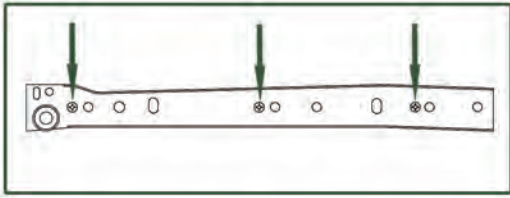


6.

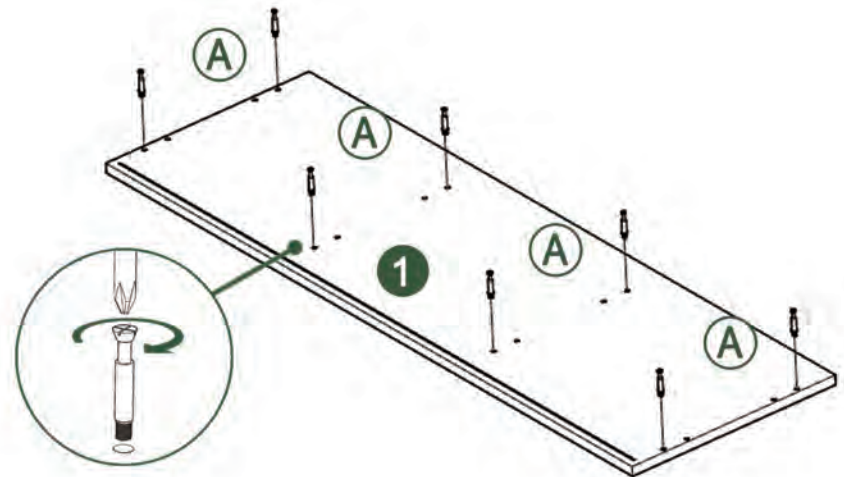


7.

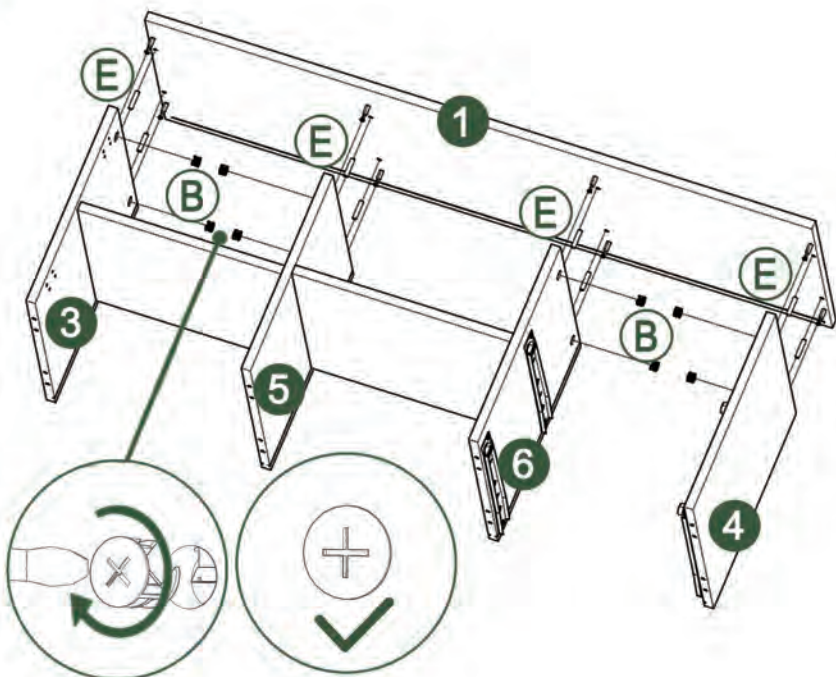


8.

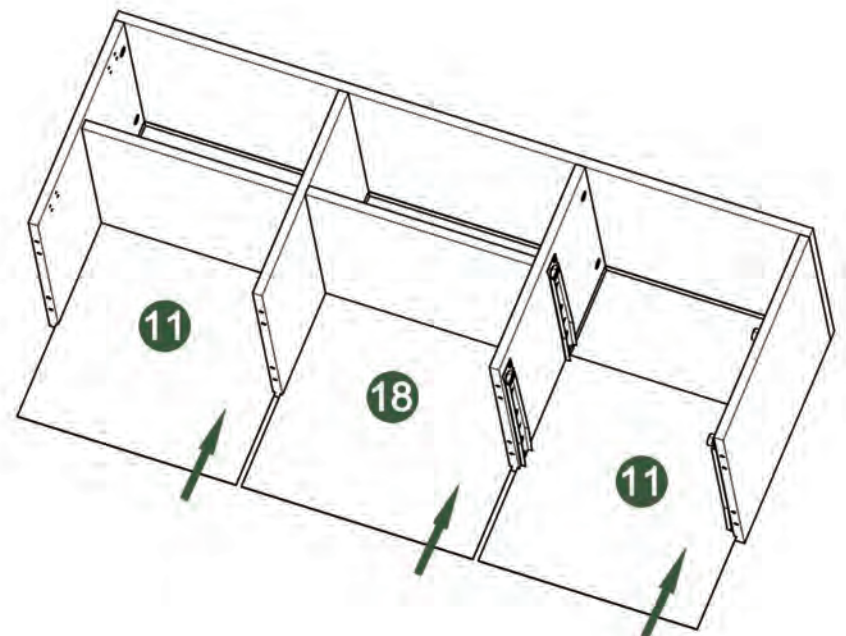


9.

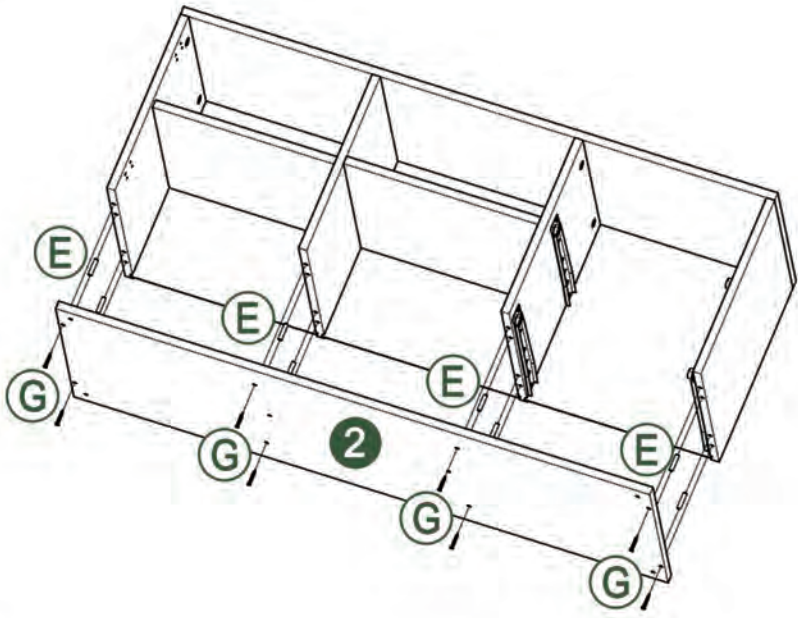


10.

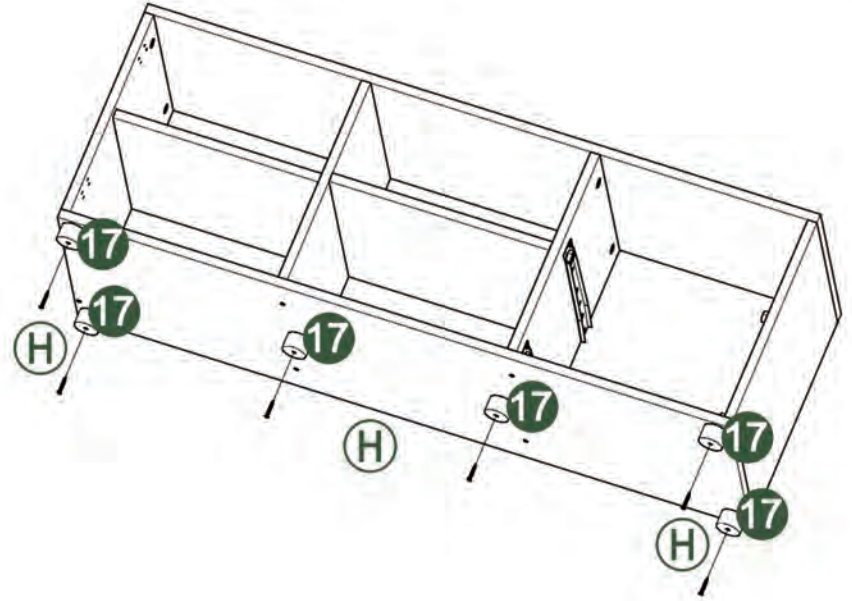


11.

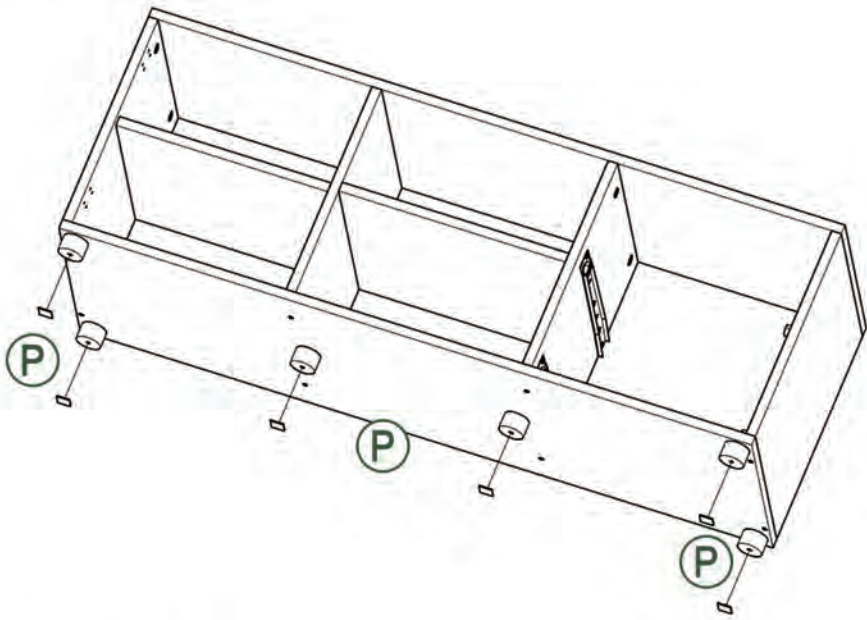


12.

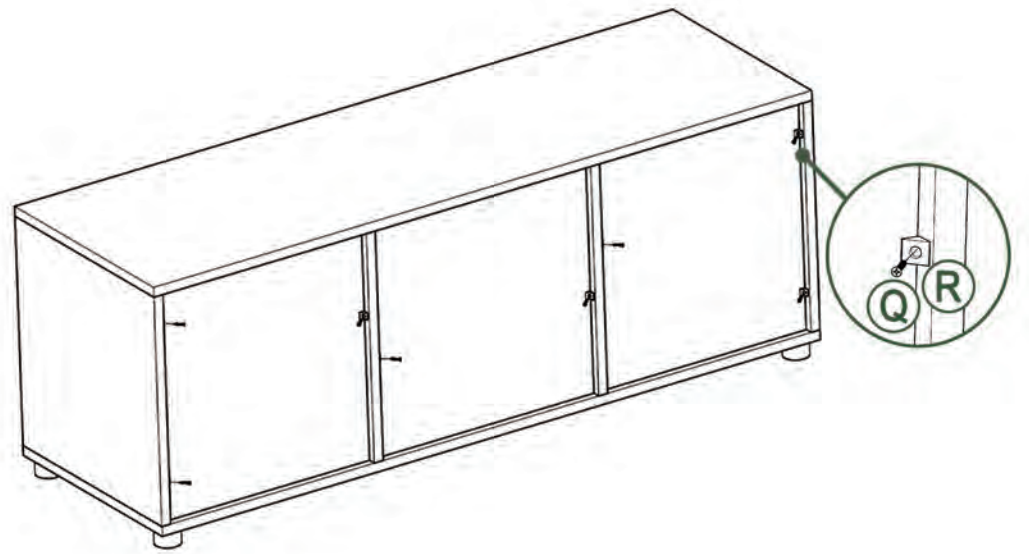


13(X2).

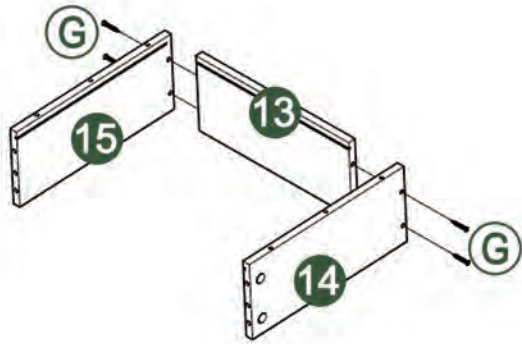


14(X2).

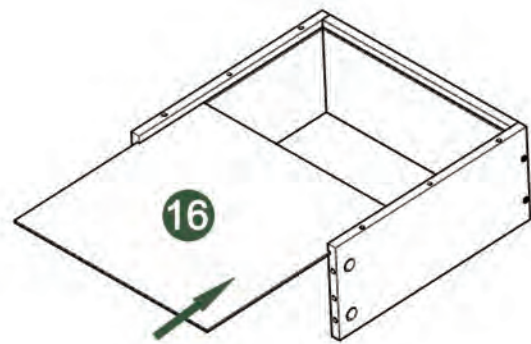


15(X2).

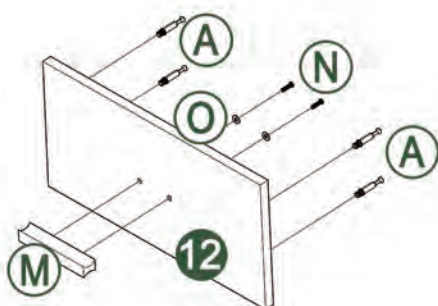

16(X2).

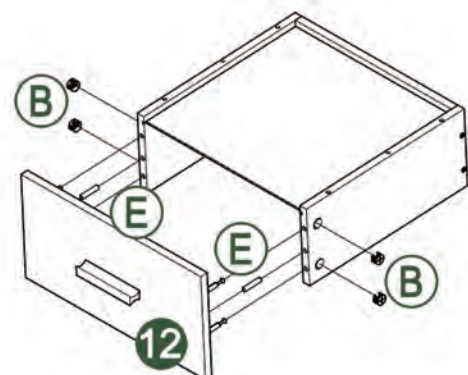


17(X2).

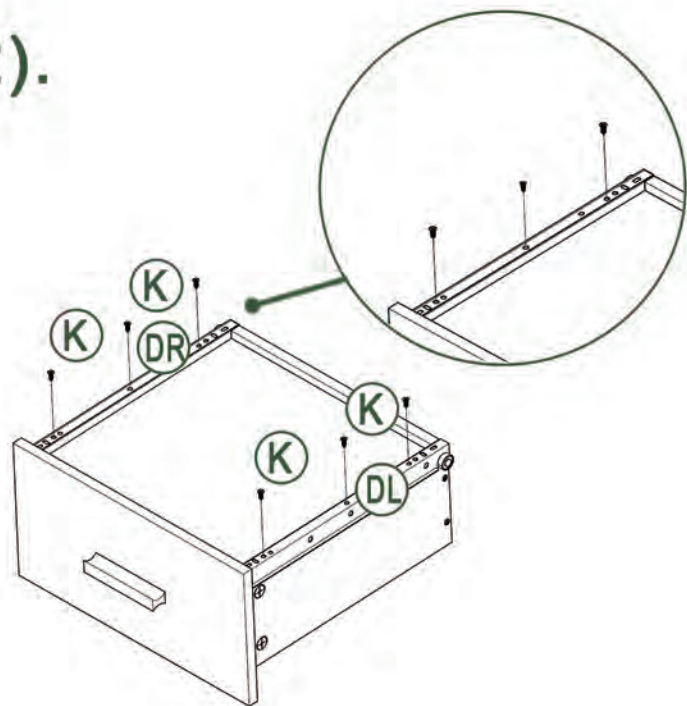


18.


SoBuy

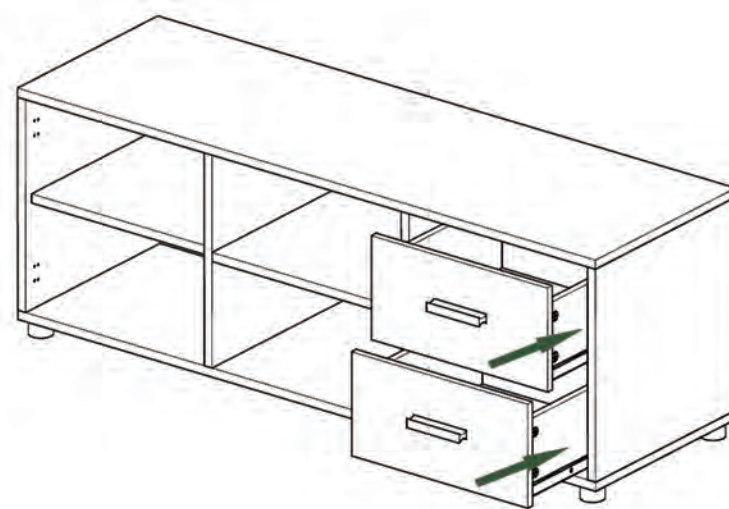

19.

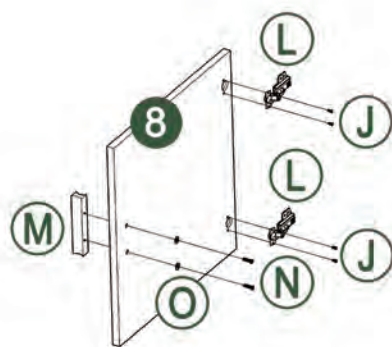

20.

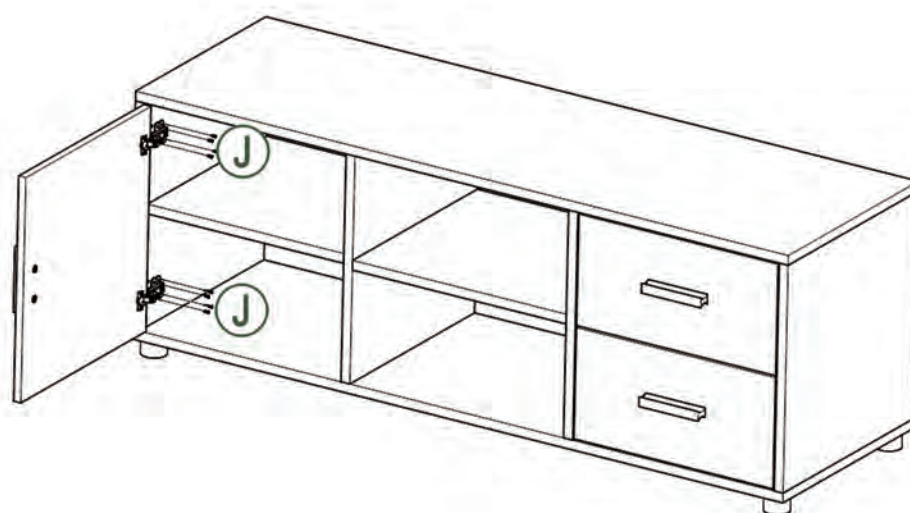

21.

