









# FSR144

2022-01




## SoBuy

TOOLS:


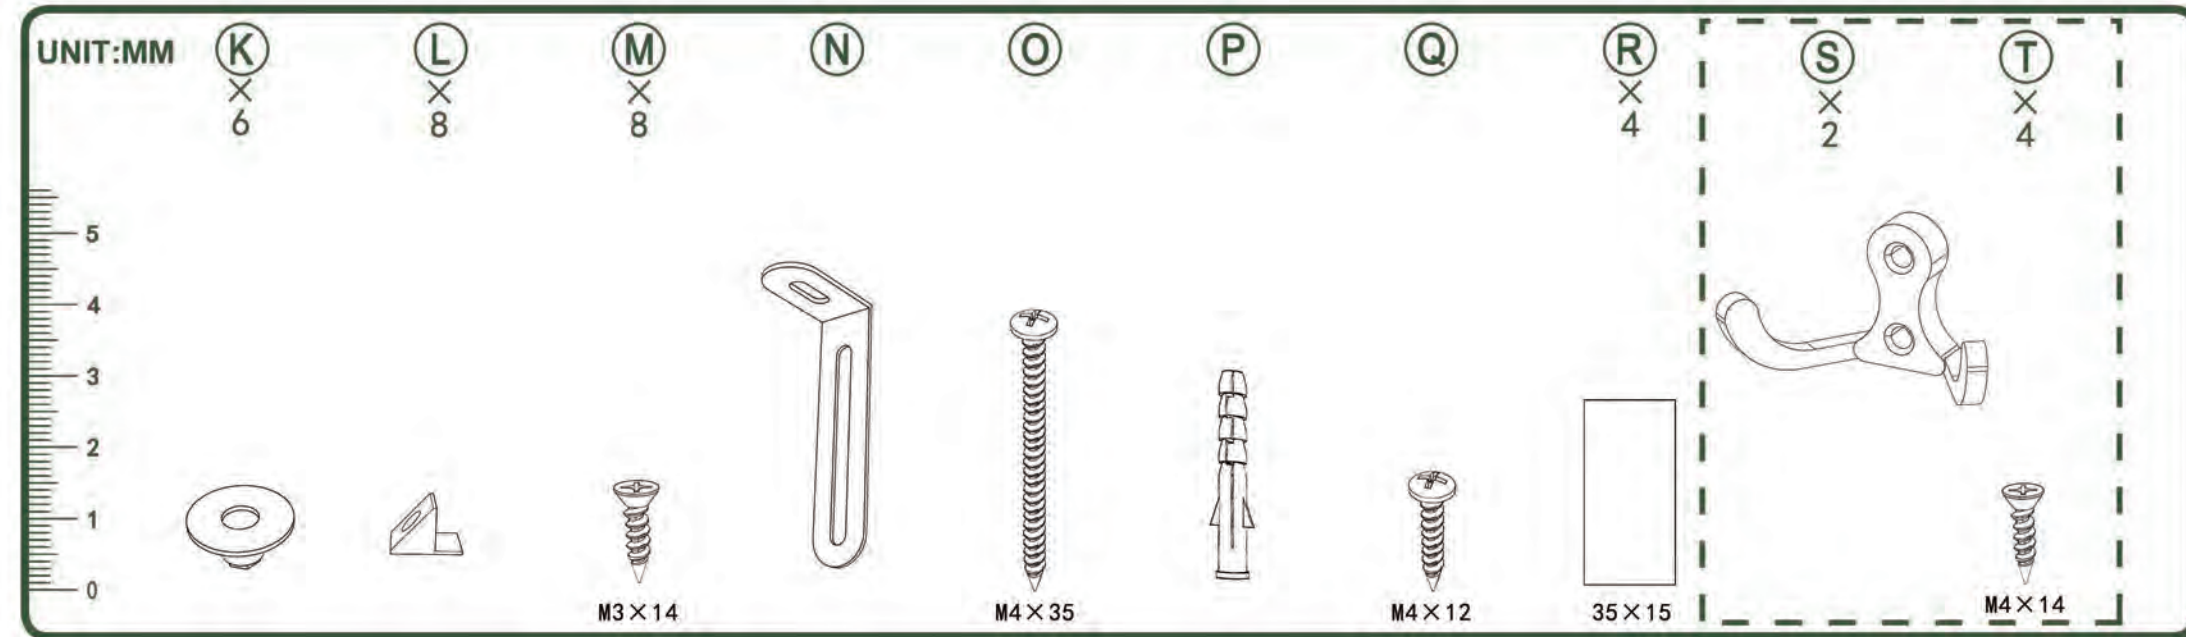
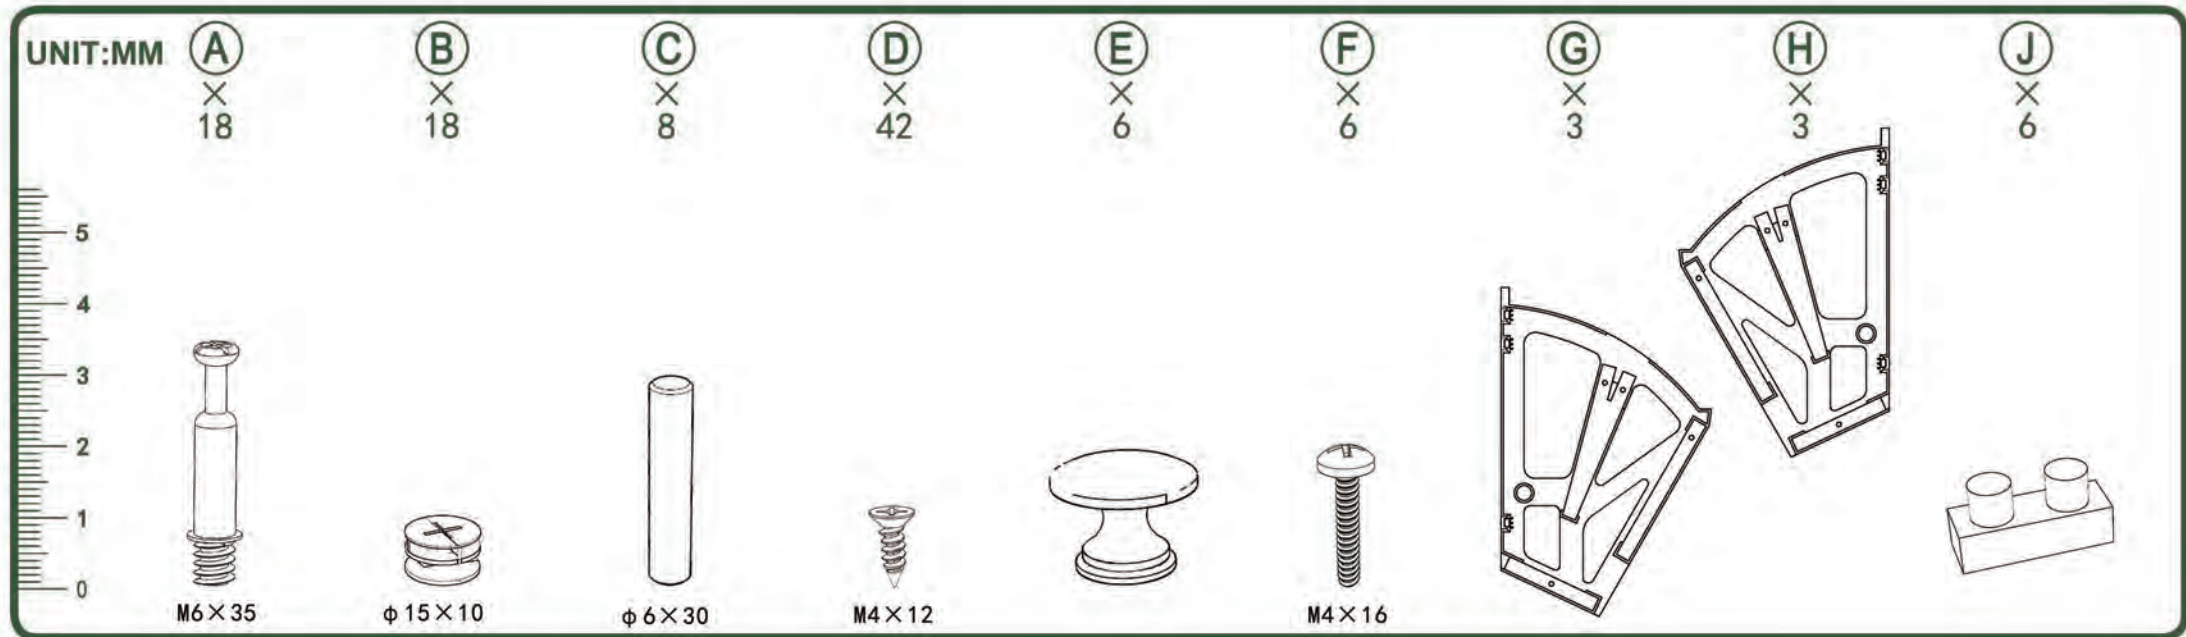
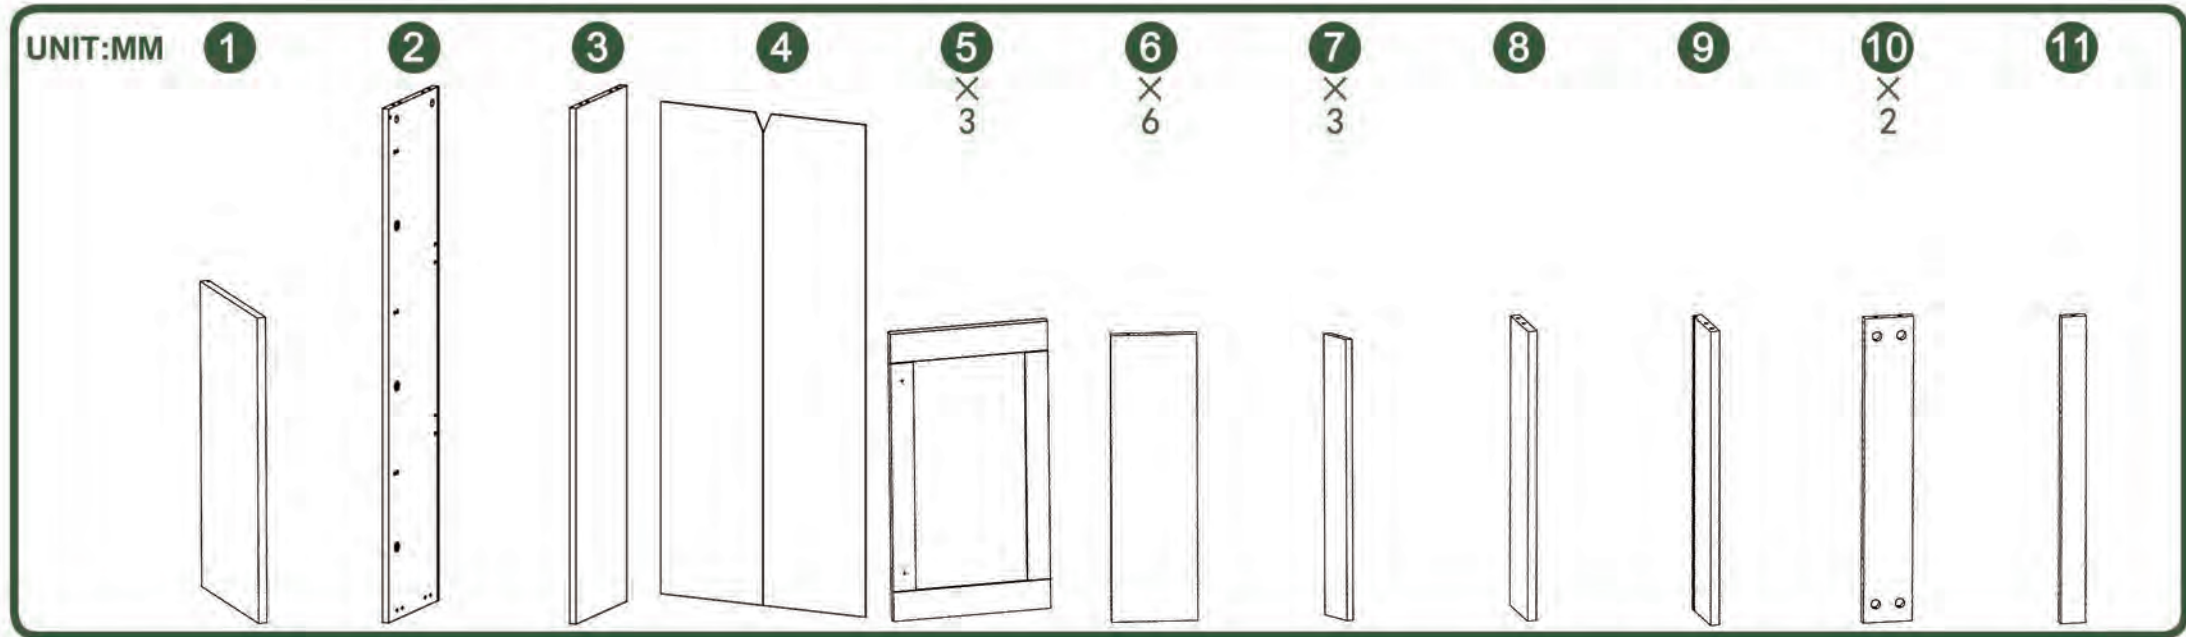
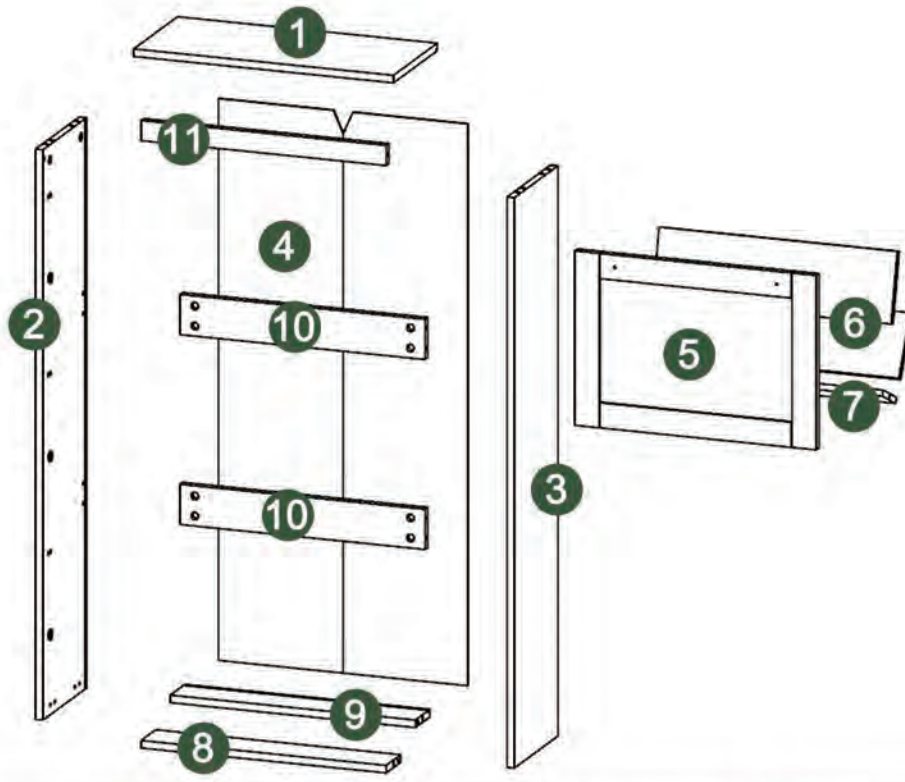
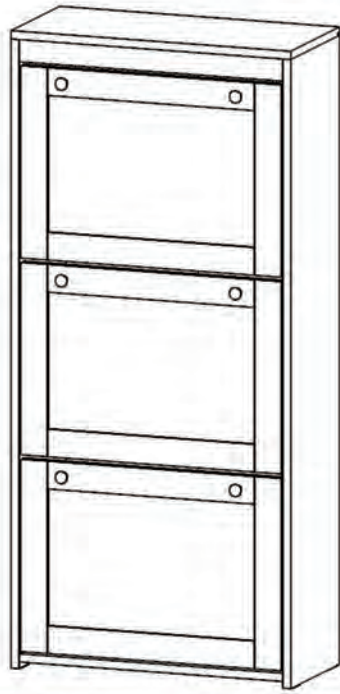
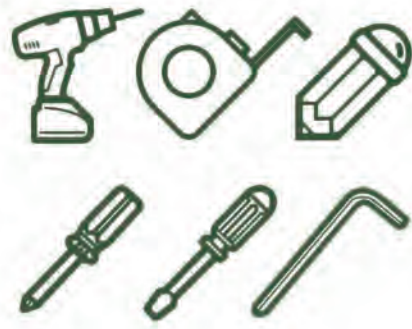










Stand:11.2022

BOLT INSTALLATION AS BELOW:

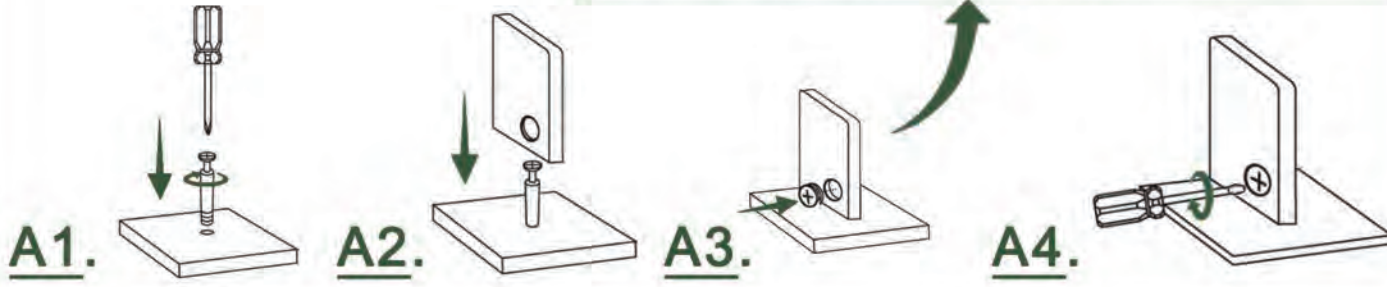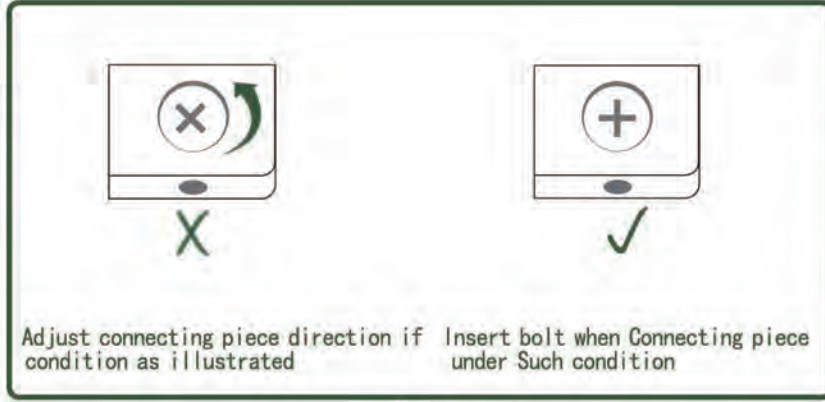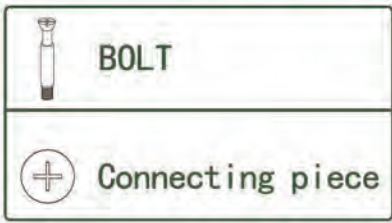


BACKPLATE BUCKLE INSTALLATION AS BELOW:

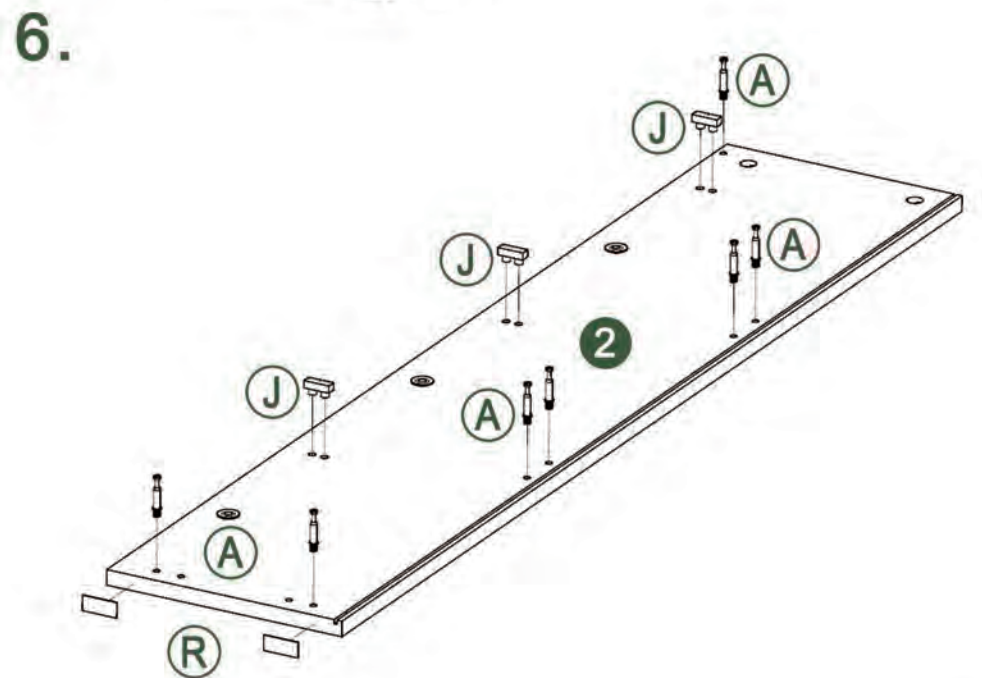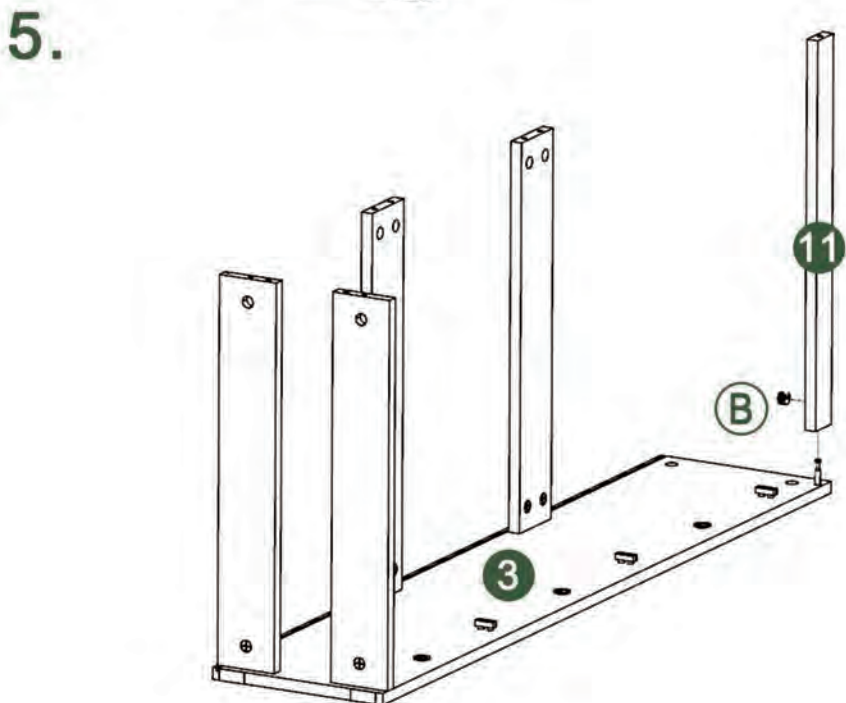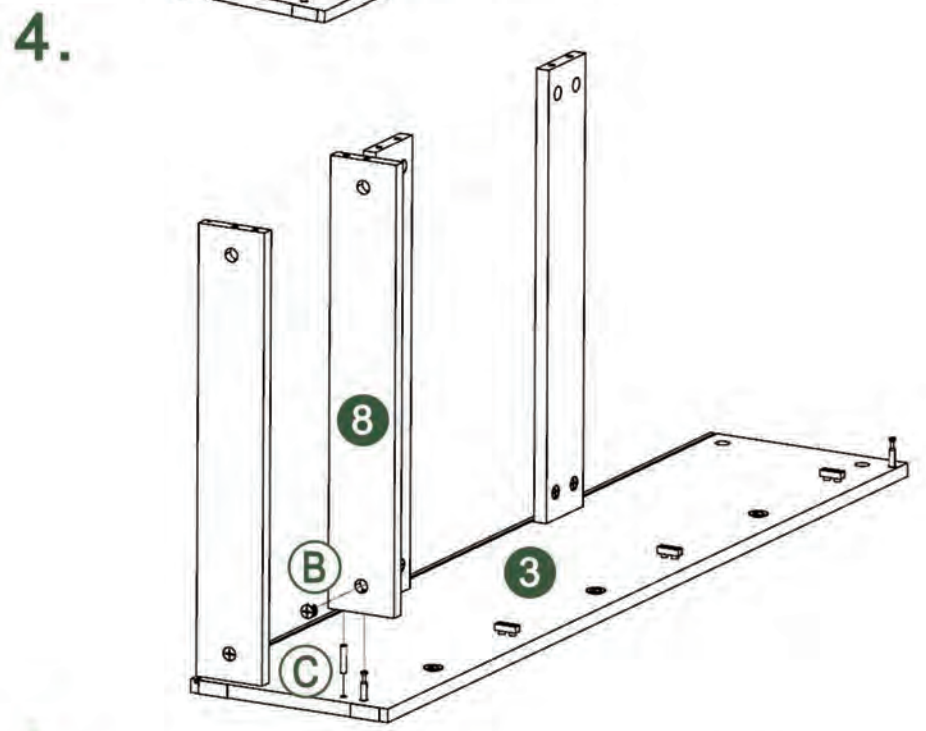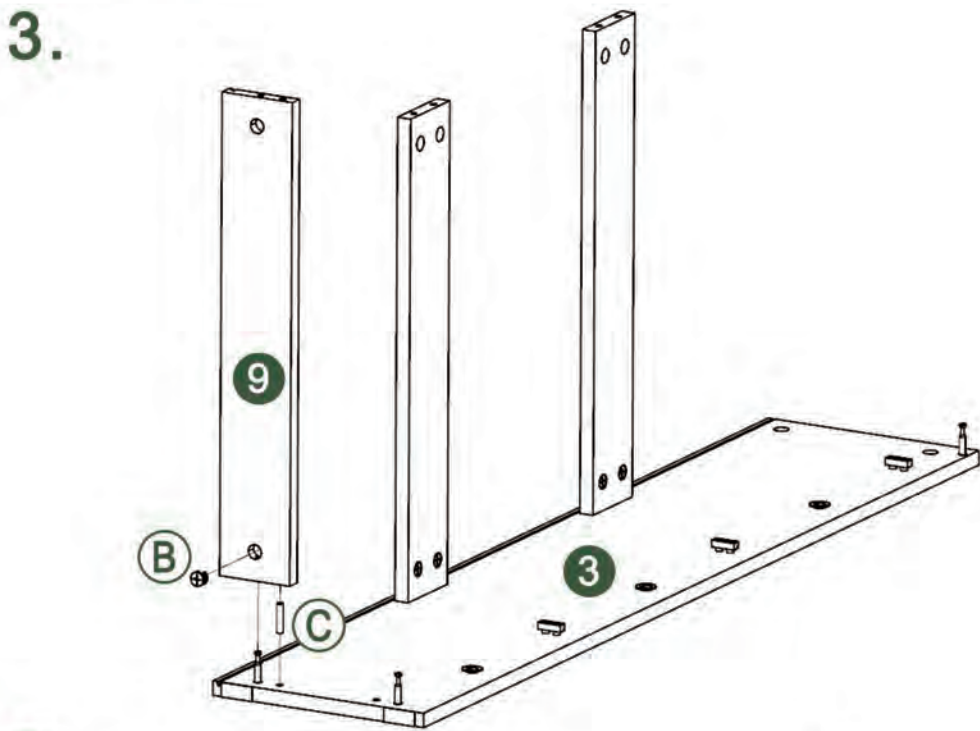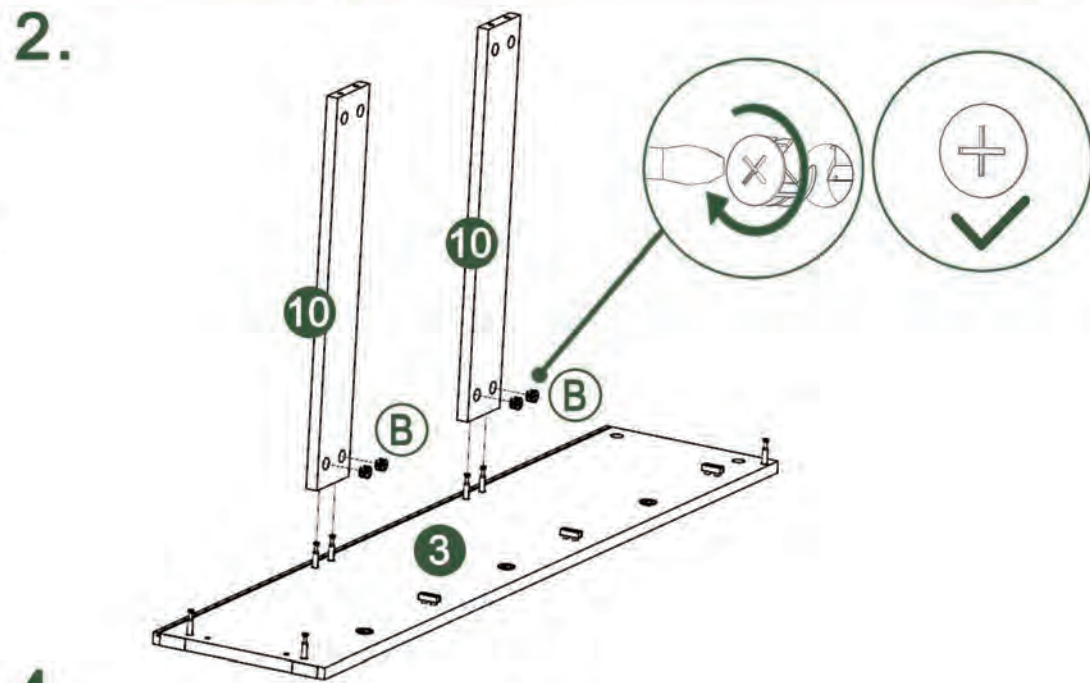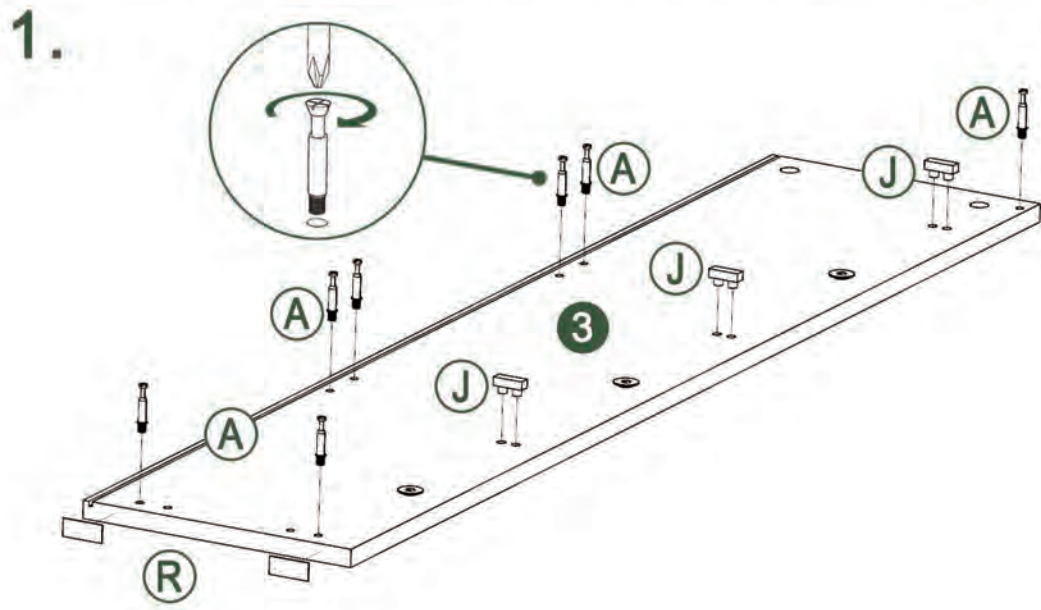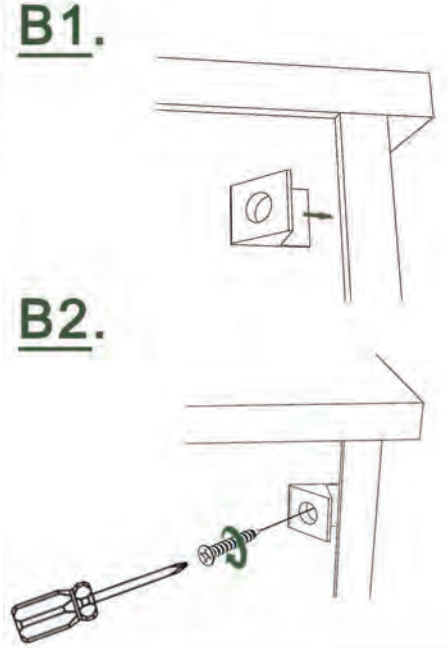


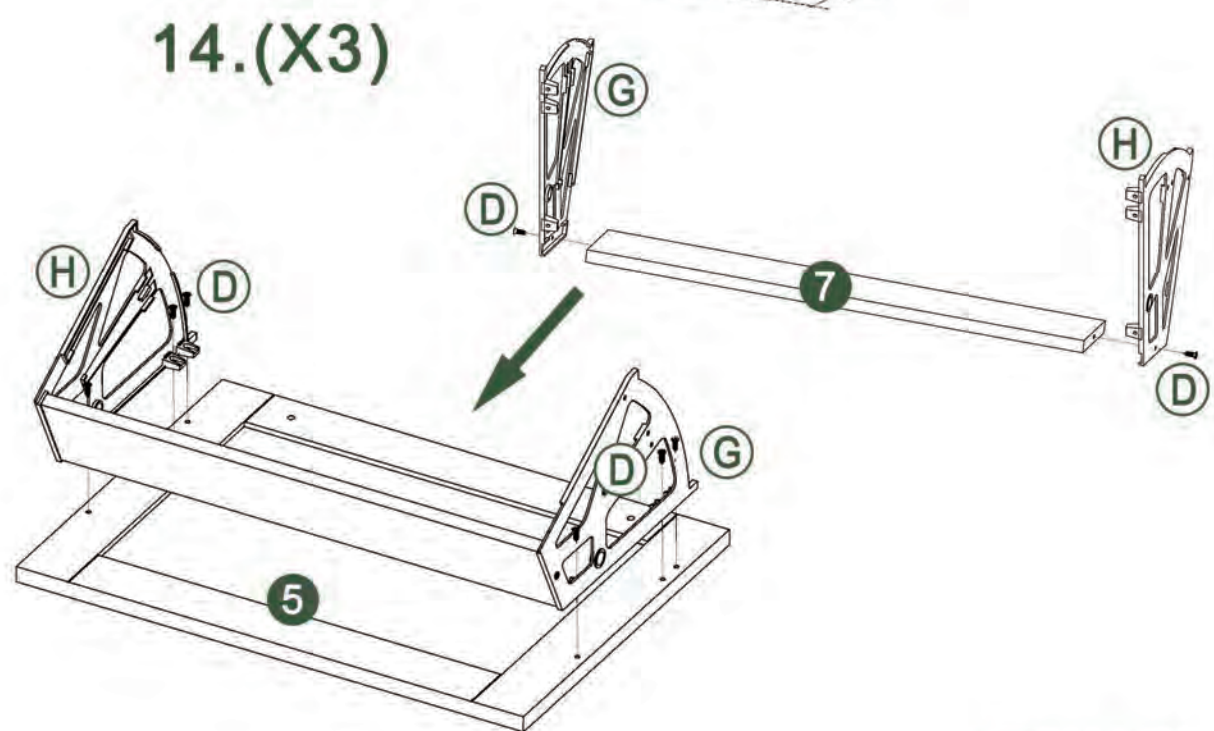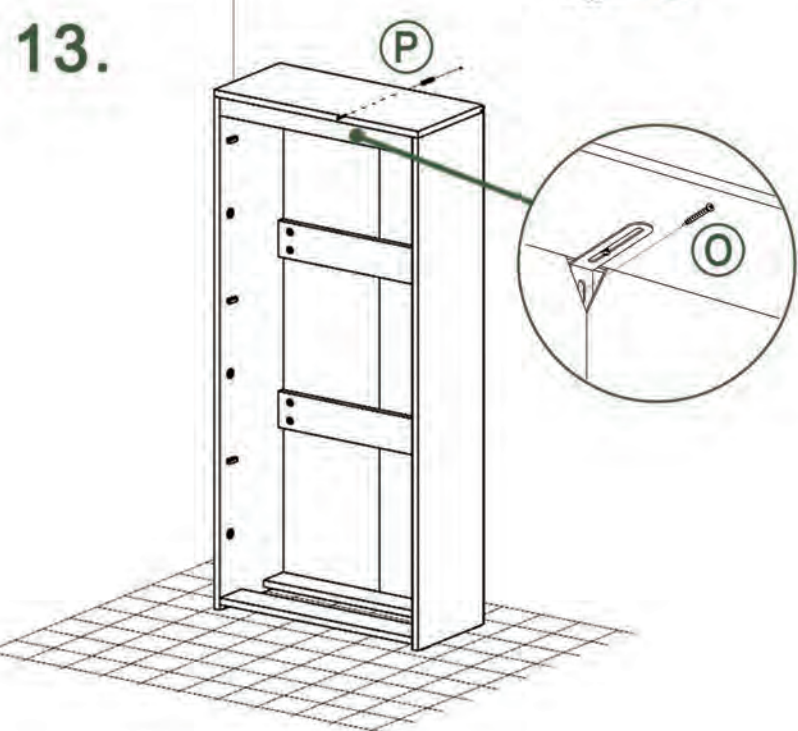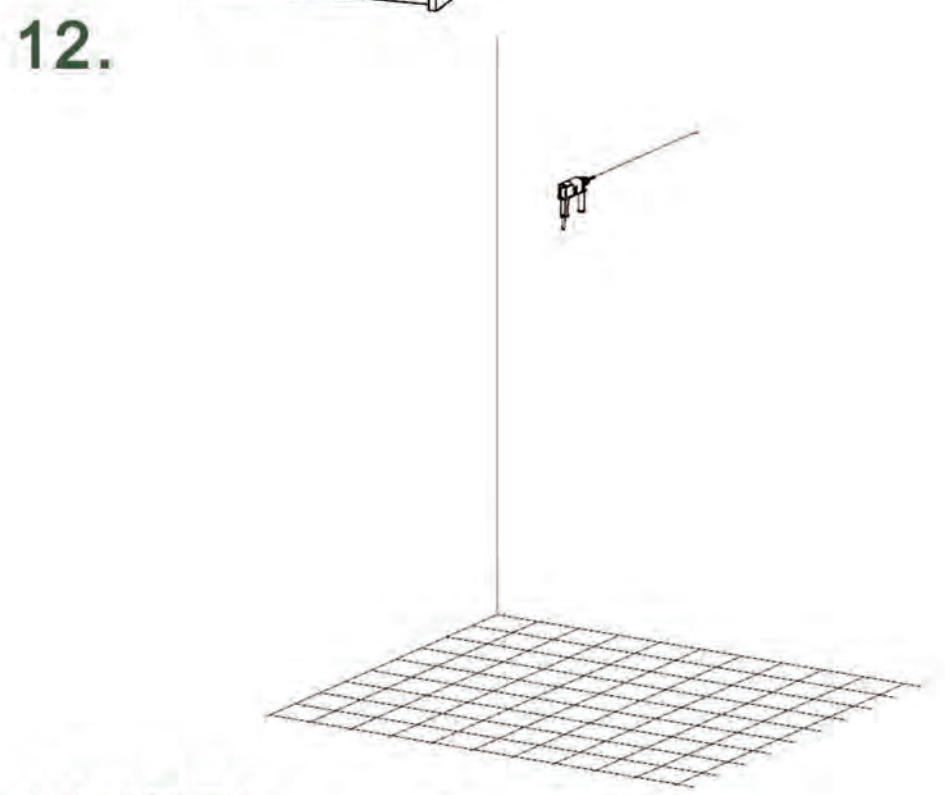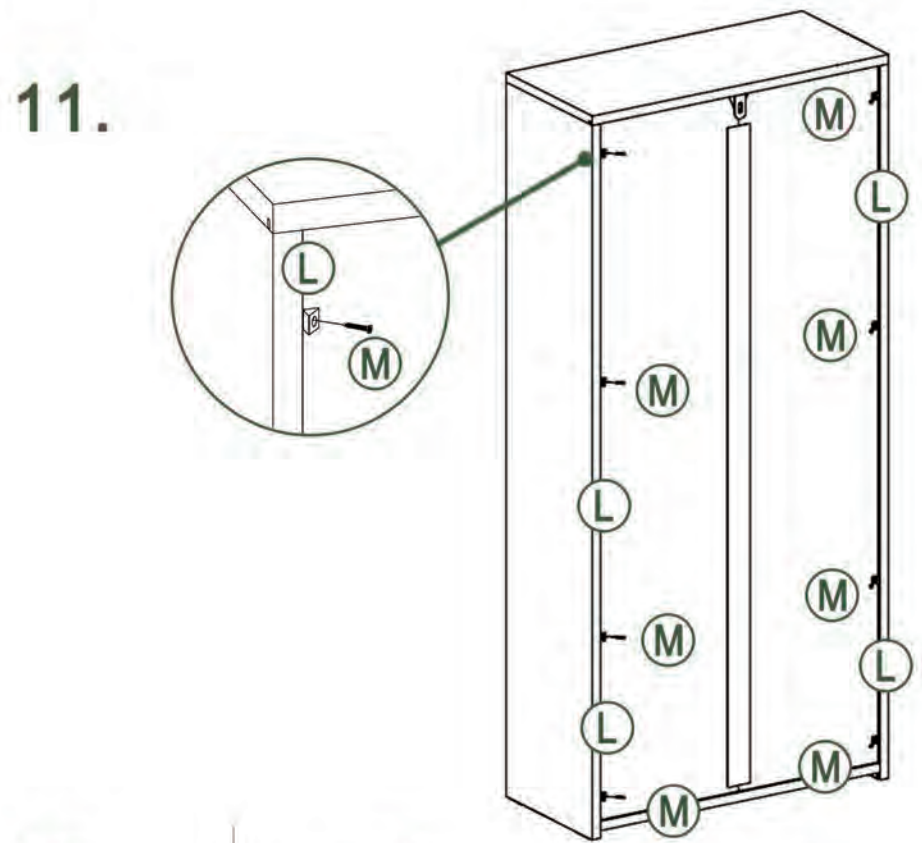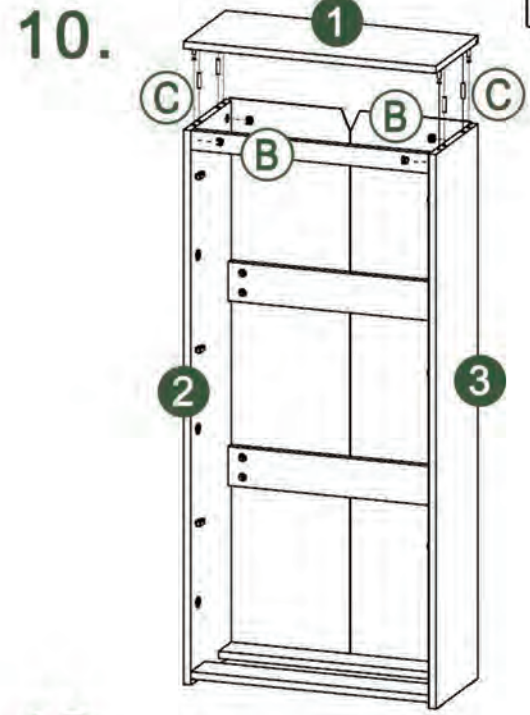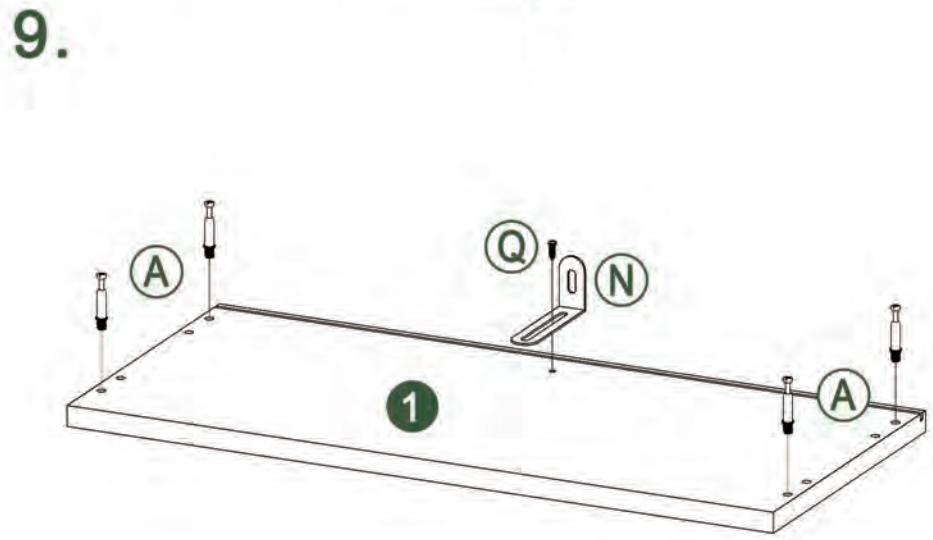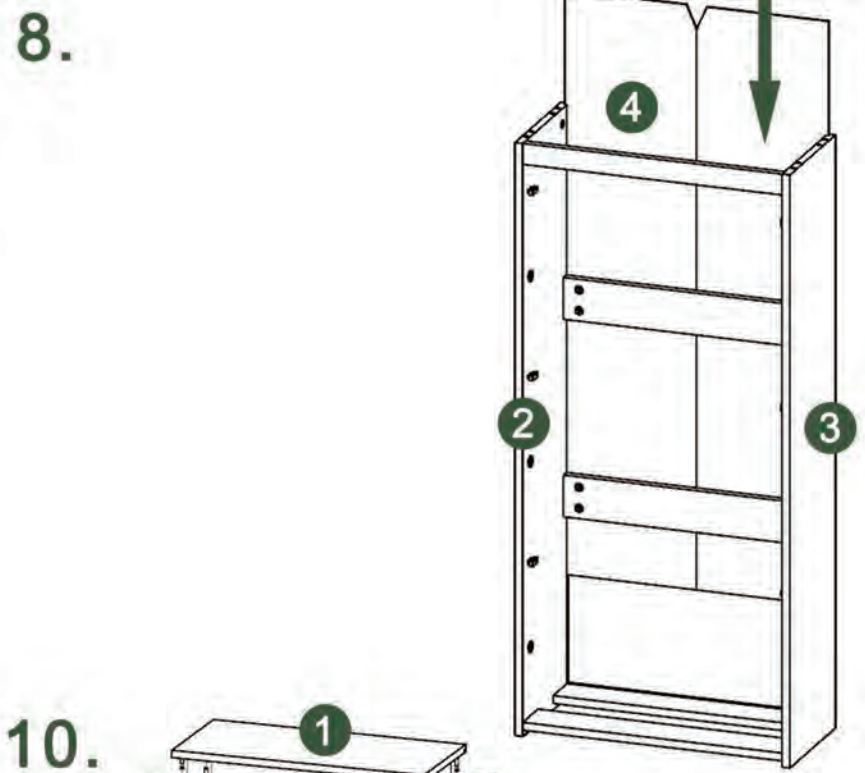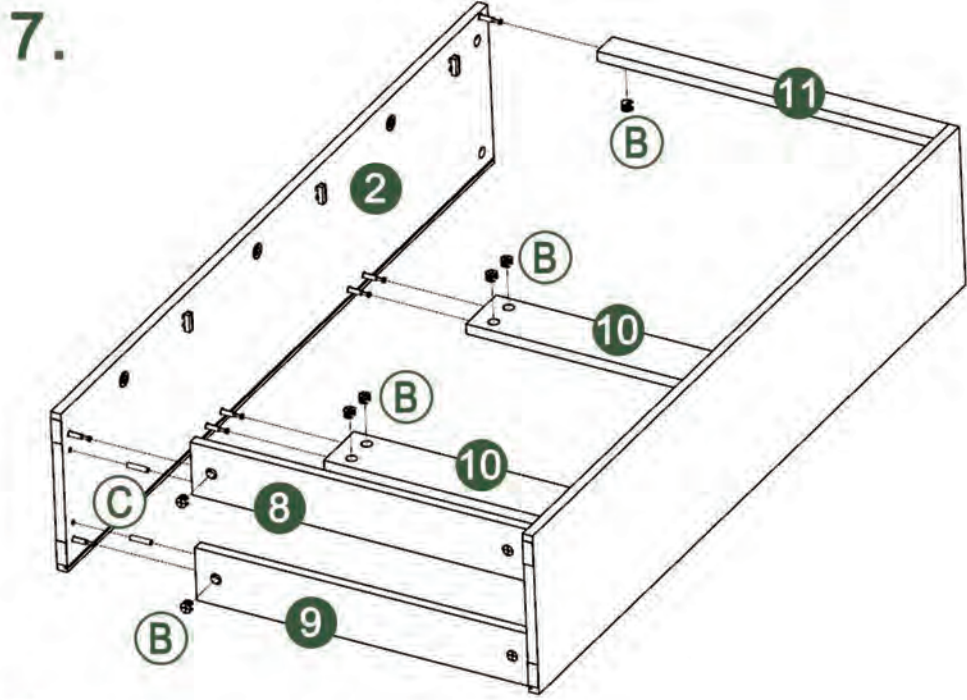


15.(X3)

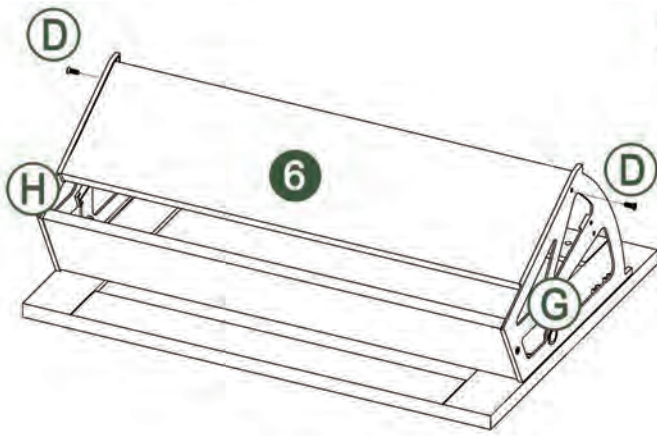


16.(X3)

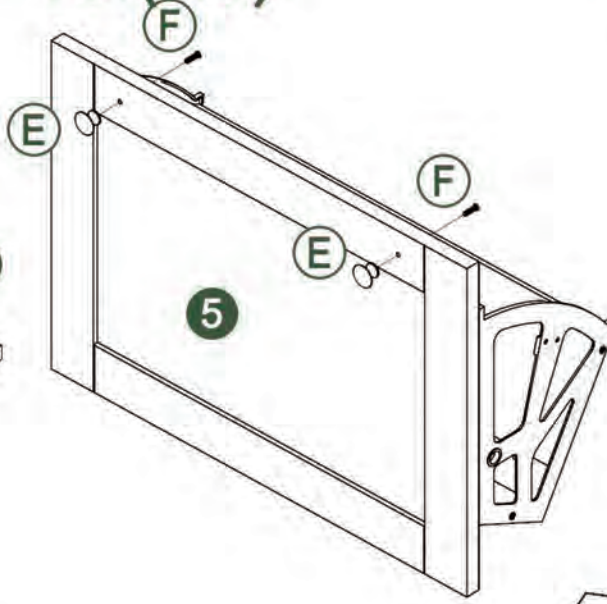


17.

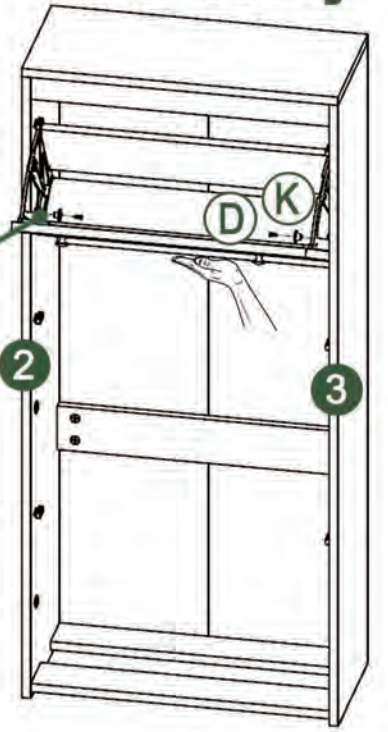


18.

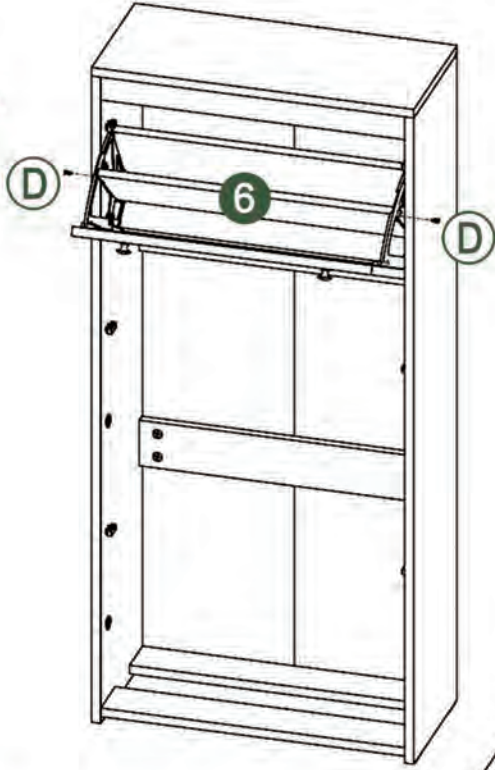


19.

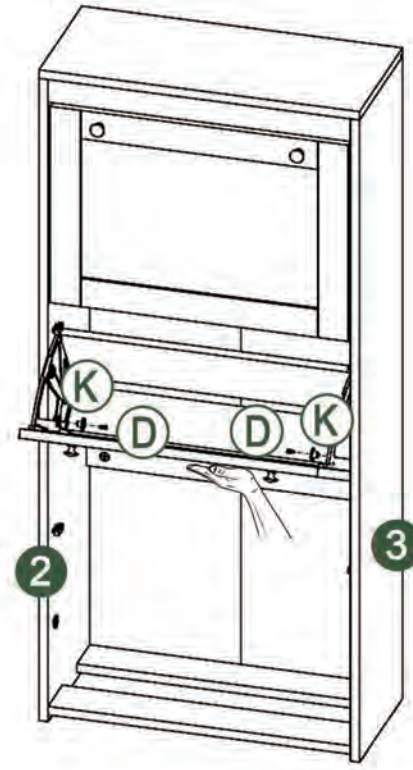


20.

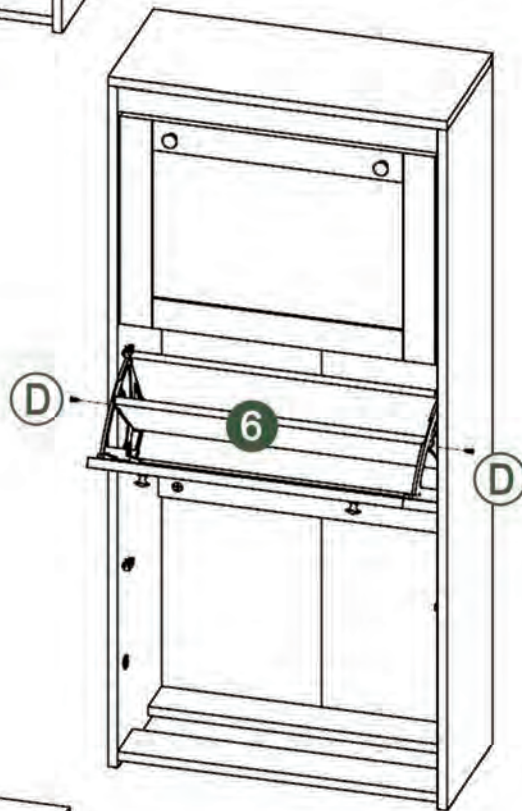

21.

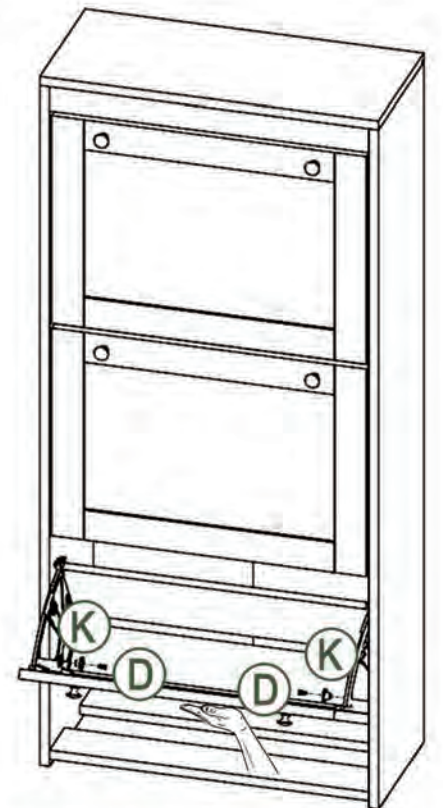

22.

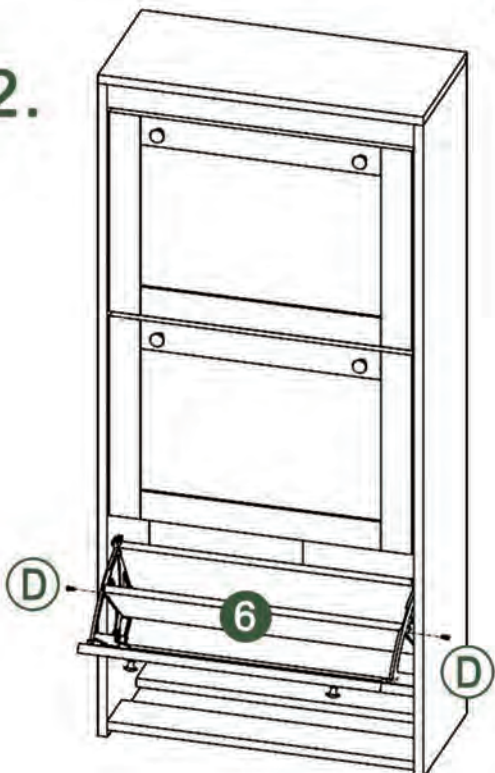

23.

