

200x141mm



Acoustic wall

Installation Instructions

How to install

There are three different options for installing

1. Gluing straight onto the wall:

A construction glue or grab adhesive is recommended for this.

2. Screwing directly into the wall:

Using black screws for the black backing option or silver or grey screws for the grey-backing, the panels can be screwed directly into the wall through the acoustic felt.

We recommend a minimum of 9 screws per panel at 600mm intervals across the width and 600mm intervals down the length of the panel.

If installing into ceilings, make sure they are screwed into ceiling joists.


Please make sure the correct fixings are used if going into plasterboard, for example.

Care and maintenance.


Slats wall panels are easy to clean and maintain. A fully recycled felt is used as the baseboard—individual slats made from veneered or decor-wrapped MDF. We recommend using a damp cloth for daily cleaning

without chemical detergents. You can also use hoover with a clean nozzle to dust off the surface between

the slats. In case of stains, use soap and water and clean with a soft cloth or a clean sponge.

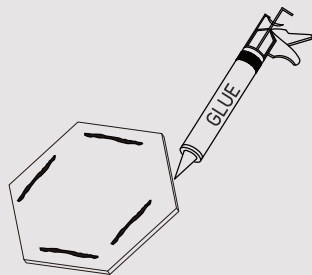

A. Screwing directly into the wall

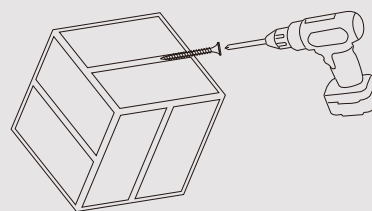

B. Gluing straight onto the wall